
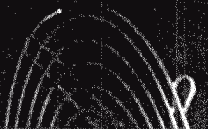


**WARNING**  
CAUTION: High Voltage  
Internal Components  
Do Not Touch  
When Power is On

TB 6

7000  
1000

7000  
ACTIVE  
8000




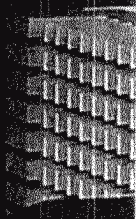


FILAMENT VOLTAGE

MAG. AVE. CURRENT



P/S CURRENT

P/S VOLTAGE

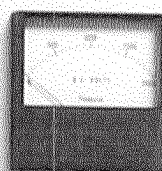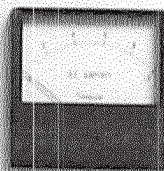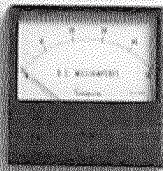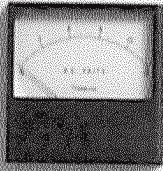

SYSTEM  
INPUT VOLTAGE

TRANSMITTER  
INPUT VOLTAGE

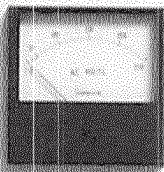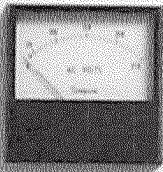

SYSTEM POWER



LOCAL



REMOTE

AC ON/STANDBY



OFF

HV ON/RADIATE



OFF

RESET



FAULT

AC ON

FIL. READY

HV RADIATE

MAG. AIRFLOW

CARD CAGE ACCESS

