



CENTER 5.66332GHz
RBW 300kHz VBW 300kHz
SPAN 20.00MHz
*SWP 2.00sec

.4 usec PW

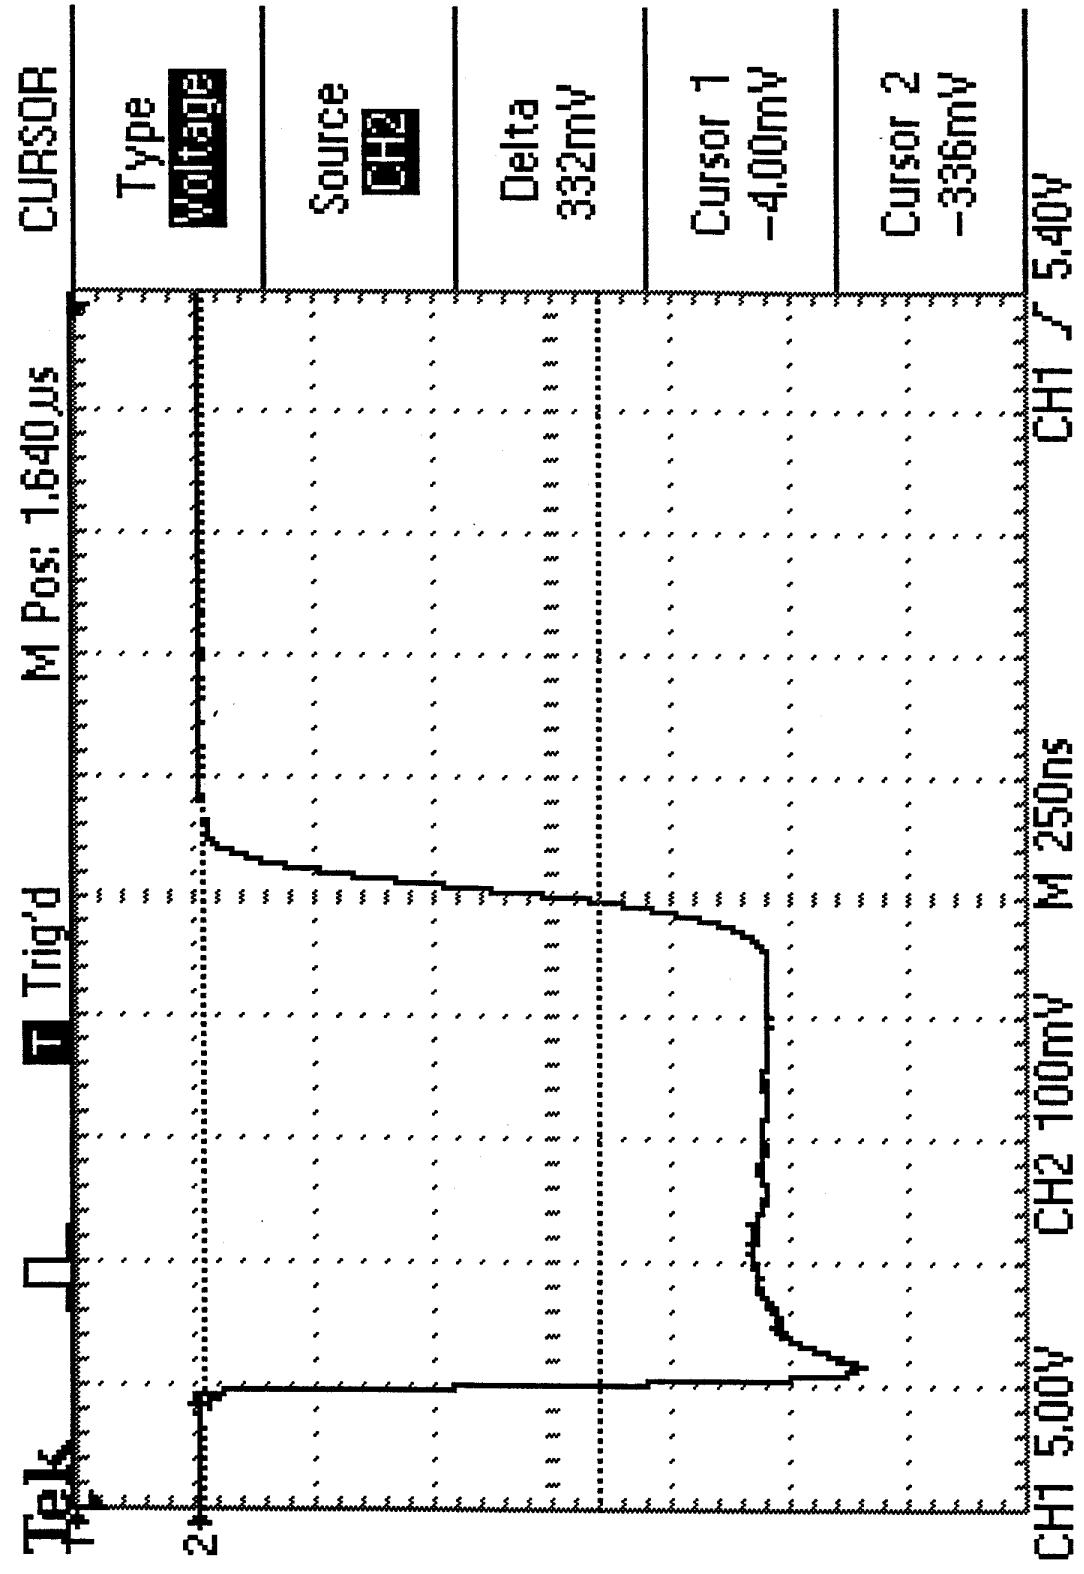


ATTEN 10dB
RL 0dB

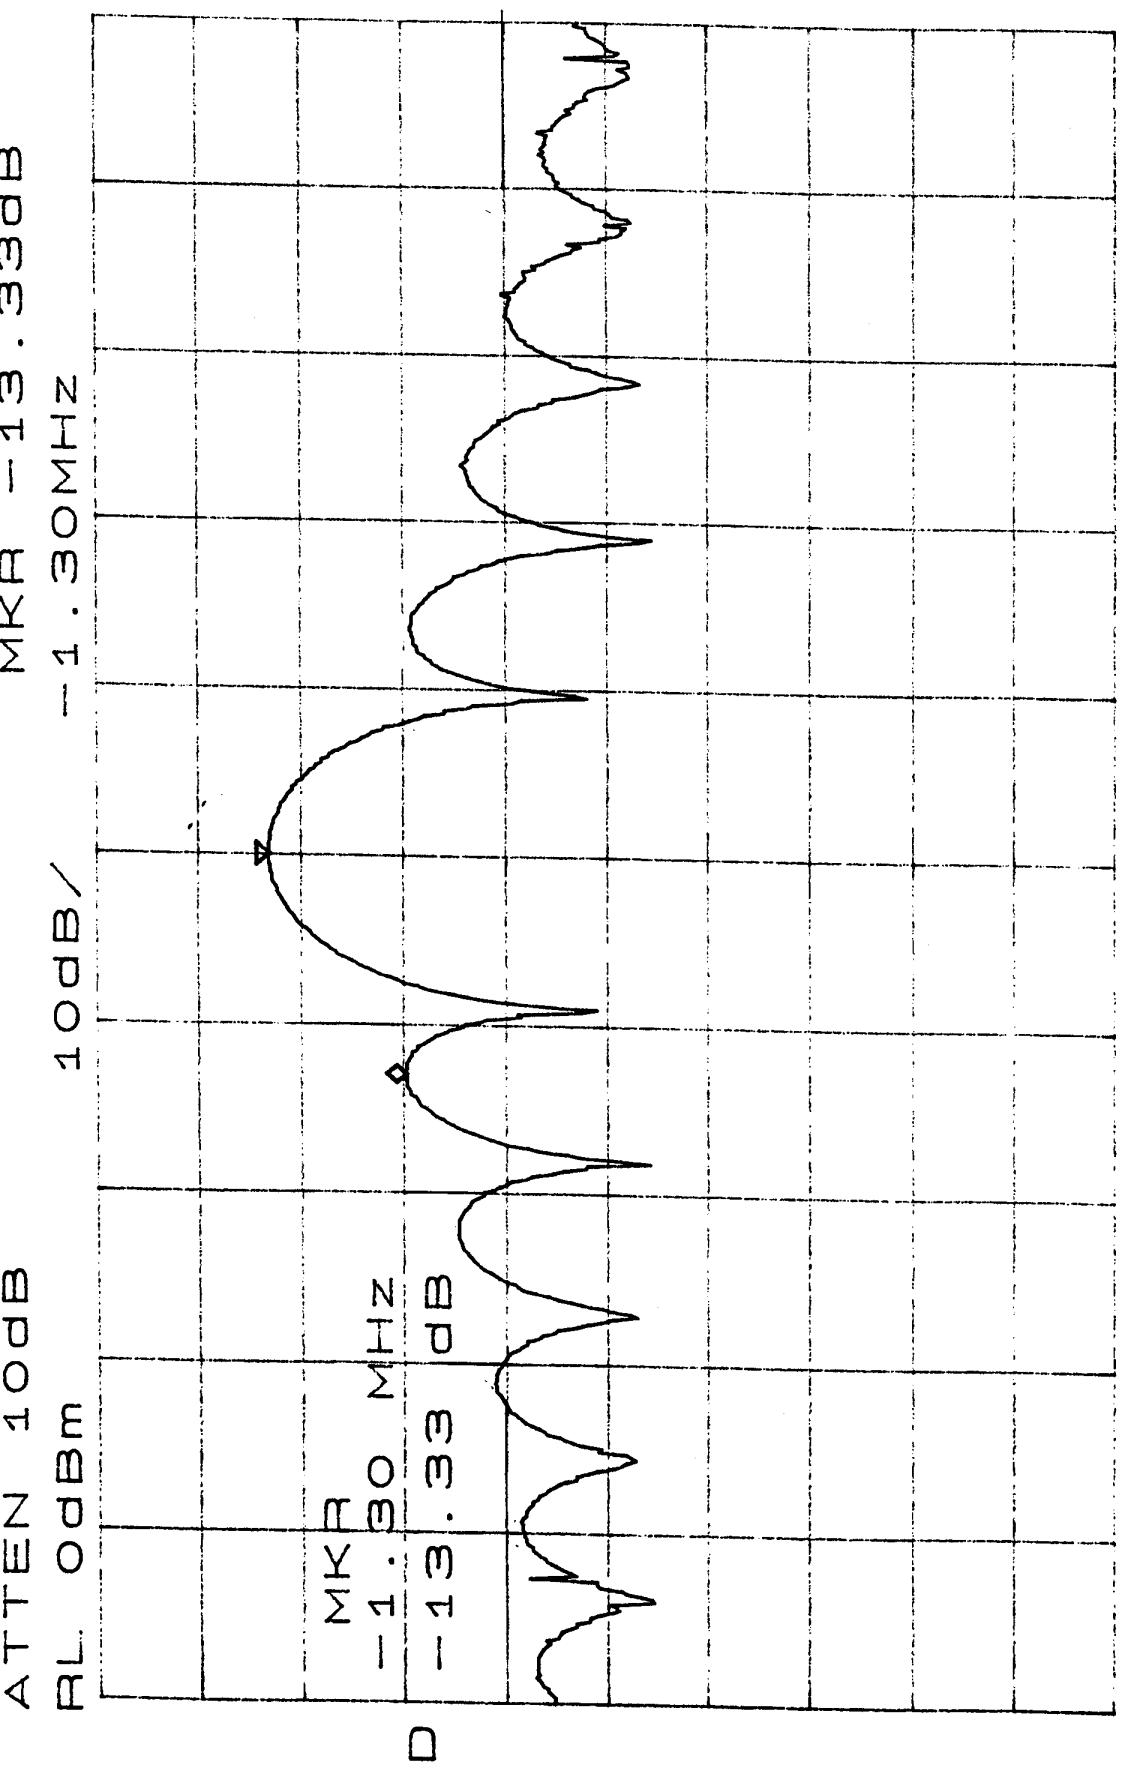


CENTER 5.59633GHz *RBW 30kHz *VBW 30kHz *SWP 2.00sec 1.0 usec PW

SPAN 10.00MHz

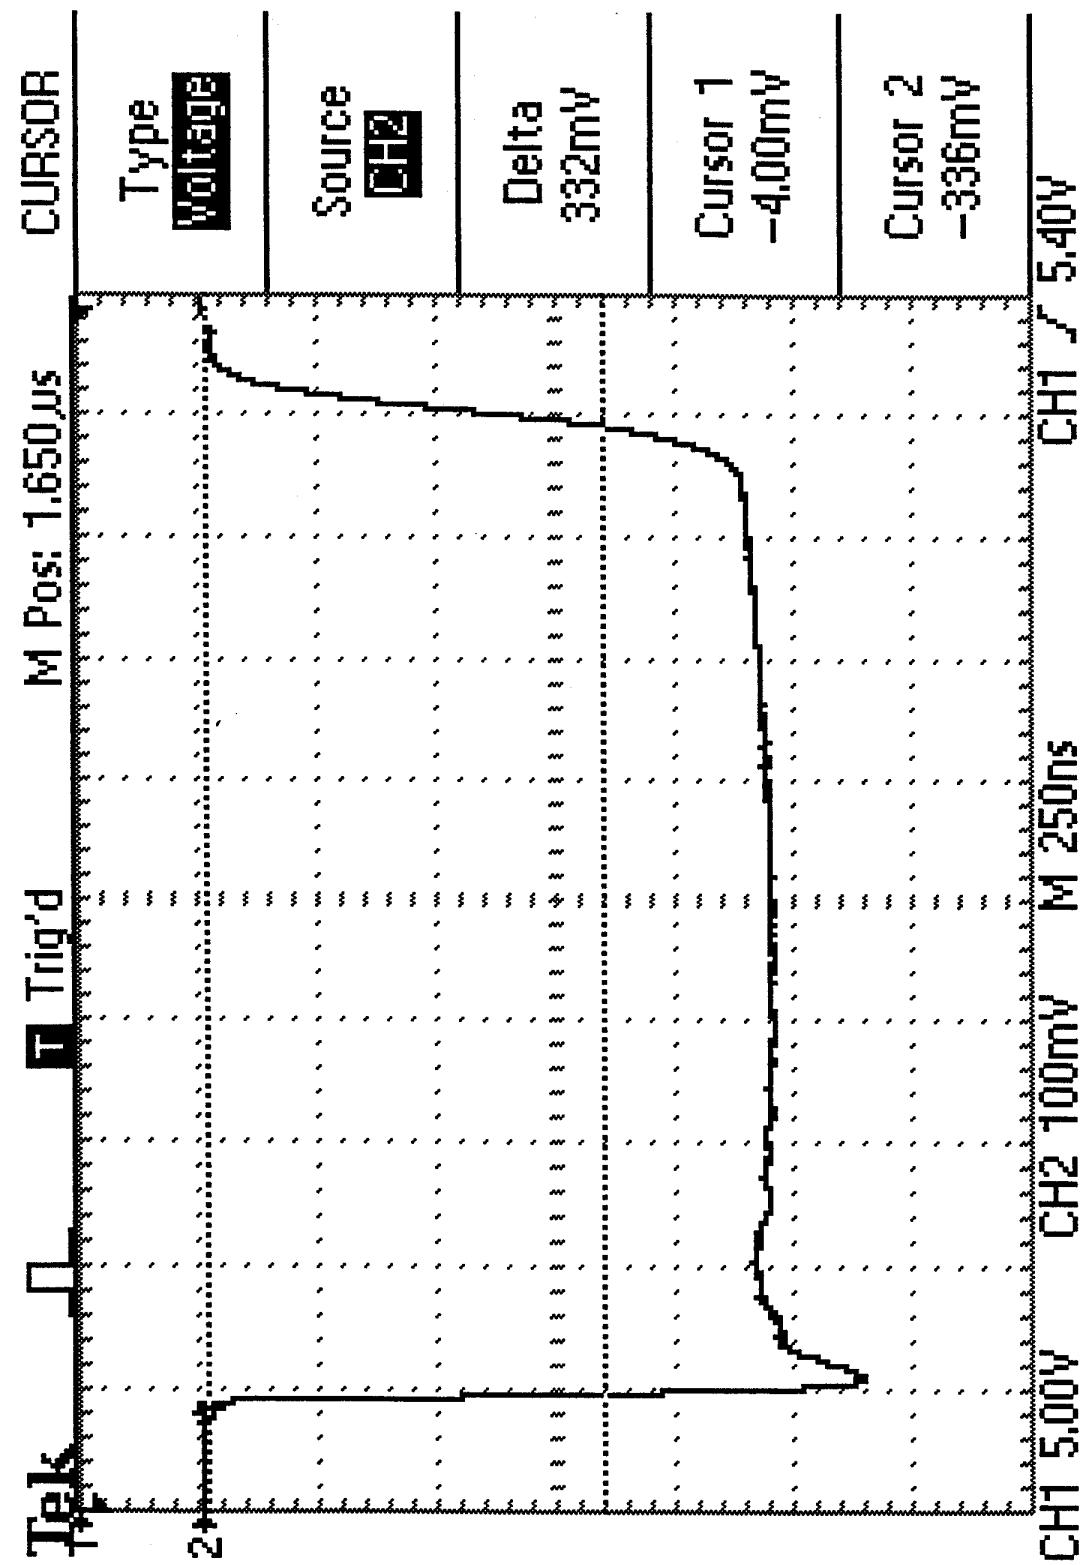

Use VERTICAL POSITION knobs to move cursors

ATTEN 20dB
RL 10.0dBm 10dB /

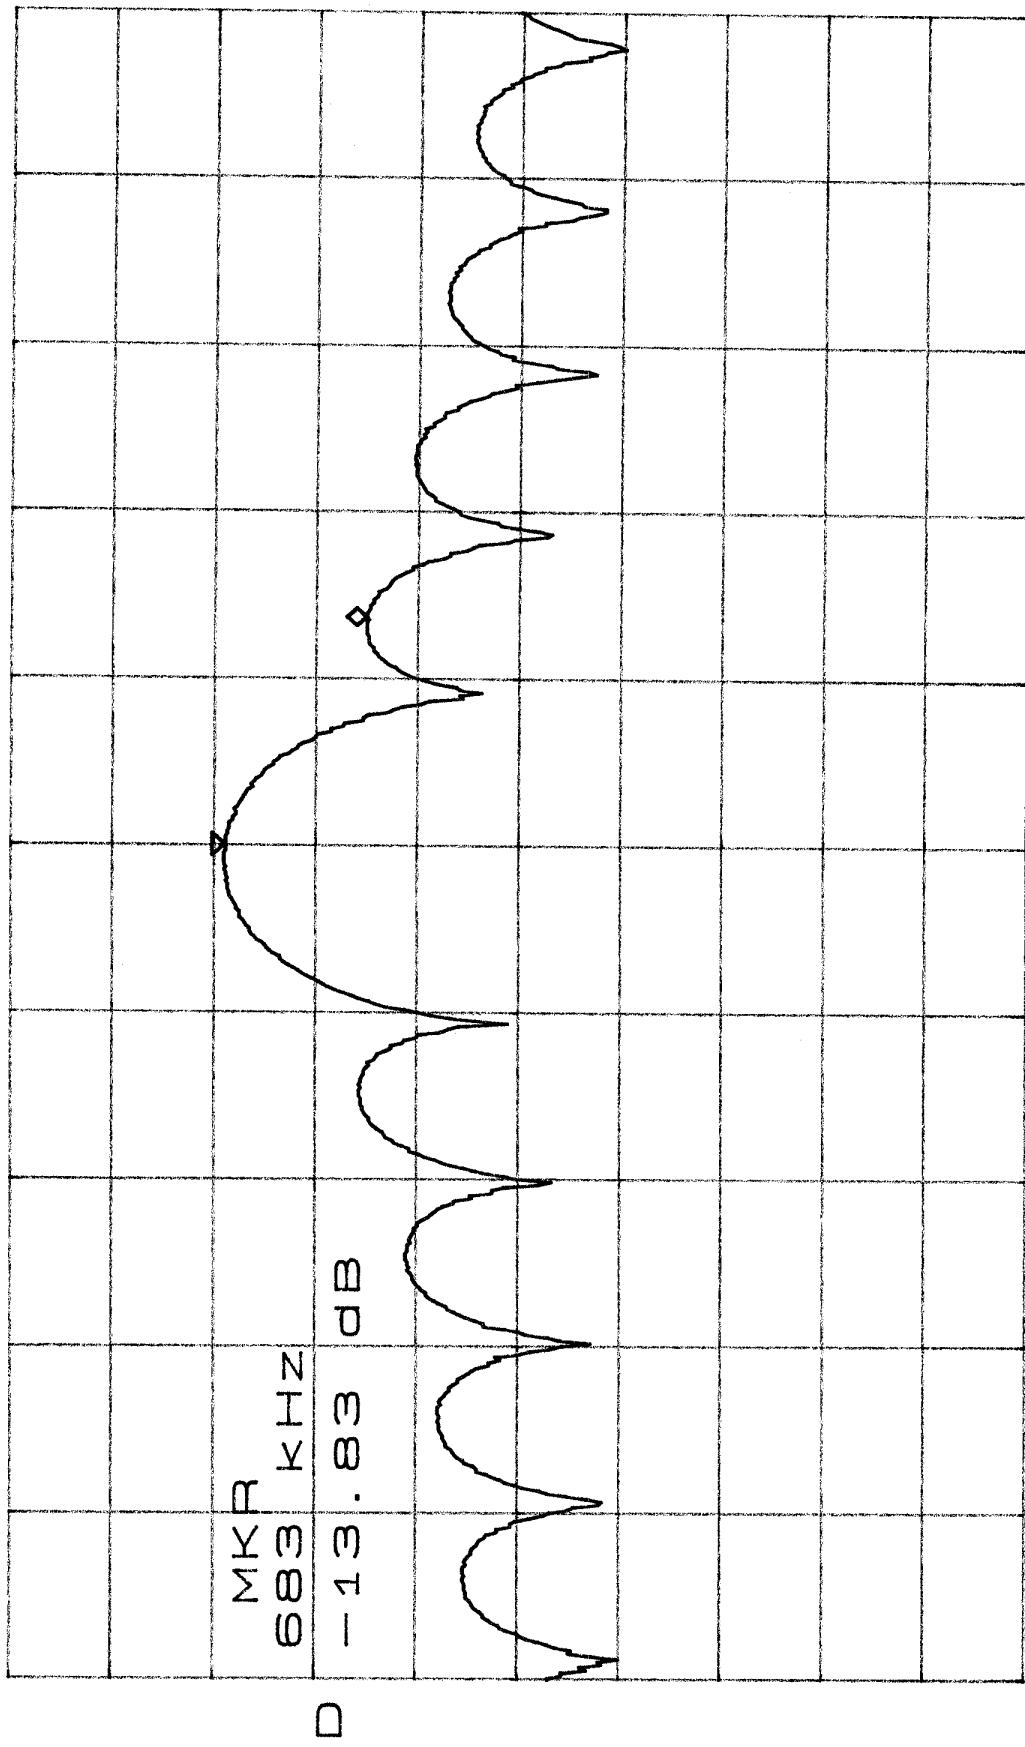

CENTER 5.596717GHz
*RBW 30kHz *VBW 30kHz
SPAN 5.000MHz
*SWP 2.00sec
2.0 usec PW