



**History:**  
V01 (FM) : for production, based on brief «C23100US\_KDUS brief 230612.pptx»



We need you to provide us with your email address when activating your KURIO tablet and keep your email address up to date via the Parental Area to be informed of important updates and information. Your email address will never be shared with any third parties and you can unsubscribe at any time by clicking on the link provided at the bottom of every KURIO email. To read our Privacy Policy at any time, please go to [www.kurioworld.com](http://www.kurioworld.com).

 **WARNING!** Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

The content and colors of this package may vary slightly from the photographs.  
For more information about KURIÖ, please go to [www.kurioworld.com](http://www.kurioworld.com) or contact

 
**Jumbodiset**

**Diset, S.A.**  
Calle C, nº 3, Sector B, Zona  
Franca,  
08060 Barcelona  
España

**KIDS DELIGHT, LTD.**  
1431 Opus Place Suite 1  
Downers Grove  
Illinois  
IL 60515  
United States of America



C23100US1\_KDUS\_AW\_UM\_02\_003\_23080



- While using some applications that use a lot of the device's processing capacity, the device may become warm. This is normal and should not affect performance.
- Keep the unit cool by wiping it with a slightly damp cloth.
- The Kurofito burner protects your tablet from dust, but is only intended to make the product look clean. It does not damage dust. If you want to clean the device, use a soft, dry cloth. Kurofito is fragile and despite the presence of the protective bumper, can break or be damaged from force like dropping, banging, or being hit by other things. Please handle with care.
- Do not touch the screen and touch pads are not covered by the warranty, and no bumper can prevent scratches.
- Do not damage or deform the power supply USB cord. If it is damaged or deformed, it may cause a fire or electric malfunction. Do not pull it out by pulling from wall outlet, be sure to remove by holding the plug attachment and not by pulling the cord.
- The power adapter & cord should be plugged in near the unit, so it is easily accessible and does not get in the way.