











Picture's of Reader RF350R





Detailed pictures of plug for signal interface and power supply



Detailed pictures of plug for external antenna



This special linkage(with inlying winding) should not allowed to connect antenna of other manufacturer or distributor. It is a very strength connection. This plug(male) has to be screwed in and therefore it is also not easy to disconnect.

