 


COBY®

CSMP95

2.4GHz DIGITAL WIRELESS SOUNDBAR SYSTEM

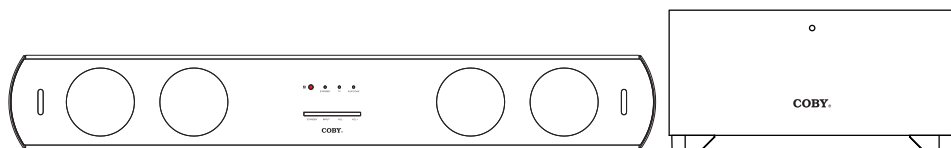

OWNER`S MANUAL

Read this manual carefully to get the best performance from 2.1 System

WARNINGS AND PRECAUTIONS

WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

WARNING:

To reduce the risk of electric shock, do not remove cover (or back).



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC STATEMENT

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INSTRUCTIONS

Caution: Please read carefully all the following important safeguards to ensure safe operation.

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus, combination to avoid injury from tip-over.



IMPORTANT SAFETY INSTRUCTIONS


- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. WARNING: The mains plug (appliance coupler) is used as disconnect device, the disconnect device shall remain readily operable.
- 16. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- 17. No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 18. Label marking is located at the bottom of the apparatus.
- 19. ☐ This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

PARTS LIST

Contents:


- Remote Control	x 1	- Screw	x 8
- Wall mounting brackets	x 2	- Wall mounting screw	x 2
- RCA to RCA	x 1	- RCA to 3.5mm	x 1
- Coaxial Cable	x 1	- Assembling bolt	x 8
- User's Manual	x 1	- Installation Guide	x 1

 FRONT PANEL - CONTROLS AND FUNCTIONS


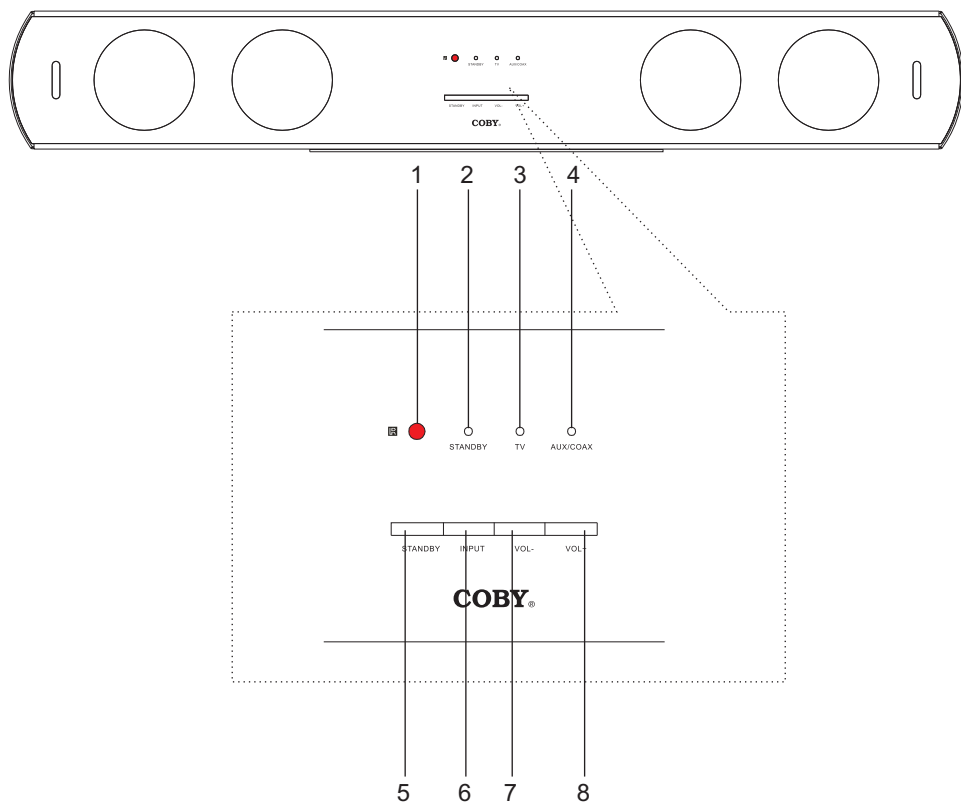


1. Remote Sensor.
2. STANDBY: Standby Input Indicator.
3. TV: TV Input Indicator.
4. AUX/COAX: AUX and Coaxial Input Indicator.
5. STANDBY: Power Standby Button.
6. INPUT: Input Selection Button.
7. VOL-: Volume Downward Adjustment Button.
8. VOL+: Volume Upward Adjustment Button.

 REAR PANEL - CONTROLS AND FUNCTIONS

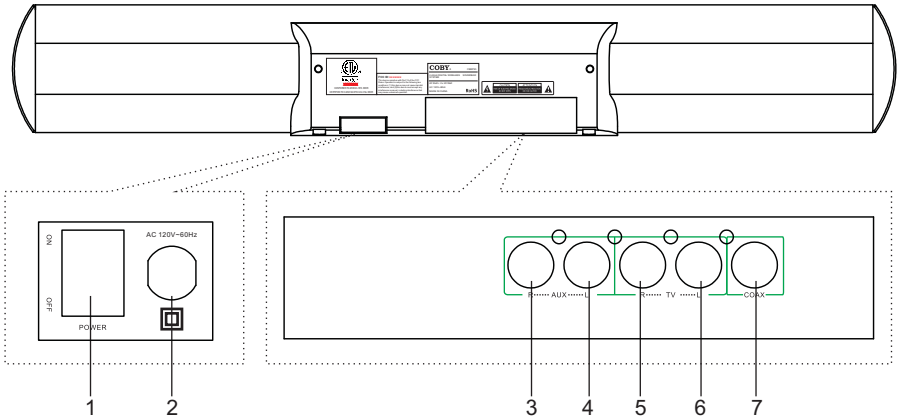

  - 1.Power On/Off Switch.(Soundbar)
- 2.AC Power Cord.(Soundbar)
- 3.AUX Stereo Right Audio Input.
- 4.AUX Stereo Left Audio Input.
- 5.TV Stereo Right Audio Input.
- 6.TV Stereo Left Audio Input.
- 7.Coaxial Audio Input.

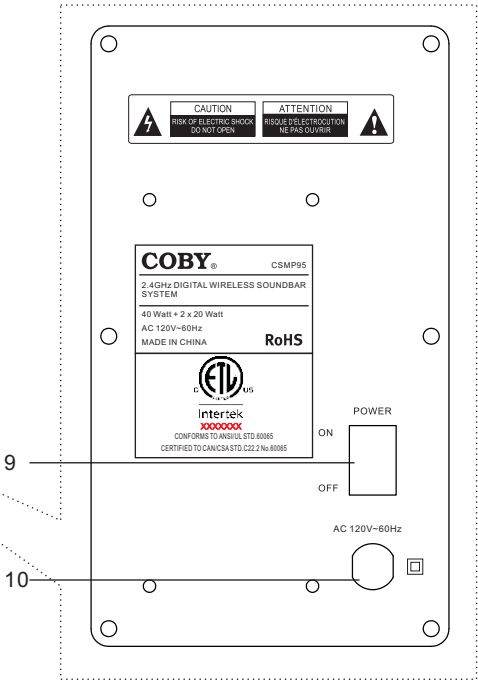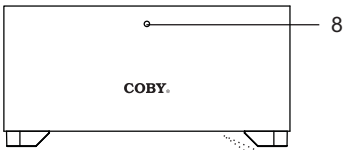


REAR PANEL - CONTROLS AND FUNCTIONS

8.STANDBY:Subwoofer Standby Input Indicator.


9.Power On/Off Switch.(Subwoofer)

10. AC Power Cord.(Subwoofer)

 SYSTEM CONNECTION INSTRUCTIONS

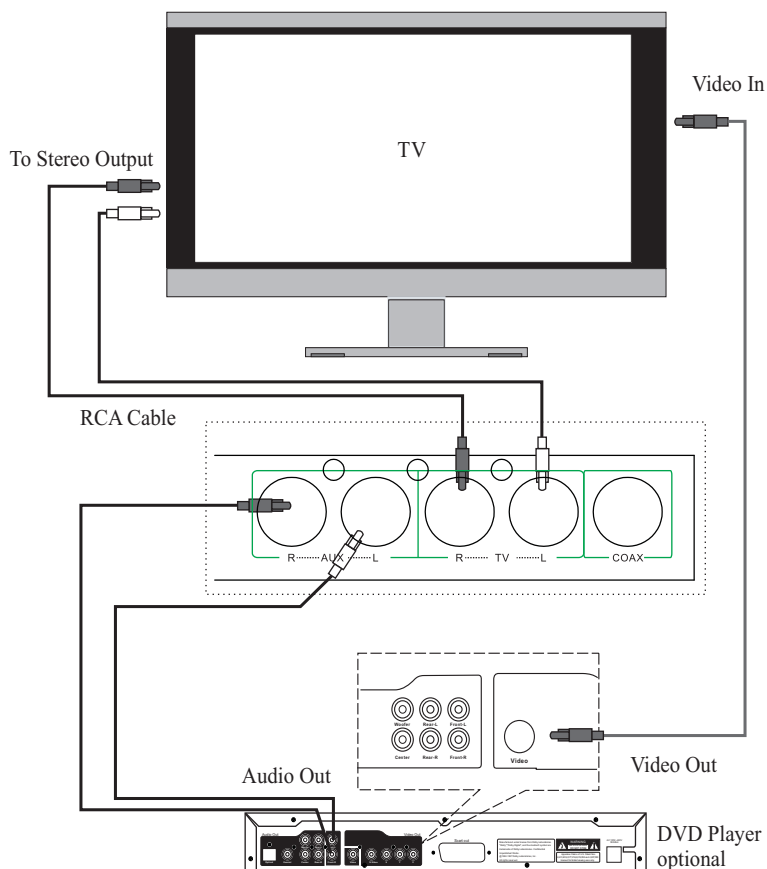


REMOTE CONTROL

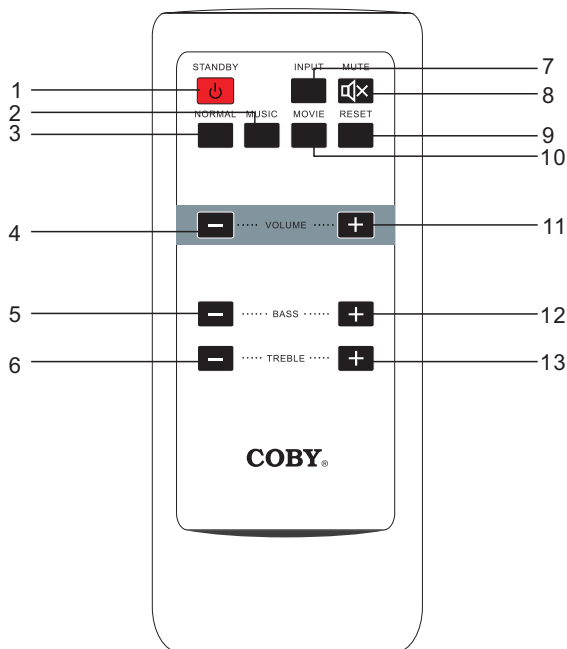 

- 1.STANDBY: Power Standby.
- 2.MUSIC: Music Mode Selection.
- 3.NORMAL: Normal Mode Selection.
- 4.VOL-: Volume Downward Adjustment Button.
- 5.BASS-: Bass Downward Adjustment Button.
- 6.TREBLE-: Treble Downward Adjustment Button.
7. INPUT: Input Selection Button .
- 8.MUTE: Mute Function Button .
- 9.RESET: Location Retrieval Button .
- 10.MOVIE: Movie Mode Selection.
- 11.VOL+: Volume Upward Adjustment Button.
- 12.BASS+: Bass Upward Adjustment Button.
- 13.TREBLE+: Treble Upward Adjustment Button.

REMOTE CONTROL BATTERY REPLACEMENT

 1. Replace the remote control battery when it no longer operates the unit, or the range is reduced considerably.
2. Use only CR2025 or CR2032 3V lithium batteries
3. Bear in mind that lighting & other room conditions, in addition to battery age, can affect the operating range of an infrared remote control.
4. Battery disposal:
Batteries and rechargeable batteries are prohibited to dispose into household waste.

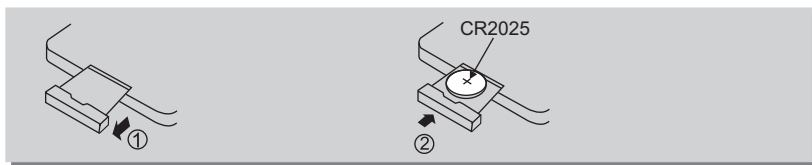


SPEAKER PLACEMENT

PLACING THE SOUNDBAR ON A TABLE

If your TV is placed on a table, you can place the soundbar on the table directly in front of the TV stand, centered with the TV screen.

 As long as the surface of the table is flat, the soundbar will rest on its rubber bumpers.

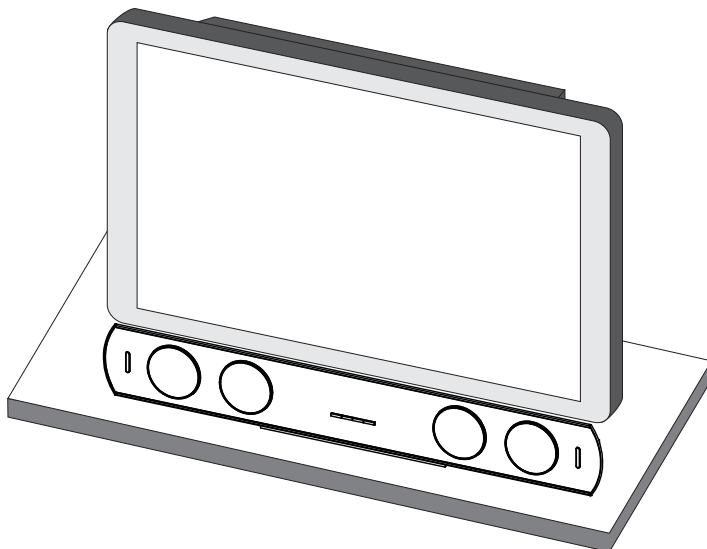

PLACING THE SUBWOOFER

 
The performance of a subwoofer is directly related to its placement in the listening room and its physical position relative to the other speakers in the system.

While it is true that in general, our ears do not hear directional sounds at the low frequencies where subwoofers operate, when installing a subwoofer within the limited confines of a room, the reflections, standing waves and absorptions generated within the room will strongly influence the performance of any subwoofer system. As a result, the specific location of the subwoofer in the room does become important to the amount and quality of bass that is produced.

PLACING THE SUBWOOFER

For example, placing the subwoofer next to a wall generally will increase the amount of bass in the room; placing it in a corner generally will maximize amount of bass in the room. However, corner placement can also increase the destructive effect of standing waves on bass performance. This effect can vary depending on the listening position – some listening positions may yield very good results, while others may have far too much (or too little) bass at certain frequencies.

In many rooms, placing the subwoofer along the same plane as the soundbar can produce the best integration between the sound of the subwoofer and that of the left and right speakers. In some rooms, the best performance could even result from placing the subwoofer behind the listening position .

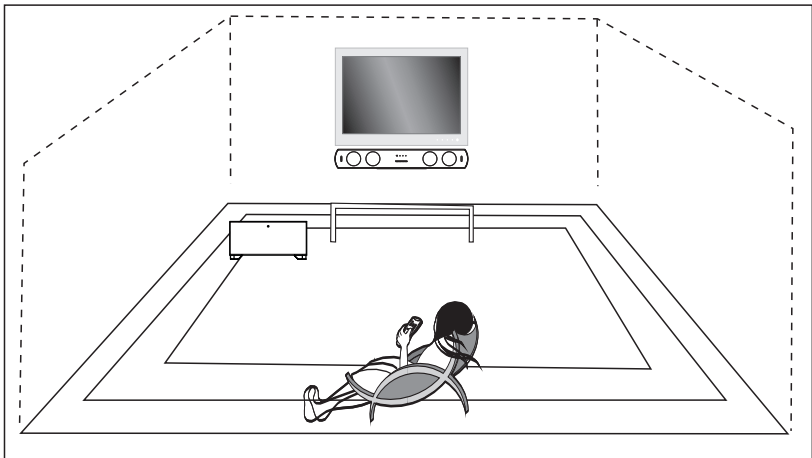

We strongly recommend that you experiment with placement before choosing a final location for your subwoofer. One way you can determine the best location for the subwoofer is by temporarily placing it in the listening position and playing music with strong bass content. Move around to various locations in the room while the system is playing (putting your ears where the subwoofer would be placed), and listen until you find the location where the bass performance is best. Place the subwoofer in that location.

IMPORTANT: The maximum wireless operation distance between the soundbar and subwoofer is approximately 50 feet (15.3m).

OPERATION

A. Switch On/Off

1. Before turning on the system, please connect it according to the System Connection Instruction.
2. Connect AC power supply with this product.
(Caution: Power source must be consistent with this product.)
3. Press on the POWER switch button on the Rear Panel of the main unit to switch on the system, the standby indicator will light up. Then press the STANDBY button on the remote controller to enter the normal status. Press the button on the remote controller once again to keep power in standby status.

B. VOLUME

1. Press the VOL + button on the front of the main unit, or the VOL + button on the remote control to increase the volume.
2. Press the VOL - button on the front of the main unit, or the VOL - button on the remote control to decrease the volume.

 
C. MUTE

1. Press the MUTE button on the remote controller once to keep the performance silent.

D. RESET

Press the RESET button on the remote controller and it will reset all settings including SW Speaker output, Front Speaker output to factory default settings.

WALL MOUNTING BRACKET INSTALLATION GUIDE

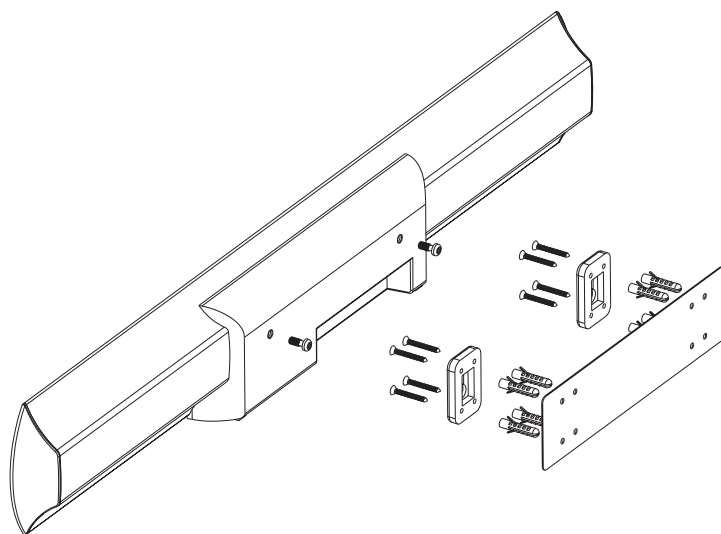

1. Take out the soundbar, paperboard, assembling bolt, bracket screw, plastic wall mounting bracket and wall mounting screw.
2. Draw out the location of the holes for the screws by paperboard and pencil, to confirm the location of the plastic wall mounting bracket. Please make sure that the paperboard is horizontal and the height of the soundbar is suitable for you.
3. Please drill 8 holes according to the location you drew on the wall by pencil.
4. Punch the assembling bolts into the holes on the wall.
5. Align the holes on plastic wall mounting bracket with the holes on paperboard and wall, then fasten with 8 screws through the assembling bolts.
6. Screw the two wall mounting screws on the rear panel of soundbar, then you can hang up your soundbar on the middle holes of both plastic wall mounting bracket easily.

SPECIFICATIONS

1.Power Supply.....	AC 120V/60Hz
2.Total Power Consumption.....	80W
3.Input Sensitivity (Subwoofer).....	200mV \pm 20mV
4.Input Sensitivity (Soundbar).....	750mV \pm 50mV
5.Speaker Impedance (Subwoofer).....	8 Ohm
6.Speaker Impedance (Soundbar).....	8 Ohm
7.S/N (A Weight).....	80dB
8.Subwoofer Power Output	40W
9.Soundbar Power Output	2 x 20W
10.THD (1kHz, 1W).....	0.5%
11.Frequency Response.....	20Hz~20KHz \pm 3dB
12.L/R Separation (1kHz).....	30dB
13.L/R Balance (Stereo).....	\pm 2dB

Note: Specifications are subject to change for improvements.

TROUBLESHOOTING

If you have a problem with this device, please read the troubleshooting guide below and check our website at www.cobyusa.com for Frequently Asked Questions (FAQs) and firmware updates. If these resources do not resolve the problem, please contact Technical Support.

Address

COBY Electronics Corporation
Technical Support
150 Knowlton Way
Savannah, GA 31407

Email

techsupport@cobyusa.com

Web

www.cobyusa.com

Phone

800-727-3592:

Weekdays: 8:30AM-9:00PM EST

Saturdays: 9:00AM-5:30PM EST