

Radio Control Skateboarding

Bart Simpson

INSTRUCTIONS

To control all the fun of your Radio Control Skateboarding Bart Simpson, first slide the power switch to the "on" position as shown in Figure A. Then activate the Krusty controller by moving Krusty's tongue to the middle "on" position as shown in Figure B. You should hear Krusty say "Hey, Hey!"

Note: The Krusty controller switch has three positions. The lowest position is off. When the switch is in the middle position you will hear Krusty say, "Hey, Hey!" While the switch is in middle position you can steer Bart in any direction while Bart's skateboarding phrases play. When the switch is in the highest position the controller will activate but the phrases will not play.

Control Bart's movements by moving Krusty's eyeball controls as shown in Figure B. Move Krusty's right eye to drive Bart forward and reverse. Move Krusty's left eye to steer Bart left and right.

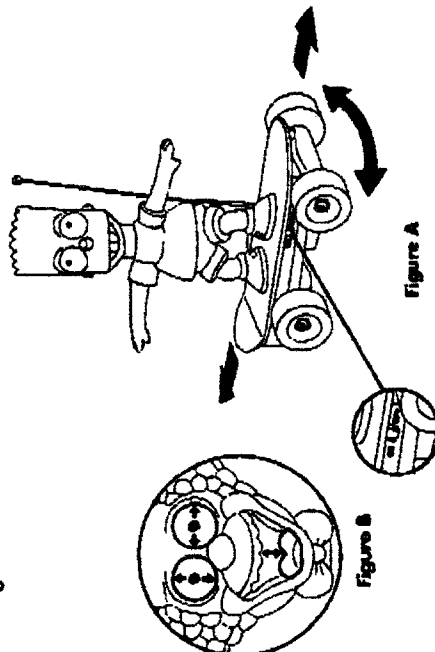


Figure A

Figure B

To perform Bart's radical wheelie spin, drive him straight backward for a short distance as shown in Figure C and then quickly reverse, driving him forward as shown in Figure D. Once Bart begins his wheelie, hold the control forward and he will continue spinning. To stop the wheelie spin either move the controller into the reverse position or release all controls.

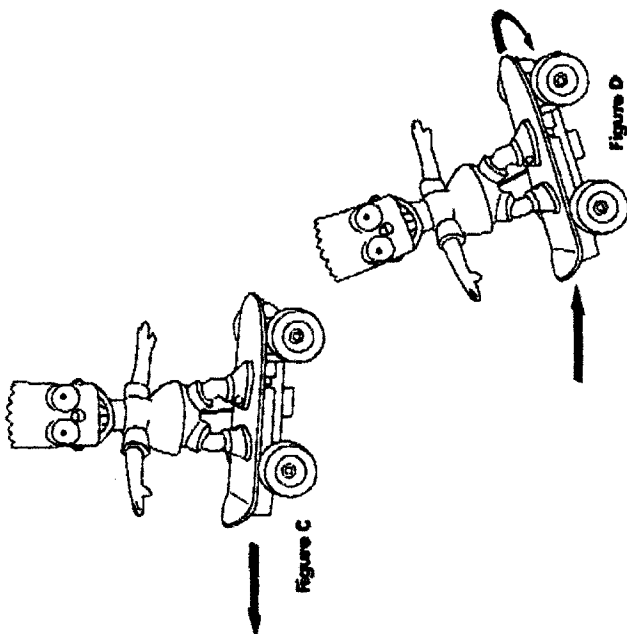


Figure C

Figure D

To replace batteries:

- 1) Remove screws from battery covers and remove battery cover doors from the back of Krusty controller and underside of skateboard as shown in Figures E and F.
- 2) Replace batteries with one new "9V" and four "AA" batteries. For optimum performance it is recommended that alkaline batteries be used.

- do not use rechargeable batteries;
- non-rechargeable batteries are not to be recharged;
- different types of batteries or new and used batteries are not to be mixed;
- only batteries of the same or equivalent type as recommended are to be used;
- batteries are to be inserted with the correct polarity;
- exhausted batteries are to be removed from the toy;
- the supply terminals are not to be short-circuited.

- 3) Replace covers and replace screws.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, use and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

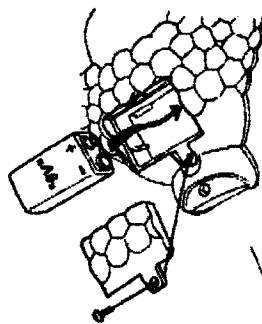


Figure E

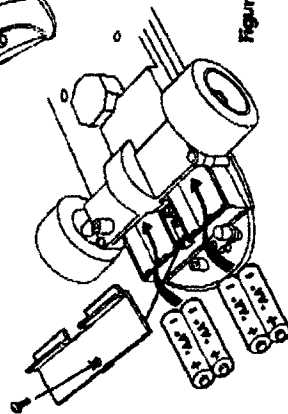


Figure F

WARNING: CHOKING HAZARD
Small parts. Not for Children under 3 years.

THE SIMPSONSM & ©2000 Twentieth Century Fox Film Corporation.
Playmates Toys Inc. Authorized User.
All Rights Reserved. PRINTED IN CHINA.

Playmates

Ages 4 and up
Stock No. 99141