



X4.5^{HT}

4.5" Smartphone

User Manual | Manual de Usuario

Content

1. Welcome	3
2. General Information	3
3. Safety Information	3
4. Warnings and Precautions	4
5. Getting to Know Your Logic X4.5	6
6. Installation and Care of the SIM Card	6
7. Micro SD Card Installation and Operation	8
8. Charging the	8
9. Unlocking Your	9
10. Device Options List	9
11. Unlocking the Interface	10
12. Main Menu	10
13. Switch Desktops	10
14. Connect	11
15. Disconnect USB	11
16. Turn off	11
17. Turn on	11
18. View Notifications	11
19. Status Bar	12
20. Google	12
21. Voice Command	13
22. Application Management	13
23. Contacts	13
24. Smart Dialing	14
25. Answer / Reject an Incoming Call	14
26. Messaging and Internet Browser	15
27. Music Player	17
28. Camera	17
29. Video Recorder	18
30. Sound Recorder	18
31. FM Radio	19
32. Video	19
33. Gallery	19
34. E-mail	20
35. File Manager	20
36. Google Play Store	21
37. Settings	21
38. Wi-Fi	22
39. Security	22
40. Back-up and Reset	22
41. Drop-down Menu Bar	23
42. Troubleshooting	24
43. Specifications	26



Welcome

Thank you for purchasing this innovative Logic Device. We invite you to read the instructions contained in this user manual so you can configure and utilize all the functions your new Device has to offer. For additional information visit us at: logicmobility.com.

General Information

The specifications in this manual are subject to change without prior notice. Logic, Inc. reserves the final right to interpret the performance of this mobile device. While the utmost care was taken and the latest information compiled in the production of this manual neither Logic, nor any other affiliated company, assumes responsibility for any mistakes or errors that may be contained in this document.

Screen captures, images, diagrams or representations presented in this manual are for reference purposes. The actual screens or functions may vary due to different software versions or other factors. Please refer to your Device for the correct details.

Logic and the Logic logo are registered trademarks of Logic, Inc. Other trademarks are the property of their respective owners.

Safety Information

If your Device is lost or stolen, notify your carrier so that your SIM card can be disabled (must be done by network operator).



This can avoid economic loss due to unauthorized use. Please take the following precautions to avoid unauthorized use of your Device:

- Set PIN code for SIM card
- Set Device password

Warnings and Precautions

Safety warning

➤ SAFE OPERATION IN A VEHICLE

Do not use a hand-held Device while driving. Always use a hands-free kit to make/take calls when driving. In some states and countries, making or receiving calls while driving is illegal!

➤ SWITCH OFF WHEN ON AN AIRCRAFT

Wireless devices can cause interference in an aircraft. Using a Device in flight is illegal and risky. Please make sure your Device is turned off while in flight.

➤ SWITCH OFF BEFORE ENTERING POSTED FACILITIES

Strictly observe the relevant laws, codes, and regulations regarding the use of Devices in areas where posted notices require you to do so. Turn off your Device before entering any area with a potentially explosive atmosphere, such as a gas station, oil tank, chemical plant or location where a blasting process is under way.

➤ OBSERVE ALL SPECIAL REGULATIONS

Follow any special regulations that are enforced in locations such as hospitals. Always switch off your Device whenever Device use

is forbidden or when it may cause interference or danger. Use caution when using your Device near medical devices, such as pacemakers, hearing aids and other electronic medical devices, as it may cause interference and not allow these devices to perform properly.

➤ **INTERFERENCE**

The conversation quality of any Device may be affected by radio interference. An antenna is built-in to the Device and is located below the microphone. Do not touch the antenna area during a conversation because this will cause the conversation quality to deteriorate.

➤ **QUALIFIED SERVICE**

Only qualified personnel may install or repair the Device. Installing or repairing the Device yourself may cause great harm and it violates the product warranty.

➤ **ACCESSORIES AND BATTERIES**


Use only approved accessories and batteries.

➤ **USE CORRECTLY**

This device is designed to be used in a normal and proper manner.

➤ **EMERGENCY CALLS**

Ensure the Device is switched on and in service, enter the emergency number, e.g. 112, then press the Dial key. Give your location and state your situation briefly. Do not end the call until told to do so.

 **Note:** *Just like all other Devices, this Device may not necessarily*

support all the features described in this manual due to network or radio transmission issues. Some networks may not support the emergency call service. Therefore, do not rely solely on this Device for critical communications such as first aid. Please consult your local network operator.

Precautions

This Device is an advanced digital device. Please exercise special care when using it. The following suggestions will help you use your Device properly and obtain the maximum benefit from it:

- Keep the Device and all its accessories out of the reach of children.
- Keep the Device dry. Keep away from rain, moisture, liquid or other substances that may corrode the electronic circuits.
- Do not use or store the Device in dusty environments to avoid damaging its mechanical parts.
- Excessive use of headphones at high volume may cause permanent hearing damage.
- Do not store the Device under high-temperatures. High temperatures will shorten the life of the electronic circuits; damage the battery and some plastic parts.
- Do not store the Device under extremely low temperatures. Condensation will form inside the Device and damage the electronic circuits when the Device is moved to a higher temperature.
- Do not throw, knock or shock the Device, as that will damage or destroy the internal circuits and high-precision components.

Getting to Know Your Logic X4.5 LITE



Power/Lock Key: Press and hold this key to turn on/off your Device. In standby mode, press this key to turn on/off the screen.

Menu Key: Press this key to open the action list, so that you can execute the action in current interface or menu.

Home Key: Press this key to return to the home page from any application or interface.

Back Key: Press this key to return to previous interface, or close the dialog box, menu, notification panel or the screen keypad.

Volume +/-: Press this key to adjust volume

Installation and Care of the SIM Card

By setting PIN (personal identification number) code of the SIM card, you can protect your SIM card from illegal operation.

Installing SIM Card

This Device can come configured for dual SIM operation. This configuration will have two SIM slots. Please turn off the Device first, remove the cover, insert the SIM card into the slot and replace the cover.

**SIM Card Precautions**

By setting a PIN (personal identification number) code for the SIM card, you can protect your SIM card from illegal operation. If the PIN code is enabled, you need to enter the valid PIN code when you turn on the Device. If you input the wrong code three times in a row, your SIM card will be locked and you need to input the PUK code.

⚠️Note:Your network service provider will set a standard PIN code (4-8 digits) for your SIM card. Please change it with your private password as soon as you get the Device.

Connecting to Network

When the SIM card is decrypted, the Device will search for registered networks or available local networks automatically. Once connected, the network operator name will be displayed at the bottom of the lock screen. With the Device in standby mode you



can make or answer calls. Please contact your network operator if the SIM card is not working properly.

SIM Card Warnings

- Keep the SIM card out of the reach of children.



- Please use, insert and remove the SIM card carefully because the SIM card and its contacts are prone to being scratched or damaged from bending.
- Do not expose the SIM card to electrostatic, dusty or moist environment.

Micro SD Card Installation and Operation

A Micro SD card is a removable mobile memory card inside the Device used for extending the internal storage space of the Device.

1. To install the Micro SD card, carefully remove the back cover of your Device.
2. Remove the Device's battery.
3. Locate the Micro SD card slot and just slide-in the card with the gold contacts facing down.
4. To remove the Micro SD card, just slide-out the card carefully to remove.
5. Replace the battery and the back cover.

 
Charging the Battery

1. Connect the wall charger to the included USB cable.
2. Connect the charger plug to the power outlet.
3. Connect the USB cable to the Device; once connected this icon  indicates the charging status.
4. The battery is fully charged when the status icon changes to ; please disconnect the charger from the power outlet.
5. Disconnect the charger from the Device.

⚠️Note: If the battery isn't used for a long period of time or the battery is depleted, the Device may not turn-on like normal while charging. This is normal. Please charge for a while before turning on the Device.

The battery can be charged repeatedly; however, it is a consumable product. Please purchase a new battery if you notice a significant reduction in the standby time. Using data services consumes more battery power and will reduce the standby time. The charging time may be affected by the temperature and battery usage. The Device will show a prompt if the battery level is too low. The Device will power off automatically if the battery level drops below a certain level.


Unlocking Your Device

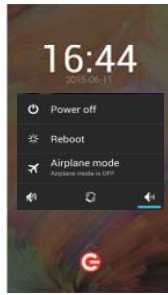

Device Options List

In standby mode, you can press the Power key to lock and turn off the screen. Press it again to turn the screen on. Press and hold the Power key to open the Device option list.

 
Unlocking the Interface

With the screen locked, tap the  icon at the bottom of the screen, slide



to any direction to unlock the screen, or drag the screen to right to access the camera to take pictures.

Main Menu

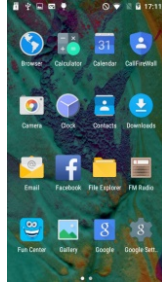

Main Menu Page

Slide to the left/right on the screen to switch from the main menu page, and tap the Menu key to select Manage applications or Settings. Drag and drop an icon to the desktop to create a shortcut.

Switch Desktops

In the idle mode, you can slide on the screen to switch between the 1st~5th screens.

Clock

Connect USB

Connect the device to a computer with the USB cable, From the notification bar select "USB Connected", choose and click "USB storage". You will be able to view the data stored on the Device and SD Card storage from the computer. Now you can transfer data between the device and the computer.

Disconnect USB

Once you have finished transferring data you can disconnect the USB cable.

⚠ Note: *DO NOT disconnect the USB cable during transferring data, because it can lead to data loss or damage.*

Turn Off Screen

 
Press the POWER button quickly to turn off the screen to save power.

⚠ Note: *To save power, you can also set the screen timeout time in Display Settings. When there is inactivity during the standby time, the screen will shut off automatically.*

Turn On Screen


When the screen is off, press the POWER button quickly to wake up the screen.

View Notifications

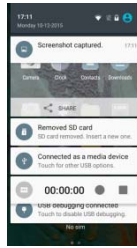


Notifications Interface in Status Bar

 Status Bar

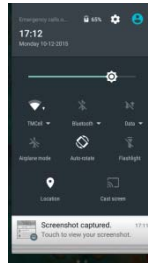

Quick Settings Interface in Status Bar

Pull down the status bar to view the notifications interface directly. In this interface you can view notifications from the Device, or tap the  icon in the top right corner of the screen to display the quick settings interface. In this interface, you can turn on/off WLAN, BT, Data connection, GPS, Flight mode, customize the X4.5 LITE, etc.

Google Now


Slated as a 'personal assistant,' Google Now shows you information at just the right time, such as today's weather, traffic, personal appointments, travel, flights, places, etc.




Google now displays 'cards' for each item that is relevant, depending on your current time and location. You will be notified each time a card is to appear. Simply swipe them away when not needed. *Swipe up from the bottom center of any screen, or touch the Google Search bar on any Home screen. To turn Google Now on/off, go to **Google Settings** → **Search & Now** → **(ON/OFF)***

*To manage settings, go to **Google Settings** → **Search & Now** → **Accounts & Privacy***



*To search, tap the Google search bar on top of the screen or tap  for voice commands. For more information, go to **Google Settings** → **Search & Now** → **Help & feedback***

Voice Command

 
Your Device also operates via voice command. Search items in your Device or on the Internet simply by speaking. Tap the  when it is visible and follow the prompts before speaking.

Application Management

From the application management interface, you can manage running applications to improve the performance of your Device.

You can view the information of the downloaded applications, applications installed on the Micro SD card, running applications and all applications, restrict permissions or uninstall third party applications.

Contacts

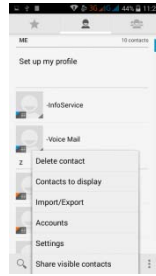


You can search contacts by using Device numbers, email accounts or names. Press the Menu key to select Contacts, Import/Export, Accounts, Send messages or Share current contact.

Smart Dialing

From the keypad interface, the Device will search to find a match in your contacts as you type in the information. In settings, you can set up voice call, video call, Quick responses and others.

 
During a call, you can access the keypad interface or your contacts via shortcuts. After typing the number from the keypad,

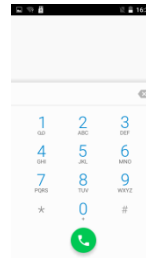

press MENU and select Speed dial. During a call, the backlight turns off when the Device is close to your ear in order to conserve battery power and prevent any misoperations.


Answer / Reject an Incoming Call

 
When you receive an incoming call, a notification message appears on the screen.



To accept call, drag  towards



To reject, drag  towards 

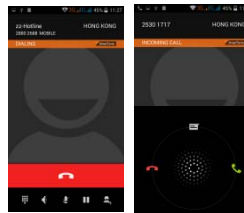Select  to end the call.








Drag  towards  to send a message instead.

Adjust the Volume

During a call, press the Side Keys to adjust the volume.

Options During a Call

 
-  - Launch/Hide Dial Pad
-  - Turn speakerDevice on/off
-  - Mute
-  - Put a call on hold
-  - Add current call's details to



contacts.

Manage Contacts


You can add contacts to your

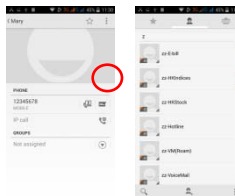LOGIC X4.5 Lite



Device and synchronize them with the contacts in your Google account or other accounts that support contact syncing. To manage your contacts, go to  → Contacts .

 Messaging and Internet Browser

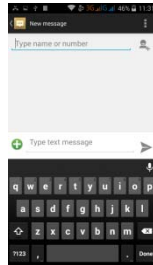


Messaging interface

Your Device supports multiple languages plus third party input method software.

TapSwitch to switch among the different languages. If the language selected for the spell checker is English, tap the word in the input box while typing to get suggestions for the correct spelling.

You can also speak to enter text from the majority of screens that require text input. Tap on a text field, or a location within some text you've already entered.

 1. Touch the Microphone key on the onscreen keyboard.
2. When you see the microphone image, speak what you want to type.
3. Say "comma," "period," "question mark," "exclamation mark," or "exclamation point" to enter punctuation.

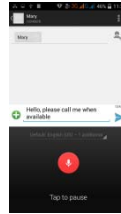

Browser



The default homepage will be shown when you open the browser for the first time. You can change the default homepage to one of your choosing from the settings menu. With the browser you can visit internet webpages, download resources from the web or watch video online.

Music Player

Supports MP3, AAC, OGG, MIDI and other music formats. Drag the progress bar while a song is playing to move to any segment of the track, Tap the Play button to pause or play.

Tap and hold artist, album or music name to perform operations such as play, add to playing list, set as ring tone, delete, and search. Select search to search music and play.

Camera


Tap on the screen to focus automatically, making the capture of moving objects easier and more convenient. You can




set smile shutter, best capture, continuous shooting, normal mode, automatic scene detection plus other modes.

The camera integrates various creative styles; you can tap to preview different effects.

Dual Camera




Your Device has a front camera built-in. Tap  to switch to the front camera and take a selfie (self-photo).

 
Video Recorder

Your Device takes high-quality videos. Tap  to switch to the video recorder.





Sound Recorder

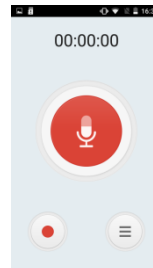Record sound and other audio files on your Device by going to . Tap  to start recording and press  to




stop recording. To record FM Radio audio, click Menu and select Record FM option. To play the recently recorded sound, press ▶. After playback, you may opt to discard or save the recorded file. To view the recorded files, tap ☰. You can send the recorded file via MMS or BT, or set as your ring tone.


FM Radio


To listen to the radio, go to  → .


 - Switch to speaker

 - View channel list


 - Play/Stop FM radio

 - Search the channel list

 - Fine tune channel



 - Display options: Search channels,

Record, Exit FM Radio

: A headset must be connected for the FM radio to work. Press side keys to adjust volume.






Video Player

This displays and lets you view all video files stored on your Device and on your Memory Card. To access, tap  →  → tap a video to Play.



 
To Pause/Play, just tap on the video.

Tap  → Stop to stop playback.

Tap  to share on Facebook, Messaging, BT, Google+, Email and Gmail. Tap  to view full screen.


Gallery

You can view the pictures and videos recorded by the camera in Gallery and or pictures and videos on SD card. From the gallery, you can perform operations with multimedia files such as share, edit and set as wallpaper, or contact icon. Select images to view from the Gallery screen.

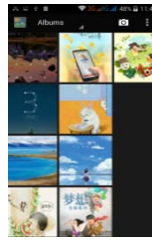


E-mail

 
Your new Device supports Gmail and other E-mail providers. You can create an account and read e-mails anywhere at any time. You can merge e-mails from different e-mail boxes to the same interface.

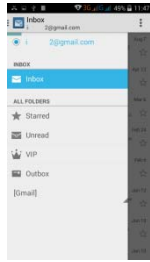

File Manager

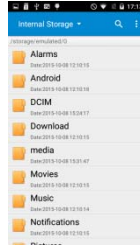 

 From the File Manager interface, tap the Menu key to select New folder, Cut, or view the files stored on the Micro SD card.

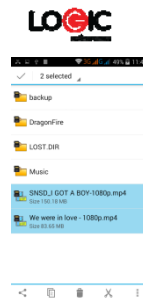


Tap and hold a file or folder and select Copy, Cut, Delete, Rename or select another option.


Google Play Store

Your Device gives you direct access the “Google Play Store” via the built-in icon. Google Play offers the most popular apps, e-books, games and more multimedia content. You can find the latest apps through searching or selecting from the rank lists. You can connect to Google Play via wireless data or Wi-Fi and begin experiencing everything it has to offer.

 Settings

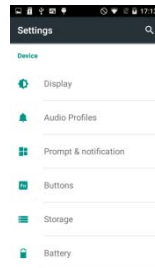


Wi-Fi

This allows you to switch your Device's Wi-Fi ON or OFF. Check the status by looking at the  in the status bar.


Security Functions

 You can set up screen security, encryption, SIM lock, etc.

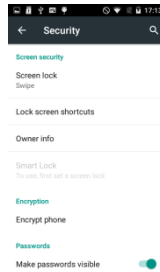


Back-up and Reset

 From this interface you can back up the application data, WLAN password and other settings to the Google Server. You can also reset all the data stored on your Device.

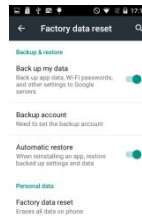

Drop-down Menu Bar

 Drop down USB connection in the menu bar. Your Device can be set as a flash drive and the files on the Micro SD card can be copied to a PC or other files can be copied from a PC to your Device.

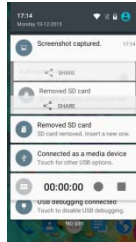

Troubleshooting

Please refer to the following list of problems and solutions if you run into any issues while using your Device. Please contact the distributor or service provider if the issue still persists.

Problem	Cause	Solution
Can't access Internet normally when using browser	The network operator doesn't provide this service or your plan doesn't include this service.	Please contact your network operator for information on how to apply and
	The settings are not correct.	Please refer to the specific browser's
SIM card error	SIM card is damaged.	Please contact your network
	The SIM card isn't installed properly	Check the SIM card
	The metal surface of the SIM card is dirty	Clean it with clean cloth

Poor reception	The Device is being used in an area with a weak signal, for example, near tall buildings or in a basement, the radio	Please make or answer calls in areas where there is a stronger signal.
----------------	--	--

Problem	Cause	Solution
Poor reception	The Device is being used during peak communications times and the airwaves are	Try to avoid using your Device when communication is
Device doesn't turn on	Battery is too low.	Charge the battery
Can't make a call	Call barring is active	Cancel call barring
Can't connect to the network	SIM card is invalid.	Please contact your network
	Outside of coverage area.	Move to an area within the service area of your network operator.
	Weak signal.	Move to a location with a stronger signal
Battery won't charge	The voltage is not within the rated range of the charger.	Use an outlet with the correct voltage that falls within the rated range of the
	Nonstandard charger is used	Use a charger that is designed

	Not connected properly.	Check whether the plug is connected
--	-------------------------	-------------------------------------

Logic X4.5 LITE Specifications

Processor	Quad-Core 1.3Ghz
Operating System	Android 5.1 Lollipop
Memory	4GB (ROM) + 512MB (RAM)*
External Memory	microSD slot (max. 32GB)
Cellular	3G: 850/1700/1900 GSM Quad-band GPRS/WAP
SIM	Dual SIM, Dual Standby
Display	4.5" Multi-touch display Resolution: 480 X 854 (WVGA)
Cameras	5MP with flash + 1.3MP
Wireless	Wi-Fi (802.11 b/g/n), BT 4.0, GPS
Connectors	Micro USB (data and charging) 3.5mm audio
Control Buttons	Power, Volume +/-
Multimedia	Built-in speaker & microphone
Audio	FM Radio Audio player**
Video	Video player**
Photographs	Photo gallery viewer
Sensors	G-sensor (3-axis)



	Light Sensor
	Proximity Sensor
Battery	1700mAh Li-ion
Input/Output	AC 100~240V 50/60Hz 0.2A DC 5V@700mA

Specifications are subject to change without prior notice.

* Actual storage may be less due to device software.

** Certain bitrates, resolutions, and/or file variations may not be compatible.

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is



no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

32

- Consult the dealer or an experienced radio/TV technician for help.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

FCC Hearing-Aid Compatibility (HAC)

The (X4.5LITE) has been tested for hearing aid compatibility. This device has an M4 and T3 rating.

When some wireless devices are used near some hearing devices such as hearing aids and implants,



users may detect a buzzing or humming noise. Some hearing devices are more immune than others to this interference noise. Wireless devices may also vary in the amount of interference they generate.

The ratings for compatibility of digital wireless devices with hearing aids are described in the American

National Standards Institute (ANSI) C63.19 standard:

M-Rating: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference

with hearing devices than phone that are not labeled. M4 is the better/higher of the two ratings.

(X4.5LITE) is rated M3.

T-Rating: Phones rated T3 or T4 meet FCC requirements and are likely be more usable with hearing

devices' telecoil than unrated phones. T4 is the better/higher of the two ratings.

(X4.5LITE) is rated T3.

The more immune the hearing aid device is, the less likely one is to experience interference noise from

the wireless phone. Hearing aid devices may also be rated. Adding the rating of the hearing aid and the

phone would determine probable usability:

1. Any combined rating equal to or greater than six offers the best use.
2. Any combined rating equal to five is considered normal use.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing

loss. If your hearing device happens to be vulnerable to interference, you may not be able to use this

device successfully. Trying out this device with your hearing device is the best way to evaluate it for



your personal needs. This device has been tested and rated for use with hearing aids for some of the wireless technologies that it utilizes. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility.

For information about hearing aids and digital wireless phones
FCC Hearing Aid Compatibility and Volume Control:
<http://www.fcc.gov/cgb/dro/hearing.html>
Gallaudet University, RERC:
<https://fjallfoss.fcc.gov/oetcf/eas/reports/GenericSearch.cfm>



logicmobility.com

Made in China    
Copyright Logic 2016