 


If the network is open, the tablet will prompt you to confirm connection to the network. Touch Connect to confirm.

If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password or other credentials. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch Connect to confirm.

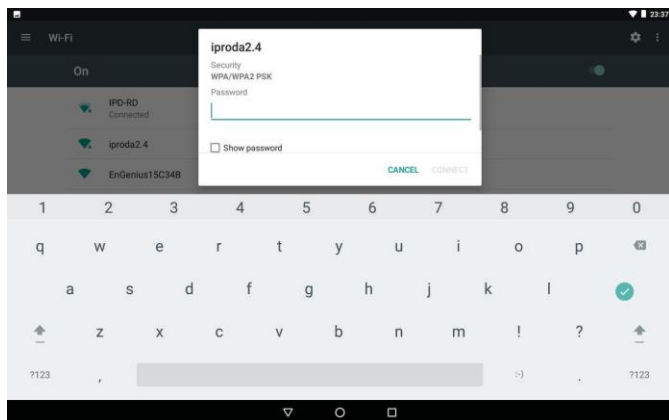

**When you have successfully connected to a Wi-Fi network, the Notifications bar at the bottom of the screen will show a Wi-Fi signal indicator.**

# Browsing the Web

The Browser application lets you visit webpages and find information on the web. Keep up with the news, your friends, or enjoy video from YouTube™, the world's most popular video-sharing community.

To use Browser, the tablet must be connected to the Internet. Read the section “Connecting to the Internet” to learn how to connect to the Internet.


To open Browser, touch the Browser icon on the Home screen or in the Launcher.



Name		Description
1	New window (+)	Creates a new browser window.
2	Address bar	Displays the address (URL) of the current page. Touch the bar to enter a new address or to search the web.
3	Add bookmark icon	Touch to add bookmarks.
4	Audio input	Touch the icon to input by voice.



 
Some common Browser actions are described below.

#### 4 To go to a webpage.


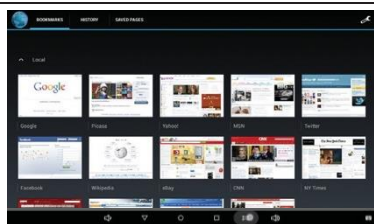 
1. Touch the Address bar at the top of the Browser screen. The keyboard will open automatically. (If the address bar is not visible, drag the page down to return to the top of the Browser screen.)	
2. Use the keyboard to enter the address (URL) of the webpage (e.g., www.google™.com).	
3. Touch Enter key to open the webpage.	

#### 4 To bookmark a webpage.


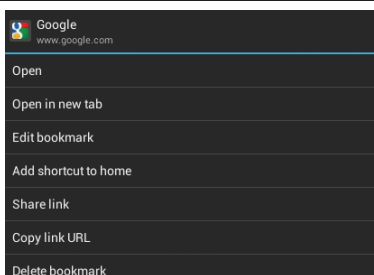 
Bookmark your favorite webpages in order to visit them quickly without entering a URL.

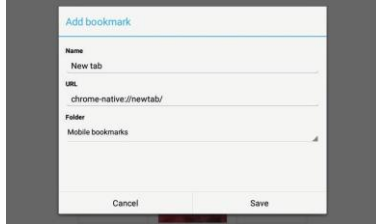1. Go to the webpage that you want to bookmark	
2. Touch the Add Bookmark icon.	
3. If desired, you can modify the name of the bookmark or its location (URL address). Otherwise, touch OK to finish adding the bookmark.	

#### 4 To go to a bookmarked webpage.

1. Touch the go to Bookmark icon.	
2. Touch a bookmark tile to open it.	

#### 4 To delete a bookmarked webpage.

1. Touch the go to Bookmark icon.	
2. Touch and hold a bookmark tile to open the option menu.	

3. Touch “Delete bookmark”.

4. Touch “OK” to confirm.

## Browser menu

While viewing a webpage, touch the icon shown on the right to open the Browser menu, the icon is located on the top right corner of the screen. The options are:



- Refresh: Refresh the current webpage.
- Forward: Go to the next webpage.
- New tab: Open the webpage in a new window, under a new tab.
- New incognito tab: Open the webpage in a new window under a new tab and the pages you view in the new window will not appear in your browser history or search history. See the on-screen explanation of going incognito.
- Share page: Use Email to send the webpage URL.
- Find on page: Search content on the page.

- ④ Request desktop site:
- ④ Save for offline reading: Save this page onto the internal memory, then you can read it when the internet connection is disabled.
- ④ Page info: View information about the current paging including the URL.
- ④ Settings: Customize the Browser.

# Optional Connections

## Connecting to a Computer

Connect the tablet to a computer to transfer files.

### 1. Connect your tablet to the computer.

 
With the included USB cable:

- ④ Plug the small end of the cable into the USB 2.0 hi-speed connector of the tablet.
- ④ Plug the large end of the cable into an available USB 2.0 hi-speed port on the computer.

**When your tablet is connected, a USB icon will appear in the Notification bar.**



- ④ Touch the Notification bar to open the notifications panel.

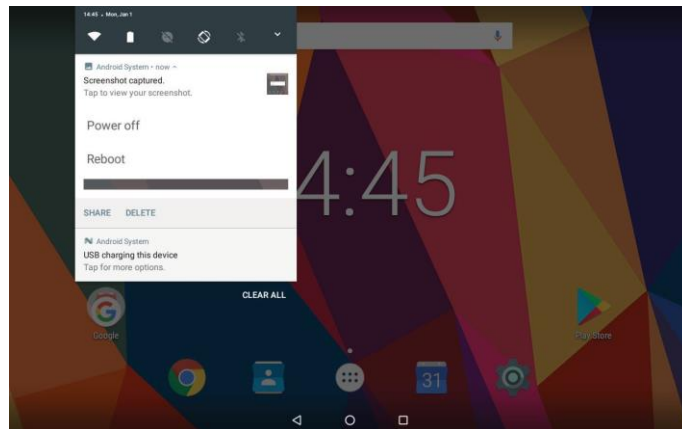

*The Tablet's "mass storage mode" is compatible with many operating systems including: Microsoft® Windows® XP, Vista, 7 or higher and Mac OS or Linux.*

## 2 Mount the storage drive.

- ④ Touch USB connected to mount the tablet's built-in storage, then touch "Turn on USB storage" and "OK" when prompted to confirm. When mounted, you can copy files to/from your computer.

Your tablet will be recognized by the computer as a Removable Storage drive. Drag and drop files between your tablet and the computer. To learn more about copying files, please refer to the documentation included with your computer or operating system.

## Connecting Headphones

Connect a pair of headphones (or earphones) to the tablet to enjoy media in private.

Lower the volume level of the tablet before connecting headphones and then slowly raise the volume to a comfortable listening level.

The headphones must have a 3.5 mm (1/8 in) plug.

 
When headphones are connected, speaker output will be disabled automatically.



*Hearing experts advise against the constant use of personal stereos played at high volume. Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.*

## Using the USB Full-Size Adapter

The USB full-size adapter can be used to connect and use USB devices with the tablet. The adapter converts the Micro USB port on the tablet into a USB On-the-Go (OTG) connector.

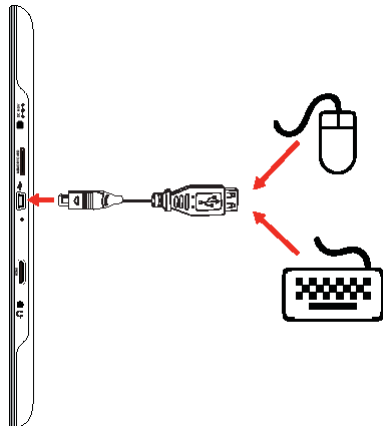

*You may also use this connection to add a mouse to the tablet.*

*The adapter supports one connection at a time. To use a keyboard and mouse simultaneously, you will need to add an external USB hub.*

## Connecting a Storage Device

Use the included USB full-size (Type A) adapter to connect a storage device to the tablet (e.g., a USB flash memory drive).



*This connection supports a maximum storage size of 32 GB. For additional storage capacity, a microSD card can be added to the tablet.*



# Setting the System Options

Open the system settings menu to adjust how the tablet looks and functions.



*Many applications will have their own settings; refer to the documentation provided by the application developer to learn more.*

To open the Settings menu:

1. From the Home screen, touch the Launcher Tab.
2. Touch Settings to open the Settings menu.

The settings are grouped by category. Touch a category to open and adjust its settings or right.



*Please refer to the manual for a description of the items in the Settings menu.*



# Specifications

<b>Processor</b>	MTK8163
<b>GPU</b>	Mali 720
<b>RAM</b>	1GB
<b>Storage</b>	16GB flash built-in microSD card slot (max. 32GB supported)
<b>Display</b>	10.1" IPS 800*1280, capacitive touchscreen
<b>Networking</b>	Wi-Fi IEEE 802.11 a/b/g/n
<b>Audio Output</b>	3.5 mm headphone
<b>PC Interface</b>	USB 2.0 hi-speed
<b>Additional Features</b>	Front/Back facing camera Built-in microphone Mono speaker
<b>Operating System</b>	Android 8.1 Oreo (Go edition)
<b>Power</b>	Rechargeable Li-poly battery power adapter
<b>Playback Time (hours) *</b>	Up to 12 hours music, 3 hours video, 3 hours web browsing

\* Music was tested with a 128 kbps MP3 file; video was tested with a 1920 x 1080 MPEG-4/AVC file; browsing was tested with the screen brightness set to default. Actual playback results may vary.

## Warranty

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Specific Absorption Rate (SAR) information:

This product meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm for body worn must be maintained between the user's body, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **WARRANTY**

### **Limited Warranty**

The Logic brand and its products are owned by Swagtek, Inc. This is a limited warranty for the product purchased and contained in this package (the “Product”). For Astro Tab to honor this limited warranty, the original retail purchaser (“you”) must present a valid proof of purchase of the Product, such as a receipt.

This warranty is void if Company deems, in its discretion, that the Product may have been damaged through modification, improper use, end user negligence, water damage, or tampering of the bar code of the Product unit. This warranty is a limited warranty for repair/replacement of product, subject to the conditions set forth herein.

INSPIRA TECHNOLOGIES LLC IS NOT LIABLE FOR CONSEQUENTIAL, INDIRECT, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES AND COMPANY’S TOTAL LIABILITY HEREUNDER SHALL NOT EXCEED AN AMOUNT GREATER THAN THE RETAIL PURCHASE PRICE OF THE PRODUCT.

Subject to the applicable provisions set forth herein, with regard to this limited warranty, you are responsible for all costs in connection with the shipping and handling of the Product to Swagtek, Inc., and Swagtek, Inc. is likewise responsible for all shipping and handling of the Product back to you. Swagtek, Inc. bears no risk of loss of the Product in connection with the transportation and shipment of the Product in any way relating to this limited warranty.

### **90 DAYS Parts & Labor**

Limited Manufacturer’s Warranty – Swagtek, Inc. warrants to you as the original retail purchaser of the Product, that should the Product have any defect, under normal conditions, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company’s option) without charge, if submitted to Swagtek, Inc. within a period of 90 days from the date of purchase of Product. This warranty only covers manufacturer defects and the Product must be returned to Company in its original condition. Proof of Purchase, in the form of a valid receipt, is required.

## WARRANTY

### 1 YEAR Limited Parts

The 1 year limited parts warranty gives you the option to return Product to Swagtek, Inc. for repair/replacement. You will be responsible for labor charges. This warranty does not cover any incidental or indirect costs incurred as a result of a defect in the Product, including any consequential, incidental or indirect damages.

### Contact Us

Our email address is: [support@logicmobility.com](mailto:support@logicmobility.com)

Please make sure to include the model number and brief description of the problem you are encountering.

#### ***FCC Statement***

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This product meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm for body worn must be maintained between the user's body, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.



# LOGIC T10B

**TABLETA DE 10" HD WI-FI**

**Guía Rápida**

Por favor leela cuidadosamente antes de usar su tableta.

# INDICE

<b>GRACIAS.....</b>	<b>3</b>
Características.....	4
<b>CONOCIENDO LA</b>	
<b>TABLETA .....</b>	<b>5</b>
Acerca de la pantalla	
táctil.....	8
Película protectora.....	8
Acciones de la pantalla táctil.....	8
Sobre el sensor de orientación.....	9
Cargar la tableta.....	10
Insertar la tarjeta de memoria.....	10
Restablecer la tableta.....	11
<b>CÓMO COMENZAR.....</b>	<b>12</b>
Encendido y apagado de la tableta.....	12
Encendido y apagado de la pantalla (en espera).....	13
Desbloqueo de la pantalla.....	13
Pantalla de inicio .....	14
Acerca de las	
aplicaciones.....	15
Aplicaciones	
preinstaladas.....	16
Instalación de las aplicaciones.....	17
Sobre los Widgets.....	17
Acerca de las notificaciones.....	18
<b>CONEXIÓN A INTERNET.....</b>	<b>19</b>
Requerimientos.....	19
Conectarse a una red Wi-Fi.....	20
Navegando por la web.....	22

<b>CONEXIONES OPCIONALES.....</b>	<b>26</b>
Conexión a una computadora.....	26
Conexión de auriculares.....	27
Uso del adaptador USB .....	28
Conexión a un teclado.....	28
Conexión a un dispositivo de almacenamiento.....	28
<b>CONFIGURACIÓN DE LAS OPCIONES</b>	
<b>DEL SISTEMA.....</b>	<b>29</b>
<b>ESPECIFICACIONES.....</b>	<b>30</b>
<b>GARANTÍA.....</b>	<b>31</b>

# Gracias

Felicitaciones por la compra de su tableta T10B. Esta guía se proporciona para ayudarlo a comenzar rápidamente con su tableta; léala detenidamente y guárdela para futuras referencias.

# Caraterísticas

- ➊ Navegar por la web:  
Visita tus sitios web favoritos.
- ➋ Revisa tu correo electrónico:  
Mantente en contacto con amigos y familiares.
- ➌ Ver videos de YouTube™:  
Navega por el video más popular del mundo y comparte con la comunidad.
- ➍ Lee tus libros favoritos:  
Descarga miles de libros en ella  
(incluye lector de libros electrónicos). \*
- ➎ Descubra miles de aplicaciones para juegos  
Android™ y más dentro de la aplicación de compra o descarga de apps.
- ➏ Conéctese a internet sin cables:  
Redes Wi-Fi de alta velocidad 802.11 b/g/n
- ➐ Disfrute de sus archivos en cualquier lugar:  
Potente y portátil para escuchar tu música favorita,  
ver videos y fotos.
- ➑ Lector de tarjetas de memoria Micro SD:  
Aumente su capacidad de almacenamiento.  
(soporta hasta 32 GB)
- ➒ Cámara incorporada:  
Conveniente cámara frontal
- ➓ Detección automática de la orientación:  
Lee como quieras, la pantalla se ajusta  
¡automáticamente!
- ➔ La lectura de libros en formato ePub requiere la aplicación de  
lector de libros electrónicos y ya está incluida.



# Conociendo la Tableta

 
## Vista rápida

Nombre		Descripción
1	Cámara	Cámara frontal


1



Nombre		Descripción
2	Tecla de encendido	Presione para encender la unidad o para encender y apagar la pantalla.
3	Tecla de volumen +	Presione para aumentar el volumen.
4	Tecla de Volumen -	Presione para bajar el volumen.
5	Puerto USB	Conecte un dispositivo de almacenamiento a la tableta.
6	Entrada para auriculares	Conexión de salida de audio para auriculares.
7	Ranura para tarjetas SD	Inserte la tarjeta de memoria Micro SD aquí.
8	MIC	Recepción de sonido para grabación.
9	Toma mini HDMI	Conecte al monitor para la salida de video en alta definición.
10	Reiniciar	Presione para reiniciar la tableta si se bloquea o se comporta de manera anormal. (Use un clip u otro objeto pequeño para presionar suavemente esta tecla).

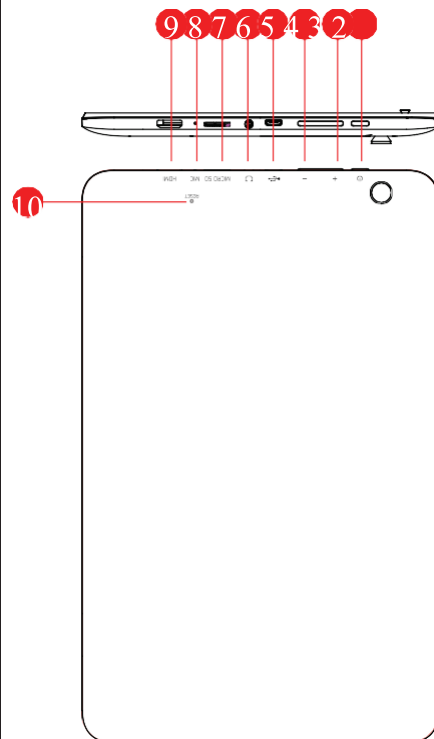

Nombre		Descripción
11	Cámara	Cámara trasera
12	Altavoz	La salida del altavoz se silencia automáticamente cuando se usa el conector para auriculares.

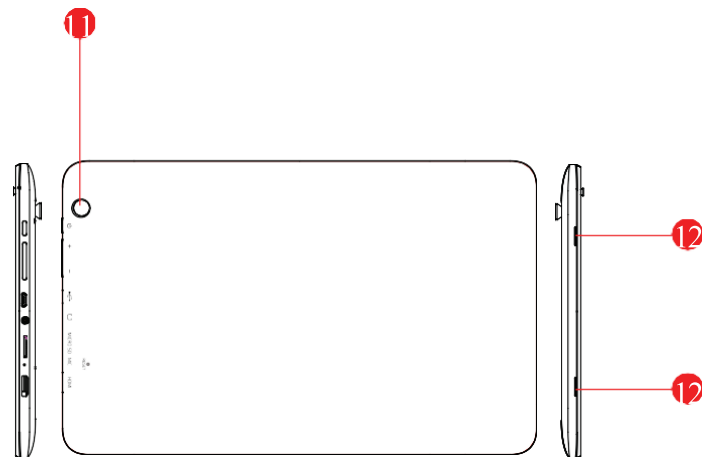 

## Hacerca de la Pantalla

Su tableta viene equipada con una pantalla táctil fácil de usar que le permite acceder a las funciones del dispositivo.

Use la punta de su dedo para tocar el área de la pantalla donde se muestra un ícono de control. Si toca y mantiene presionada la pantalla, se registrará como una pulsación continua del botón.



*Para evitar dañar la pantalla, no la toque con fuerza excesiva ni con ningún otro objeto que no sea su dedo. Para obtener la mejor respuesta, asegúrese de que sus manos estén limpias antes de usar los controles de la pantalla táctil.*

### Película protectora

Se ha colocado una película delgada a la pantalla para protegerla durante el envío. La película protectora debe retirarse antes de su uso. Para retirarla, simplemente tome una esquina de la película y despéguela de la pantalla.

### Acciones de la pantalla táctil

Puede controlar las funciones de la tableta utilizando la pantalla táctil en combinación con las tres teclas táctiles ubicadas en el bisel. Para controlar la tableta con la pantalla táctil, use la punta del dedo para manipular los iconos, los botones, elementos de menú, el teclado de la pantalla y otros elementos que

aparecen en la pantalla. Puede realizar las siguientes acciones en la pantalla táctil utilizando la punta de su dedo.

Toque:	Para activar un elemento en pantalla (por ejemplo: íconos de aplicaciones, botones, elementos del menú y las letras / símbolos del teclado en pantalla), simplemente tóquelo con la punta del dedo.
Tocar y sostener:	Algunos elementos en pantalla tienen una acción alternativa si lo toca y lo mantiene presionado (por ejemplo: abriendo un menú alternativo o para activar la función de “arrastrar”). Para mantener presionado un elemento, tóquelo y no levante la punta del dedo hasta que se produzca la acción.
Arrastrar:	Arrastre un elemento en pantalla para cambiar su posición (por ejemplo: un ícono de aplicación en la pantalla de inicio). Para arrastrar un elemento, tóquelo y manténgalo presionado por un momento, luego, sin levantar la punta del dedo, mueva la punta del dedo en la pantalla hasta que el elemento alcance su destino deseado.