

GSM Mobile Phone

User Manual

Trand name: iSWAG

Model name: Tempo

FCC ID:O55TEMPO

Directory

Basic Information	3
<i>Brief Introduction.....</i>	<i>3</i>
<i>Safety Notice.....</i>	<i>3</i>
<i>Cleaning and Maintaining</i>	<i>3</i>
Before Using.....	4
<i>SIM.....</i>	<i>4</i>
<i>Phone Unlock.....</i>	<i>4</i>
<i>SIM Unlock.....</i>	<i>4</i>
Function menu Introduction	4
<i>Phonebook.....</i>	<i>4</i>
<i>Messaging</i>	<i>5</i>
Inbox.....	6
Drafts	7
Outbox.....	7
Sent messages	7
Message settings	7
<i>Call logs.....</i>	<i>8</i>
<i>Settings.....</i>	<i>8</i>
DuaD SIM settings.....	8
Call settings	9
Phone settings	10
Shortcuts	12
Network settings	12
Security settings	13
Connectivity.....	14
Restore factory settings.....	14
<i>Multimedia</i>	<i>14</i>
Image viewer	14
Video recorder.....	15
Video player.....	15

Audio palyer	15
Sound record	15
FM radio	16
Bluetooth.....	16
<i>File manger</i>	16
<i>Fun</i>	17
<i>User profile</i>	17
<i>Alarm</i>	18
<i>Tools</i>	18
STK	18
Bluetooth.....	18
Torch light.....	19
Calendar	19
Word clock.....	19
Calculator.....	19
<i>Camera</i>	20
<i>Services</i>	20
Internet service	20

Basic Information

Brief Introduction

Thank you for choosing Tempo mobile phone. You can read the manual, a comprehensive understanding of the use of mobile phones and enjoy its perfect functionality and simple method of operation.

Tempo supports two SIM cards function. In addition to basic call functions, but also to provide you with phone book, personalized ring tones, alarm, camera, image viewer, video recorder, video player, audio player, FM, One Memory Card (T-Flash card), calculator, calendar, torch etc. A variety of practical features to facilitate your work and leisure activities, in addition, Tempo interface with personalized mobile phone design, its perfect functionality to meet your needs.

Our Company reserves without any prior notice the contents of this manual under the right to make changes.

Safety Notice

If your phone is lost or stolen, immediately notify the telecommunications sector, or its outlet, to disable the SIM. This will allow you to take phone calls from other economic loss arising.

To make you more secure use of mobile phones, please take precautionary measures, such as:

- Set up mobile phone SIM card PIN password, PIN password to prevent your SIM is unauthorized use by others.

Cleaning and Maintaining

Do not use the bathroom where high humidity, cell phone, battery and charger, the same should also avoid the rain.

Use a soft, dry cloth to clean the phone, battery and charger.

Dirt outlet will lead to poor contact, power-down, which does not charge, regular cleaning.

Before Using

SIM

Before using your phone you must insert a valid SIM (Subscriber Identity Module) card. SIM card provide by the network provider.

Warning: Be sure to remove the SIM phone off before. There is absolutely prohibited in the case of an external power supply connected to insert or remove the SIM, or SIM card and mobile phone may be damaged.

Phone Unlock

In order to prevent illegal use, your phone can set the phone lock password protected. Use this function, you must enter the phone lock password so that you can unlock the phone into the normal use state.

Enter the phone lock password, press the **LSK** to confirm. For example, if the phone lock password is set to 1122, then the following input: **1122 OK**

SIM Unlock

In order to prevent illegal use of your SIM with PIN (Personal Identification Number) password encryption protection. Use this function, if you have set the PIN password protection, every time you must enter the PIN password at boot time, so that you can unlock the SIM card and phone to normal use.

Enter the PIN password, press the **LSK** to confirm. For example, if the PIN is set to 1234, then the following input: **1234 OK**

If there consecutive incorrect, your SIM will be network locked, the phone will ask for PUK password.

Function menu Introduction

Phonebook

Press RSK in the idle or from the main menu to enter the phonebook.

You can use the phonebook to store records, can store the following: name and phone number.

In the phonebook list, select a record, to make a call when you press the dial keys.

Select a record in the phonebook, you can do the following:

- Check way** View the details or edit record.
- Send SMS message** Send SMS to this number.
- Call** Make a call to the number.
- IP dial** Make an IP call to the number.
- Edit** Can edit and save record.
- Delete** Delete the record.
- Copy** Copy the current record to Phone/SIM.
- Mark several** Mark several or all records can send text message or deleted.

Phonbook settings

- Preferred storage** can be in the SIM1, SIM2, Phone and All to switch, and phonebook list will change accordingly, such as select SIM1, the phonebook list will only show SIM1 records.
- Speed dial** Open the speed dial, the dial-up interface, long press the number keys to dial the numbers corresponding to achieve the record.
- Extre numbers** can be set SIM owner numbers and fixed dialing numbers.
- Memory status** View the usag and free Phonebook capacity information.
- Copy contacts** if select SIM to phone, the SIM card records of all telephone numbers copied to the phone
- Move contacts** you can select the SIM records of all mobile phone numbers move to the phone, also you can switch the option to operate.
- Delete all contacts** you can delete all contacts in SIM card or phone and all records are deleted.

Messaging

Write message

Text message:

Make sure that the information in writing before the message center

number is set correctly.

Access to an information menu, you can edit the SMS, press the LSK to enter the "Options" menu:

Send to After editing the information, select the operation, enter the number manually, or add records from the phonebook, you can do **send, Edit recipient, Remove recipient, Remove all recipients, Save to Drafts** operations. Sent SMS to one or more persons, and storage to Drafts.

Insert symbol offer many kinds of symbols to choose.

Input method Offer many kinds of input methods to choose from.

Save SMS save to drafts.

Enter the **Advanced** menu

Insert object Insert object such as picture、 my picture

Insert number Insert number into SMS from phonebook.

Insert name Insert the name of the record into SMS from phonebook.

Text format Can set text format such as size、 style...

Multimedia message:

New MMS, you can edit, multimedia messaging, the recipient can be a phonebook number. You can add text information, pictures, sound, audio, video and subject.

MMS editor is completed, you can choose Send or Save to Drafts, Also you can preview it before sending.

Inbox

In list of inbox, you can press the OK key to read the message details, In the inbox interface, press LSK "Options" to enter the menu:

Check way Enter the message reading interface to view the message' s details.

Reply by SMS Send SMS to the sender.

Reply by MMS Send MMS to the sender.

Call sender Make a call to the sender.

Forward Send the message to other people.

Delete Delete the message.

Delete all Delete all messages.

Save to Phonebook Save the number to phonebook.

Delete several

Can mark several to delete

Drafts

Edit the SMS not sent but stored in the draft, the detail features, please refer to "Inbox".

Outbox

Go to the Outbox list view your SMS are not sent successfully. the detail features, please refer to "Inbox".

Sent messages

Open the message set in the "Save sent message", send the information after the success of information stored in the Sent, detail features, please refer to "Inbox".

Message settings**Text message:**

SIM1\SIM2 This menu can set SMSC address、 validity period、 message type、 delivery report、 reply path and **voicemail server** function。

Voicemail server: When you can not answer the phone, automatically incoming calls to voice mail number, you can let the other party to your message, a message stored in the network's voice mail system; afterwards, you can access the voice mail system to listen to a message. Into the voice mailbox or to connect to voice to listen to voicemail achieve.

Save sent message Open the "**Save sent message**", messages sent after a successful save the sent message, if you turn off this feature, you will not be saved.

Note: This function needs the network operator support.

MMS settings:

MMS network can be edited.

Sending and Retrieval settings accepted to modify editing.

Filter, may refuse to accept anonymous advertising information.

Storage status, you can view the message has been using and storage space, and usage.

You can set the preferred storage as Phone or Memory card.

Call logs

Missed calls

Enter the missed call menu, will display the missed calls list. Select missed call records, press the OK key to enter "Options":

- **Check way** View the details.
- **Call** Call the record number.
- **Send SMS message** Send SMS to record number.
- **Save to Phonebook** Save the number to the phone or SIM card.
- **Delete** Delete the number

Dialled calls

Enter the dialled calls menu to display the current record of outgoing phone list of phone numbers.

Please refer to Missed calls for details.

Received calls

Enter the received calls menu to display the current record has been received mobile phone number list.

Please refer to Missed calls for details.

Delete call logs

Delete all calls from dialled calls、 missed calls、 receive calls and all calls.

Settings

Dual SIM settings

Chosse open or close SIM card's function. If there are no SIM cards in the card ports, then you can not do operations with the card.

The SIM cards' function will active when you open the SIM card.

Call settings

Enter the call set up sub-menu, you can make the following settings:

Call waitting

Open this feature, during the call if the new call, the network will notify you. Specific use with your network provider.

- **Avtivate** lanch the function.
- **Deactivate** Close the function.
- **Query status** Query the function's status.

Call divert

Network Call Transfer service allows you to call a business case in a default transferred to a phone number you specify.

The features include: Divert all voice calls, Divert if unreachable, Divert if no answer, Divert if busy, Divert all data calls. Enter the corresponding Transfer menu, you can do the following:

- **Acitvate** Transfer the current call forwarding setting number.
- **Deactivate** Call transfer prohibited.
- **Query status** Check the satus of this function.

After setup is complete, when, when you do not need call forwarding, you can cancel all diverts to prohibit the use of the above functions.

Call barring

Into the "Call barring" sub-menu, you can set the following call barring any combination to improve security. Some network providers may not provide this service call restrictions, specific use, please contact your network provider. Network provider will provide a four-ban password so that you can enable call restrictions.

Change the password to enter the old call barring password, set new restrictions on the password.

Line switching

In line 1 and line 2 to switch between, choose line 1, can be a normal call, send text messages and so on. Select line2, you can receive a call but not make a call.

Advanced settings

Auto redial:

Through on / off settings, to activate or disable the feature. Turned on and when your phone call after another failed attempt to connect up to redial 10 times. This feature can save you the trouble of repeated calls.

IP dial:

Mobile phone support IP dialing, editing set up to three IP numbers. When you are in the phone book, the selected number and press the OK key to select "Options", select the IP dial-up when the mobile phone before the number that will be activated automatically with the current IP number, and exhaled.

IP number is recorded in the selection of a state, press the LSK to select "option" can be

Activate Select SIM card to activate the function.

Deactivate Select SIM card to deactivate the function.

Eidt Edit the IP number.

Call time reminder:

In this menu can prompt a certain length of time to set up the call, according to the menu function mode in order to select the following tips:

Off Close the function.

Single Enter any numbers between 1-3000(sec), which arrived at the selected time (seconds) of talk time when prompted.

Periodic Enter any number between 30-60 (sec), from the input time (in seconds), the intervals of 1 minute for talk time tips.

Answer mode:

Any key and **Anto answer when headset mode** two choices for selecting. When you select any key, press any key outside power key and RSK can answer the call.

Phone settings

Into the phone settings sub-menu, you can make the following settings:

Time and Date

In this menu, you can move the phone time and date settings. The menu consists of three sub-menu:

Set home city: The city a total of 78 international cities by selecting different cities, change the mobile phone area.

Set time/date: Set time and date are set according to the established format and on / off daylight saving function. Phone allows you to set a calendar from 2000 to 2030 between the dates. If daylight saving is set to open, then the phone time to add in the original time of one hour or one hour later.

Set format: Set time and data's form

Update with time zone: On /off update with time zone

Schedule power on/off

Enter this menu, display auto power on and auto power off menu, enter into power on\off menu can set two times.

Language

Phone supports many kinds of language for you to select. Set the current language type, then menu and interface refresh for the corresponding language.

Pref. input method

The phone supports many kinds of methods, to choose an input method as the default when the initial input.

Display

Wallpaper: Wallpaper set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user defined, by browsing the [File manager] photos folder identified as a wallpaper.

Screen auto lock: Mobile phones set to set the Auto key lock function, identify lock set into the keyboard interface, you can choose to turn off, respectively (keyboard auto lock function is invalid), 15 sec, 30 sec, 1 min, 5 min, if in idle screen has no any operation, automatically

locks the keyboard.

Power on display: power on display set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user defined, by browsing the [File manager] photos folder identified as a wallpaper.

Power off display: Power off display set in two ways: First, through the navigation system comes with the wallpaper and select; the second is user defined, by browsing the [File manager] photos folder identified as a wallpaper.

Show date and time: Display date and time to do On / Off settings, to determine whether the date and time displayed on the idle screen.

Shortcuts

Shortcuts interface, press LSK key into option, it display add、edit、delete、delete all and change order.

Dedicate key

Set up, down ,left and right key for any functions of you want

Flight mode

Turn On/Off the Normal or Flight mode. If you select Flight mode, SIM cards' function will not active.

UART settings

You can set it as any SIM card.

Misc. settings

Set the brightness and time .LCD brightness settings are divided into five level, the time can be set to any time between 5-60 seconds. When you set the time interval without any operation, LCD backlight will turn black light.

Network settings

Network selection

New search: Re-search network.

Select Network: Search Network, you can choose from a list of networks you need to network.

Selection mode: Press the left soft key to select automatic or manual mode. Automatic, mobile phone SIM card information is automatically selected according to service provider; manually, choose manually select the network services, mobile phone search to get the current list of service providers for users to select the service provider SIM card type.

Preferences

Preferences, that mobile phone networks in the search process, the preferred provider. Enter the menu will list the current user to customize the priority list of network providers, the left soft key "Options" menu includes the following:

Change priority: The preferred network provider to change the current priority of the selected network.

Delete: Delete the currently selected provider.

Security settings

Into the "Security Settings" menu, you can set the phone's security options, mobile phone or SIM card to avoid unauthorized use.

SIM security settings

PIN lock

SIM card PIN password to lock the completion of your SIM card to prevent unauthorized use.

If the current SIM card lock is closed, select Open to open the SIM card, enter the PIN lock password, the next boot requires that you enter the correct PIN password to enter;

If the current SIM card lock is on, select off to close the PIN lock protection.

Change PIN: If the current PIN password lock has been activated, you can re-set on the PIN password

Change PIN2: PIN2 old to enter the correct password, you can set on the PIN2 password.

Phone security

Phone lock:

Phone lock password can prevent your mobile phone stolen by others. Select On to open phone lock password to enter the correct password-protected phone lock open, the next boot requires that you enter the correct password to enter the phone lock.

Change password:

Change the phone password, enter the old password and then enter a new password. Phone default password is 1122.

Connectivity

Into the connectivity menu, it displays the data account, press the ok option into the data account list and press option, include edit, add ps account, delete and set as default

Restore factory settings

In this menu, enter the phone lock password, once determined, the phone automatically reboots the phone after the relevant parameters can be set to return to the case of mobile phone factory. The default password is 1122.

Multimedia

Image viewer

Select an album sub-menu, you can easily view stored in the camera album picture list, and press the LSK to enter to "Options" to choose the pictures to do the View, Image information, Browse style, Send, Use as, Rename, Delete, Sort by, Delete all files and change Storage operations. View pictures, by clicking on the left and right navigation buttons to switch pictures.

Video recorder

Camcorder settings: Recorder settings including EV, Night mode, Anti-flicker operation of content regulation.

Video settings : Including video quality.

White balance: Set the white balance state.

Effects settings: Video effects settings are set.

Storage: storage location can be set as Phone and Memory card, shooting the video will be saved to the specified location.

Restore default: Set all parameters to default settings

Video player

Choose video player sub-menu, you can easily view the saved video player in the video list, press the LSK to enter "Options" to select the video files to do the play, send, rename, delete and sort by operation.

Send the video via Bluetooth if you want.

Audio palyer

In the Audio player interface, you can press left and right keys to switch the music; press * and # keys to adjust the play volume.

In the Audio player interface, press the left soft key to enter "list" menu and enter the current playlist to play in the option list can be any of a music file to play.

Select a music file to enter the settings options, you can top of the screen prompts the items content specific settings of each item:

Pre.playlist: Can select the preferred list, Phone or Memory card. If you choose a memory card, then show the all music files in memory.

List auto gen.: To switch to this setting. When this feature is set on, you can perform the "Refresh Playlist" operation.

Repeat: Can be set as off (no repeat), one, all.

Shuffle: Random order of play set, respectively, can be set to on and off.

Background play: Set the background play on, you can make mobile phone in other user interface and also play music. Set as off, the music will not play when out of the Audio player.

Sound record

In the sound recorder interface click “option”, it shows the items of record.

New record Start a new record. If you click stop, it will pop up a dialog box to prompt you save it or not. If you click pause, it will suspend recording, and then click continue, it can record again.

List it displays the sound that you recorded and saved in the memory card.

Settings you can set the file storage and audio quality of the record.

FM radio

FM interface, press the OK key to turn on / off FM play, press the right navigation key to automatic search, press *and # keys to adjust the FM playing volume.

Press the left soft key "Options" can show FM options menu, the content were:

Channel list: Shows FM channel list.

Manual input: Can be their own editors to manually enter the channel frequency, the effective value of 87.5 ~ 108.0

Auto search: Auto search FM channels in the channel list.

Settings: Can on/off the background play.

Record record current Fm raiod

File list It displays the sound that you recorded and saved in the memory card.

Bluetooth

This mobile phone support Bluetooth wireless connection. You can establish wireless connection between mobile phone and device to realize voice communication, data exchange and synchronization. Press left soft key to do options

Open the bluetooth, for file transfer and acceptance

File manger

Into the File manager menu, the menu display **GLX MOBILE** and **Memory card**.

Root directory, select " **GLX MOBILE** ", press the **LSK** to enter

"Options" can be as follows:

- **Open** Open the root directory lists the directories and files.
- **Format** Format the memory card, this action will remove all current flash memory data.

Root directory, select **"Memory Card"**, press the **LSK** to enter

"Options" can be as follows:

- Open** Open the root directory lists the directories and files.
- Format** Format the memory card, this action will remove all current flash memory data.
- Details** more information you can view, such as Name, Total size, free size.

You can play the music or video files, view Photo, copy/move/delete files, rename files and so on.

You can send the file through **Bluetooth**.

Fun

Games Into this menu display snake and game setting.

User profile

Profile including General、Silent、Meeting、Outdoor. First, based on the current scene, select a different profile, then you only need a personal profile can be set and activated.

General: General environment.

Silent: For Silent environment.

Meeting: For meeting the environment, to be pre-set (for example: ring mode can be set to vibration).

Outdoor: For outdoor activities, need to pre-set (for example, ring volume can be set to a higher state).

Headset: Headset environment. (please insert headset)

Press the left soft key "Options":

Activate: Enable the selected profile.

Customized settings

Alert type: Can choose to Ring only, Vib. Only, Vib.and ring, Vib.

Then ring as the current method.

Ring type: You can choose repeat and beep once two types.

Ringtone According to their own preferences set ringtones 1-20, can also be set from the memory card custom ringtones

Ringtone volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Message According to their own preferences set ringtones 1-10.

Message volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Keypad you can set keypad as silent、click and tone

Keytone volume In the volume control interface, you can volume up and down navigation keys on the set. Volume level is divided into seven, 1-7, followed by increases.

Power on\off According to their own preferences set ringtones 1-10.

System alert can on\off system alert

Alarm

Five alarm can be set up (turned off the alarm is still valid.)

Select and edit an alarm clock: Can setting alarm on / off, Time, Snooze(min),Repeat,alarm tone, and Alert type. You can choose to set to repeat: Once, Everyday, Custom.

Tools

STK

STK Display Operators's information.

Bluetooth

Power: Activate Bluetooth on or off the Bluetooth function.

Visibility: If set as on, other devices can search this Bluetooth device; if set as off, other devices can not search this Bluetooth device.

My device: Can search for nearby Bluetooth devices.

Search audio device: Free devices to search for near-free decoration, such as Bluetooth headsets.

My name: The Bluetooth device name can be modified.

Torch light

Into to electric torch menu, can on\off electric torch.

Calendar

Enter calendar sub-menu, the screen will show a calendar month, and other background box with the current date marked. Press the up, down, left, and right navigation keys to change the date, calendar information on the screen will be updated accordingly.

Press the left soft key "Options" option to display the calendar menu, and content as follows:

Jump to date: Can quickly jump to a specified date to a specified date.

Go to today: Switch to the system today, setting the current date.

Word clock

In the world clock interface, users click right or left button can change region and time. Press "option", you can set on or off daylight saving time for foreign city or not. If select on, the present time will increase one hour. Otherwise, it displays local time.

Calculator

Your phone provides you with the basic arithmetic operations can be a function of the calculator, easy simple operation.

Press the left soft key "Clear" or stylus to click on the "Clear" can be cleared.

Press the right softkey "Back" to exit the calculator.

Note: This calculator has limited accuracy and rounding errors will be generated, especially in addition to endless time. When the calculation of range, the display area will use the letter "E" to represent.

Camera

The phone includes high-definition camera, you can take pictures anytime, anywhere, and to save the photos to your phone or memory card.

State in the preview, press the LSK to enter "Options" you can do this to conduct a more detailed set of parameters.

Photos: Photo album shows the current list of files.

Camera settings: Including **Anti-flicker**, **Delay timer** setting operation contents of the regulation. Been adjusted, press the LSK "OK" to save the current settings.

Image settings: Include the Image size and image quality regulation.

White balance: Set the white balance state.

Scene mode: Including Auto and Night scene mode.

Storage: storage location can be set as Phone, Memory card, the captured image will be saved to the specified location.

Restore default: Set all parameters to default settings.

Services

Internet service

In the internet service interface, it has includes the following items:

Home page Log on homepage, you will find it is a WAP website that you setted.user can set it by themselves.

Bookmarks t has default bookmarks, yahoo. You can go to relevant website conveniently. Users can add bookmarks by themselves.

Input address You can edit any website you want, but it is effective

Recent pages It records the website that you browsed

Settings it includes following items to users to set: homepage, data account, browser options, preferences settings.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of

the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 0.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use.

Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 0.5cm is 1.378W/kg; next to the head is 1.451W/kg. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including

interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.