


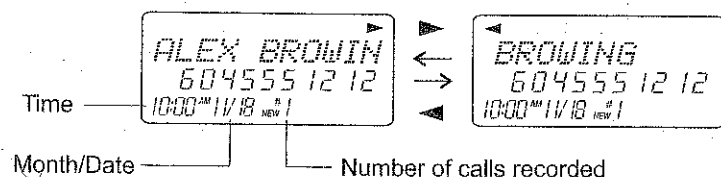 
## Caller ID System

This telephone automatically displays an incoming caller's name and telephone number together with the date and time of the call. It records up to 80 calls and stores the data in Memory.

**IMPORTANT:** You must subscribe to the Caller ID service from your local telephone company to utilize this feature.


### Viewing Caller Information During Incoming Calls

 1. When there is an incoming call, the name and the telephone number of the caller will automatically appear after the first ring. Press the SHIFT RIGHT  button to view a name of more than 11 digits.




OR  
Caller's telephone number will appear if the caller's name is not available.

OR  
"OUT OF AREA" will appear if the origin of the incoming call does not support the Caller ID system.



 OR  
"UNKNOWN" will appear if the origin of the incoming call has no name and does not support the Caller ID system.



Unknown name  
U is Out of Area

OR  
"PRIVATE" and/or "P-- ---" will appear if the caller's name and/or telephone number is blocked.

OR  
"EXT IN-USE" will appear when an extension phone is being used.

OR  
"DATA ERROR" will appear if the wrong data was received from the telephone line.

OR  
The name stored in the DIRECTORY will appear for an incoming call with matching telephone numbers.



### "MSG WAITING" (Message Waiting)

  The MSG WAITING GREEN LED indicator will blink when there is a message for you from your telephone company if you have subscribed to Voice Mail message service and if you have requested Visual Message Indication from your local telephone company. "MSG" will appear on the LCD Screen in STANDBY mode. (To remove the MESSAGE WAITING indicator, see page 25 for detail.)

## Call Waiting

When you subscribe to a Call Waiting service from your local telephone company, this telephone will display the name and number of the second caller while you are having a phone conversation with your first caller.

1. When you are having a conversation, this telephone will automatically display the name and number of the second caller. The name will be blinking.
2. Press the **flash/edit** button to answer the second caller. The first caller's name and number will be displayed. The name will be blinking.
3. When you have finished, press the **flash/edit** button to continue with your conversation with the first caller.

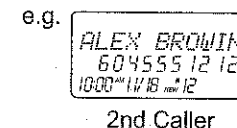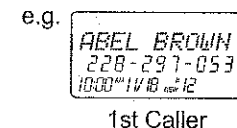

If you do not want to interrupt your phone conversation with the first caller, you can advise the second caller to leave a Voice Mail message instead.

## Voice Mail Function

When there is a Voice Mail message for you, this telephone emits a Stutter Dial Tone and at the same time the "MSG" icon on the LCD Screen and the MESSAGE WAITING LED indicator will blink.

1. To access your Voice Mail message, press the **talk** button.
2. After you hear a dial tone, press the **voice mail** button. This will automatically dial the Voice Mail Post Code in your area and connect you to the Voice Mail service provider.

**NOTE:** You should store the Voice Mail Post Code number by using the VOICE MAIL function on page 25. You can also call your Voice Mail service provider by dialing the Voice Mail Post Code number after pressing the **talk** button.

## "C-F" (Forwarded Call)

 
Appears on the upper left hand side, when the incoming call has been assigned to your telephone number.

## "L-D-C" (Long Distance Call)

Appears on the upper left hand side, when the incoming call is a long distance call and the service is provided by your local telephone company.

## Caller List


Records call information for up to 80 incoming calls such as caller's name and telephone number together with the date and time of the call. After recording a new incoming call, the NEW CALL indicator will blink and the LCD Screen will look as shown below:








No. of new calls.  
Maximum calls = 80

## Caller ID System Operation

### Speed Viewing the DIRECTORY


1. Press the **dir** button.
2. Enter the first letter of a name. (See page 26 for detail of entering a letter.)
3. Press the SCROLL DOWN  button to find all names with the same first letter.

### Saving in the DIRECTORY


1. Press the **dir** button.
2. Press the **flash/edit** button.
3. Use the TELEPHONE KEYPAD  ~  buttons to enter the name, (see page 26 for detail) you can store up to 18 characters.
4. Press the SCROLL DOWN  button once.
5. Enter the telephone number using the TELEPHONE KEYPAD  ~  buttons. You can store up to 22 digits.
6. Press and hold down the **re/pa save** button.
7. Press the **dir** button to return to STANDBY mode. (If no active buttons are pressed for 20 seconds, the LCD Screen will automatically return to STANDBY mode.)

**NOTE:** It will not save a duplicate telephone number or a name without the corresponding telephone number in the DIRECTORY.

### PREFERRED CALLS



You can assign PREFERRED CALL which will generate a special ring sound at the start of the second ring to any welcome caller in the DIRECTORY. When you are saving the name and number into the DIRECTORY, add a "#" mark at the beginning of the name by pressing the TELEPHONE KEYPAD  button.

 
### BLOCKED CALLS

You can assign a BLOCKED CALL which will disable the ring sound from the second ring to any caller in the DIRECTORY. When you are saving the name and number into the DIRECTORY, add an "\*" mark at the beginning of the name by pressing the TELEPHONE KEYPAD  button.

 
## Caller ID System Operation

### Editing the Name and Number in the DIRECTORY



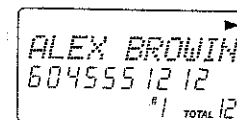



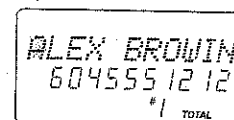



1. Press the **dir** button.
2. Press the SCROLL UP  or DOWN  button to find the record you want to edit.

 


3. Press the **flash/edit** button to edit the name.



cursor is blinking

4. Press the SHIFT LEFT  or RIGHT  button to move the cursor to the letter or number you want to change. To add, use the TELEPHONE KEYPAD  ~  buttons. (See page 26 for details.) To erase, press the **scan/del** button.
5. Press the SCROLL UP  or DOWN  button to edit the number.
6. Press the SHIFT LEFT  or RIGHT  button to move the cursor to the number you want to change. To add, use the TELEPHONE KEYPAD  ~  buttons. See page 26 for details.) To erase, press the **scan/del** button.  
e.g.



cursor is blinking  
on the number.

7. Press and hold down the **re/pa save** button to confirm.


**IMPORTANT:** It is not advisable to save a telephone number without the corresponding name in the DIRECTORY. This will lead to improper displays on Private and Out of Area calls.

**NOTE:** When no active buttons are pressed for 20 seconds, the LCD Screen will automatically return to STANDBY mode.

## Caller ID System Operation
 
### Editing the Number in the DIRECTORY before Dialing

1. Press the **dir** button.
2. Press the SCROLL UP or DOWN button to find the caller.
3. Press the **flash/edit** button to edit the number.
4. Press the SCROLL DOWN button.  
e.g.



cursor is blinking  
on the number.

5. Press the SHIFT LEFT or RIGHT button to move the cursor to the number you want to change.  
To erase, press the **scan/del** button.  
To add, use the TELEPHONE KEYPAD ~ buttons.
6. Press and hold down the DIAL 7 button for a local call, or press and hold down the DIAL 10 button for a local call with area code, or press and hold down the DIAL 1+ button for a long distance call.
7. To end your conversation, either press the **talk** button or place the **HANDSET** on the **BASE UNIT**.

NOTE: If you want to save the edited number in the DIRECTORY, follow steps 1 through 5 and then press and hold down the **re/pd save** button.


## Caller ID System Operation
 
### Placing Calls from the DIRECTORY

1. Press the **dir** button.
2. Press the SCROLL UP or DOWN button to find the record you want to call.
3. Press and hold down the DIAL 7 button for a local call, or press and hold down the DIAL 10 button for a local call with area code, or press and hold down the DIAL 1+ button for a long distance call.
4. To end your conversation, either press the **talk** button or place the **HANDSET** on the **BASE UNIT**.

### Deleting All Records in the DIRECTORY


1. Press the **dir** button.
2. Press and hold down the **scan/del** button while in STANDBY mode.



3. Press the **dir** button to return to STANDBY mode.

### Selective Deleting in the DIRECTORY

 1. Press the **dir** button.
2. Press the SCROLL UP or DOWN button to find the record you want to delete.
3. Press and hold down the **scan/del** button, then the LCD Screen will display the next record in the DIRECTORY.



4. Press the **dir** button to return to STANDBY mode.


## Caller ID System Operation
 
### Function Operation


This unit contains the following special functions:

- |                  |                |
|------------------|----------------|
| A. LANGUAGE      | F. PBX NUMBER  |
| B. SILENT ON/OFF | G. FLASH TIME  |
| C. TIME SET      | H. PAUSE TIME  |
| D. RINGER VOLUME | I. VOICE MAIL  |
| E. LCD CONTRAST  | J. MSG WAITING |


To access, press the button while in STANDBY mode, then press the TELEPHONE KEYPAD ~ buttons or the SCROLL DOWN button.

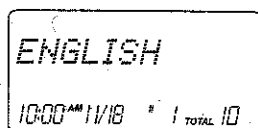


KEYPAD Button

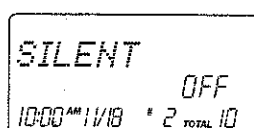 


KEYPAD Button

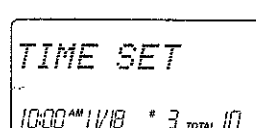 


KEYPAD Button

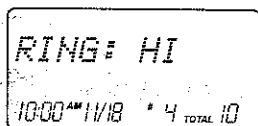 


KEYPAD Button

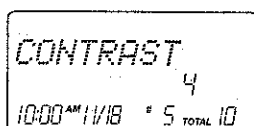 


KEYPAD Button

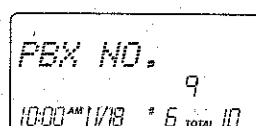 


KEYPAD Button

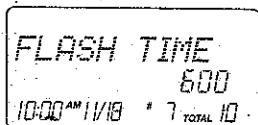 


KEYPAD Button

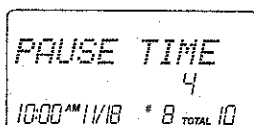 

KEYPAD Button

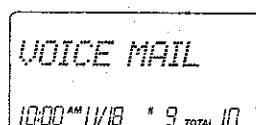 

KEYPAD Button

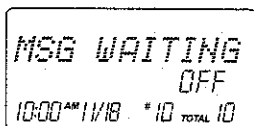 

KEYPAD Button

## Caller ID System Operation

### A. LANGUAGE

This telephone offers English, Spanish and French languages for your convenience.

1. Press the button.
2. Press the TELEPHONE KEYPAD button.
3. Press the button.
4. Press the SCROLL UP or DOWN button to select the language you desire. You can also set the language by pressing the following TELEPHONE KEYPAD buttons; for English, for Spanish, or for French. English is the preset language.
5. Press and hold down the button.
6. Press the button to return to STANDBY mode.

### B. SILENT ON/OFF

This telephone will generate the first ring sound even in the BLOCKED CALL mode to indicate that you have an incoming call. To keep silent in the BLOCKED CALL mode, you can turn off the first ring sound.

 
1. Press the button.
2. Press the TELEPHONE KEYPAD button.
3. Press the button.
4. Press the SCROLL UP or DOWN button to select the SILENT ON/OFF setting. You can also press the TELEPHONE KEYPAD buttons; for ON or for OFF. SILENT OFF is the preset mode.
5. Press and hold down the button.
6. Press the button to return to STANDBY mode.

### C. TIME SET

Set the date and time.

1. Press the button.
2. Press the TELEPHONE KEYPAD button.
3. Press the button.
4. Use the TELEPHONE KEYPAD button to enter the month, date, hour and minute. The cursor moves automatically after entering each item. Press the TELEPHONE


 








## Caller ID System Operation

6. Press the  button to return to STANDBY mode.

 **NOTE:** The date and time will automatically set, if you have subscribed to the Caller ID service from your local telephone company.








### D. RINGER VOLUME

This function enables you to adjust the ringer volume from HI, LOW and OFF as desired.

1. Press the  button.
2. Press the TELEPHONE KEYPAD  button.
3. Press the  button.
4. Press the SCROLL UP  or DOWN  button to adjust the ringer volume suitable for your convenience. You can also adjust the ringer volume by pressing the following TELEPHONE KEYPAD buttons;  for OFF,  for HI, or  for LOW. HI is the preset ringer volume.
5. Press and hold down the  button.
6. Press the  button to return to STANDBY mode.



### E. LCD CONTRAST

This unit enables you to select 8 brightness levels for the Large LCD Screen.




 
1. Press the  button.
2. Press the TELEPHONE KEYPAD  button.
3. Press the  button.
4. Press the SCROLL UP  or DOWN  button to adjust the brightness of the LCD Screen. Level 4 is the preset brightness.
5. Press and hold down the  button until a confirmation "beep" is heard.
6. Press the  button to return to STANDBY mode.

### F. PBX NUMBER

This unit will automatically operate in the PBX MODE ON system. You can preset the PBX number (such as an 8 or 9) while you are using a switchboard system.

1. Press the  button.
2. Press the TELEPHONE KEYPAD  button.










## Caller ID System Operation

4. Press the SCROLL UP  or DOWN  button. (OFF is the preset PBX number.)  
PBX MODE OFF - set for direct line access.
5. Press and hold down the  button.
6. Press the  button to return to STANDBY mode.

**NOTE:** When placing a call, this telephone will automatically add the PBX number and a pause time before the dialed telephone numbers.








### G. FLASH TIME

This unit enables you to select the standard FLASH TIME applicable to your calling area. If you are not sure of the FLASH TIME you are using, call your local telephone company.

1. Press the  button.
2. Press the TELEPHONE KEYPAD  button.
3. Press the  button.
4. Press the SCROLL UP  or DOWN  button to select the FLASH TIME. You can also set the FLASH TIME by entering the FLASH TIME number using the TELEPHONE KEYPAD  ~  buttons. The preset FLASH TIME is 600 milliseconds.
5. Press and hold down the  button.
6. Press the  button to return to STANDBY mode.

### H. PAUSE TIME








This unit enables you to adjust the PAUSE TIME when placing a call using a switchboard system or dialing a Long Distance calls.

1. Press the  button.
2. Press the TELEPHONE KEYPAD  button.
3. Press the  button.
4. Press the SCROLL UP  or DOWN  button to adjust the pausing time. The preset pause time is 4 seconds.
5. Press and hold down the  button.
6. Press the  button to return to STANDBY mode.

## Caller ID System Operation








### I. VOICE MAIL

This telephone enables you to store the Voice Mail Post Code number in your area. This will automatically connect you to the Voice Mail service provider with one-touch dialing.

1. Press the  button.
2. Press the TELEPHONE KEYPAD  button.
3. Press the  button.
4. Enter the Voice Mail Post Code number by using the TELEPHONE KEYPAD  ~  buttons.
5. Press and hold down the  button.
6. Press the  button to return to STANDBY mode.

### J. MSG Waiting (Message Waiting)

To turn off the Message Waiting LCD Screen indicator.

1. Press the  button.
2. Press the TELEPHONE KEYPAD  button.
3. Press the  button.
4. Press the SCROLL UP  or DOWN  button.
5. Press and hold down the  button.
6. Press the  button to return to STANDBY mode.



#### IMPORTANT:

Message Waiting LCD Screen indicator will automatically turn ON, if you have subscribed to Voice Mail message service and if you have Visual Message Indication from your local telephone company.

**IMPORTANT**

## Caller ID System Operation






### TELEPHONE KEYPAD Characters



The TELEPHONE KEYPAD  ~  buttons are used to enter characters when entering names. You can enter names in the UPPER CASE or LOWER CASE letters. Press the appropriate TELEPHONE KEYPAD button to get the following characters.

KEYPAD BUTTONS	CHARACTERS
1	SPACE 1 & ' ( ) .
2	ABCabc2
3	DEFdef3
4	GHIghi4
5	JKLjkl5
6	MNOmno6
7	PQRSpqrs7
8	TUVtuv8
9	WXYZwxyz9
*	*
0	0
#	#

#### EXAMPLE:

If you want to enter the characters "Abc" on the **HANDSET** LCD Screen.

1. Press the  button.
2. Press the  button.
3. Press the TELEPHONE KEYPAD  button, "A" will be displayed. The cursor will automatically move to the next character after 2 seconds.
4. Press the TELEPHONE KEYPAD  button for 5 times to display "b."
5. Press the TELEPHONE KEYPAD  button for 6 times to display "c."

The cursor will automatically move to the next character within 2 seconds after entering the first character. Press the SHIFT RIGHT  button to produce a space. If you want to change any character, you can go back to the incorrect character by pressing the SHIFT LEFT  button. To delete the character inside the cursor "█", press the **scan/del** button.

## Security System

Your cordless telephone uses a digital coding security system to prevent unauthorized use of your telephone line by another nearby cordless telephone. The system has its own identifying signal created by microcomputers in both the **BASE UNIT** and the **HANDSET**.

## Security Code

This telephone has an internal security code with 65,536 possible combinations.

## Resetting Security Code and Channel Information

Communication between the **HANDSET** and the **BASE UNIT** may not be possible in any of the following situations:

1. After a power failure.
2. After relocating the **BASE UNIT** by disconnecting the AC ADAPTOR.
3. After replacing the **HANDSET BATTERY PACK**.

To reset, place the **HANDSET** on the **BASE UNIT** for 2 to 5 seconds.

## Multi-Channel Access

Your cordless telephone lets you select a channel from the 40 frequencies available to transmit signals between the **BASE UNIT** and the **HANDSET**. When you notice interference from other cordless telephones, change to another channel by pressing the **scan/de** button on the **HANDSET**.

## Battery Type

Use the following type and size of **BATTERY PACK**:

Cordless Telephone **BATTERY PACK**  
3.6V, 600mAh  
U.S. Electronics Inc.  
Ni-Cd **BATTERY PACK**: Model B650



Ni-Cd

This **BATTERY PACK** is available through:

**U.S. Electronics Service Center**  
105 Madison Avenue  
New York, NY 10016  
1-800-828-5208

**NOTE:** During a power interruption, the **BASE UNIT** does not operate, and a phone conversation cannot be made on the **HANDSET**.

## Recharging the BATTERY PACK

The nickel cadmium (Ni-Cd) **BATTERY PACK** in the **HANDSET** can be recharged many times using the built-in charger in the **BASE UNIT**.

When the **BATT LOW** symbol appears on the LCD Screen, a "beep" sound will be heard every 10 seconds. This indicates that the **BATTERY PACK** needs to be recharged.

Charge the **BATTERY PACK** at least once every 90 days of non-use to avoid battery failure. When the **BATTERY PACK** can no longer be charged, replacement of the **BATTERY PACK** will be necessary.

The **BATTERY PACK** used in your telephone may develop a condition known as "MEMORY." Once subjected to a regular short discharging routine, the **BATTERY PACK** assumes the discharging pattern it was subjected to. This causes rapid discharging thereby shortening the **BATTERY PACK** charge span. If you believe your **BATTERY PACK** has developed a "MEMORY" condition, do not charge the **HANDSET** until the **BATT LOW** symbol appears on the LCD Screen. When the **BATT LOW** symbol appears on the LCD Screen, charge the **HANDSET** fully for 12 hours.

## IMPORTANT

In order to get maximum life from the **HANDSET BATTERY PACK**, be sure to charge the **HANDSET** for 12 hours before initial use.

### Changing the BATTERY PACK

 
The BATTERY PACK provides power for the **HANDSET** of your cordless telephone.

#### To Replace the BATTERY PACK:


1. Remove the **HANDSET BATTERY COMPARTMENT COVER** by sliding it down.
2. Pull out the BATTERY PACK PLUG and remove the BATTERY PACK.
4. Slide the **HANDSET BATTERY COMPARTMENT COVER** firmly into place in its closed position.
5. Before use, charge the new BATTERY PACK for 12 hours.

#### ATTENTION:

The telephone that you have purchased contains a rechargeable BATTERY PACK. The BATTERY PACK is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this BATTERY PACK into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

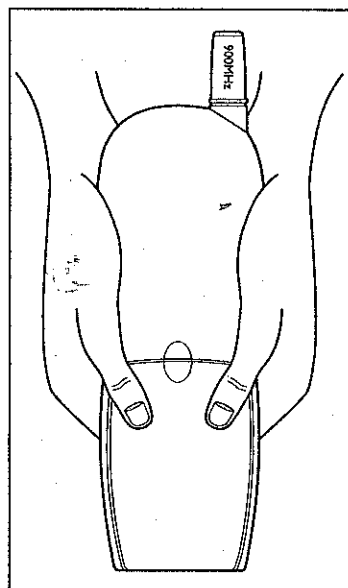

 Remove the **HANDSET BATTERY COMPARTMENT COVER** by sliding it down.

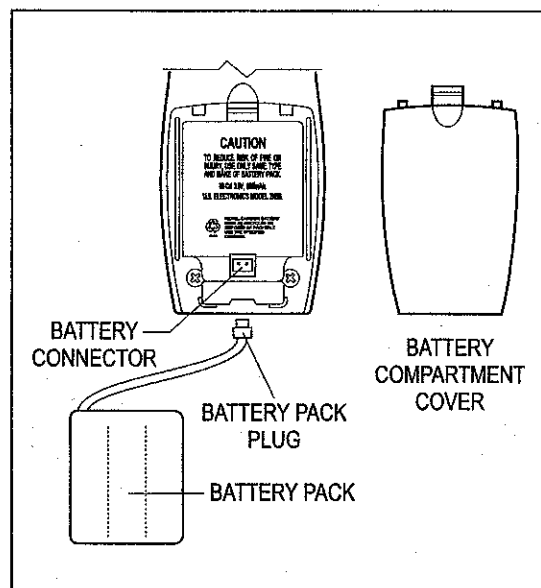

### Problem Solving Section

For your assistance, we have listed below a few common problems.

#### Phone does not work, check the following:

1. **BASE UNIT** is plugged into a power source.
2. **HANDSET** is charged.
3. TONE/PULSE Select Switch is in the right position.
4. TELEPHONE LINE CORD is plugged into the TELEPHONE JACK.

#### Range of phone limited, check the following:

1. ANTENNA on the **BASE UNIT** is raised.
2. **BASE UNIT** is centrally located in your residence.
3. **BASE UNIT** is not located near appliances.

#### No dial tone, check the following:

1. TELEPHONE LINE CORD plugs are connected to the TELEPHONE JACK and TELEPHONE LINE CONNECTION JACK.
2. **BASE UNIT** is plugged into a power source.
3. If you had a power failure or had unplugged the **BASE UNIT**, replace the **HANDSET** on the **BASE UNIT** for 2 to 5 seconds to reset the system.

#### Received signal flutters or fades, check the following:

1. BATTERY PACK in the **HANDSET** is fully charged.
2. **HANDSET** is not too far from the **BASE UNIT**.
3. ANTENNA on the **BASE UNIT** is raised.

#### Interference on reception, check the following:

1. Noise may be picked up from electrical products in the home or electrical storms. Generally, this noise is a minor annoyance and should not be interpreted as a defect in your system. (See Technical Information on page 31).
2. Choose an alternate channel using the **scan/del** button on the **HANDSET**.

#### Long Distance "L-D-C" indicator is not ON when receiving a long distance call, check the following:

1. Your local telephone company can provide the Area Code on an incoming long distance call.

#### Excess static, check the following:

1. Check to see that the ANTENNA is not touching another metal object.
2. Raise or reposition the **BASE UNIT** ANTENNA.

#### If after pressing the **talk** button, you receive three "beeps" and no dial tone, check the following:

1. **BASE UNIT** is plugged into a power source.
2. If you had a power failure or had unplugged the **BASE UNIT**, replace the **HANDSET** on the **BASE UNIT** for 2 to 5 seconds to reset the system.

#### NOTE:

If none of the telephones in the house are working, disconnect one set at a time to verify that none of the phones are causing the problem. If you still have a problem after doing this, and your telephone still does not work, please contact your local phone company.



## Technical Information

This cordless telephone uses radio frequencies to allow mobility. There are certain difficulties in using radio frequencies with a cordless telephone. While these are normal, the following could affect the operation of your system.

### Noise

Electrical pulse noise is present in most homes at one time or another. This noise is most intense during electrical storms. Certain kinds of electrical equipment such as light dimmers, fluorescent bulbs, motors, and fans also generate noise pulses. Because radio frequencies are susceptible to these noise pulses, you may occasionally hear them in your **HANDSET**. Generally they are a minor annoyance and should not be interpreted as a defect in your system.

### Range

Because radio frequency is used, the location of the **BASE UNIT** can affect the operating range. Try several locations in your home or office and pick the one that gives you the clearest signal to the **HANDSET**.

### Interference

Electronic circuits activate a relay to connect the cordless telephone to your telephone line. These electronic circuits operate in the radio frequency spectrum. While several protection circuits are used to prevent unwanted signals, there may be periods when these unwanted signals enter the **BASE UNIT**. You may hear clicks or hear the relay activate while you are not using the **HANDSET**. If the interference occurs frequently, it can be minimized or eliminated by lowering the height of your **BASE UNIT ANTENNA** or by relocating the **BASE UNIT**. You can check for interference before selecting the final **BASE UNIT** location by plugging in the telephone.

### NOTICE:

This cordless telephone uses radio communication between the **HANDSET** and the **BASE UNIT** and may not ensure privacy of communication. Other devices, including other cordless telephones, may interfere with the operation of this cordless telephone or cause noise during operation. Units not containing coded access may be accessed by other radio communication systems. Cordless telephones must not cause interference to any licensed radio service.

## IMPORTANT

When you hear interference, press the **scan/del** button to change the operating channel.

## Federal Communications Commission Requirements

This equipment complies with Part 68 of the FCC Rules. A label on the **BASE UNIT** of this equipment contains, among other information, the FCC Registration Number and the Ringer Equivalence Number (REN) for this equipment. You must, upon request, provide this information to your telephone company.

The REN is also useful in determining the quantity of devices that you may connect to your telephone line and still allow these devices to ring when your telephone number is called. In most areas, but not all, the sum of the RENs for all devices connected to one line should not exceed five (5.0). To be certain of the number of devices that you may connect to your line, you should contact your local telephone company.

If your equipment should cause harm to the telephone network, the telephone company may temporarily disconnect your service. If possible, they will notify you in advance that temporary discontinuance of service may be required. However, when advanced written notice is not possible, the telephone company may temporarily discontinue service without notice if such action is necessary under the circumstances. The telephone company may make changes in its communication facilities, equipment, operations, or procedures where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations of the Federal Communications Commission. **Do not attempt to repair or modify this equipment.**

**WARNING:** Changes or modifications not expressly approved by the party responsible for its compliance could void the user's authority to operate the equipment.

Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the **BASE UNIT** of the cordless telephone should not be placed on or near a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

This equipment should not be used on coin telephone lines. Connection to party line service is subject to state tariffs. If trouble is experienced, disconnect this equipment from the telephone line to determine if it is causing the malfunction. If the equipment is determined to be malfunctioning, its use should be disconnected until the problem has been corrected.

## IMPORTANT

Placing your **BASE UNIT** near appliances such as televisions, refrigerators, radios, or microwave ovens may cause interference.

**Federal Communications Commission Requirements (continued)**

**NOTE:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

1. Reorient or relocate the receiving ANTENNA.
2. Increase the distance between the equipment and the receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

**IMPORTANT**

When you hear interference, press the **scan/del** button to change the operating channel.

**Warranty Information****BellSouth Products****One-Year Limited Warranty**

This limited warranty sets forth all **BellSouth Products** responsibilities regarding your product. There are no other expressed or implied warranties from **BellSouth Products**.

**Warranty Service Provided**

If you purchased the telephone new from a retail vendor, **BellSouth Products** warrants the telephone against defects in material and workmanship for a period of one (1) year from the original date of purchase. This warranty is in lieu of all other expressed warranties. This warranty begins when you purchase the telephone and continues for one (1) year unless you sell or rent the telephone, in which case the warranty stops.

**BellSouth Products** disclaims any implied warranty, including the warranty of merchantability and the warranty of fitness for a particular purpose, as of the date of 90 days from your original purchase of the telephone. **BellSouth Products** assumes no responsibility for any special, incidental, or consequential damages.

This warranty gives you specific legal rights and you may have other rights which vary from state to state. Some states do not allow the exclusion or limitations of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitation may not apply to you.

**Warranty Service Not Provided**

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, the affixing of any attachment not provided by **BellSouth Products** with the telephone and/or loss of parts. This warranty is voided in the event any unauthorized person opens, alters or repairs the telephone. All **BellSouth** equipment being returned for repair must be suitably packaged. Telephone companies use different types of equipment and offer various types of services to customers. **BellSouth Products** does not warrant that this telephone is compatible with the type of equipment of any particular telephone company or the services provided by it.

**What to Do for Warranty Service**

During the first thirty (30) days, a defective product is eligible for over-the-counter exchange at the retailer from whom it was purchased. After thirty (30) days, the defective product should be returned to the authorized service center. Please allow 2-3 weeks for the return of your telephone product. The shipping address of the authorized service center is:

U.S. Electronics CONSUMER CENTER  
C/O Southern Bonded Warehouse  
1491 Mt. Zion Rd.  
Morrow, GA 30260

**NOTE:** A product received which was not made for **BellSouth Products** or which is not defective as determined by our test procedures will not be repaired and will be returned C.O.D., freight.

**To Obtain Warranty Service**

- Provide proof of the date of purchase within the package.
- Prepay all shipping costs to the authorized service center.
- Include a return shipping address within the package.

Please retain your sales receipt, the carton, the packing materials, and the printed material. The original carton is the best shipping container for the telephone should you have to return it.

For your reference:

Serial number \_\_\_\_\_

 
Date of Purchase \_\_\_\_\_

Name of Dealer \_\_\_\_\_

**Customer Service Telephone Number:**

**1-800-210-8950**

**OUTSIDE THE U.S.A. CALL 1-212-242-6978**



This page serves as a template for attachment of screws to the wall when mounting this telephone on the wall.

1. Cut out this page.
2. Use this template to determine the distance between screws when mounting this phone on the wall. The two cross hairs identify where to attach the screws.



### IMPORTANT

In order to get maximum life from the **HANDSET BATTERY PACK**, be sure to charge the **HANDSET** for 12 hours before initial use.

### IMPORTANT

Placing your **BASE UNIT** near appliances such as televisions, refrigerators, radios, or microwave ovens may cause interference.

### IMPORTANT

When you hear interference, press the **scan/del** button to change the operating channel.

### IMPORTANT

 
The AC ADAPTOR must always be plugged into an electrical outlet.

### IMPORTANT

To obtain the best reception, be sure to raise or reposition the **BASE UNIT ANTENNA**.

### IMPORTANT

If you live in an area which receives frequent thunderstorms, we strongly recommend plugging your AC ADAPTOR into a surge protector.

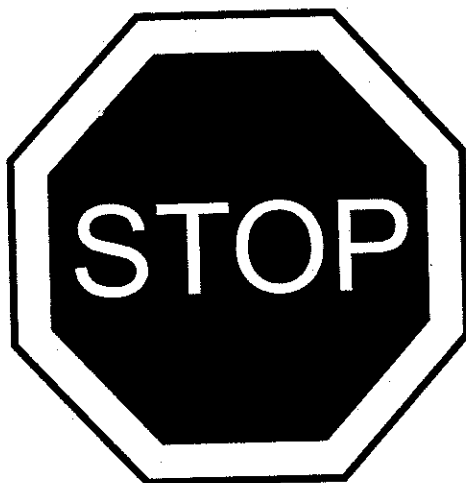

**Make certain you receive the best  
performance from your telephone.  
Read this manual first.**



MH9915LD-V2A

Made in China  
LNP