





 


## Caller ID System Operation

## Caller ID


### Deleting a Stored Record in the DIRECTORY (PHONE BOOK)

1. Press the  button. The LCD Screen will display "Phone book."
2. Press the SCROLL UP  or DOWN  button to find the record you wish to delete.
3. Press the  button. The LCD screen will display "Erase item?"
4. To delete the record, press the  button again. The LCD Screen will display the preceding Caller ID record.
5. Press the  button to return to STANDBY mode.



### PREFERRED CALLS

You can assign stored numbers a PREFERRED CALL status. When an incoming call is matched to a stored number designated as PREFERRED, the phone will generate a special ringer sound or play the RING MELODY assigned by the user after the Caller ID information is received.

When you are saving the name and number into the DIRECTORY (PHONE BOOK), add a "#" symbol at the beginning of the name by pressing the  button.




 
To assign a RING MELODY, add a "#" symbol followed by the desired RING MELODY number (1-0) at the beginning of the name. To hear a sample of the RING MELODY sound, see page 22 for details.



### BLOCKED CALLS

You can assign stored numbers a BLOCKED CALL status. When an incoming call is matched to a stored number designated as blocked, the phone will not ring after the Caller ID information is received.

When you are saving the name and number into the DIRECTORY (PHONE BOOK), add an "\*" symbol at the beginning of the name by pressing the  button.



### "C-F" (Forwarded Call)

The "CF" icon pops-up on the LCD Screen, when the incoming call has been assigned to your telephone number and the service is provided by your local telephone company.

### "L-D-C" (Long Distance Call)

The "LDC" icon pops-up on the LCD Screen, when the incoming call is a long distance call and the service is provided by your local telephone company.

## Caller ID System Operation

### OUTGOING CALLS

This telephone remembers the last 8 OUTGOING CALLS. The time, date, and the duration of the call are recorded.

1. With the **HANDSET** in **STANDBY** mode, press the **SHIFT LEFT** button. The LCD Screen will display "Outgoing call."
2. Pressing the **SCROLL DOWN** button will go through the calls from the last to the latest OUTGOING CALL record. Pressing the **SCROLL UP** button will allow you to view the calls from the latest call to the last.
3. To make a follow-up call, press the **TALK** button to dial the displayed record.

Outgoing call

8

VICKIE

10:08

10:20 \*10/02 1:30 8

### Function Settings

You can change the setting on the **HANDSET** in the functions menu. Access the functions menu by pressing the **VOL/MENU** button.

There are 12 settings in the functions menu which can be changed. You can scroll through the function menu in the listed order by pressing the **SCROLL DOWN** button.

Settings can be accessed by pressing the corresponding **TELEPHONE KEYPAD** button. To edit a setting, press the **EDIT/FLASH** button, use the **SCROLL UP** or **DOWN** button to toggle between the setting options, and then press and hold the **SAVE/RE/PA** button to save the changes. Press the **VOL/MENU** button to exit the functions menu.

TELEPHONE KEYPAD	Function
1	<b>Ringer Hi/Low/Off:</b> Changes the volume of the ringer on the <b>HANDSET</b> or turn the ringer OFF.
2	<b>Ring Melody:</b> Changes the <b>HANDSET</b> ring melody.
3	<b>First Ring On/Off:</b> Turns the first ring of the phone OFF so that it does not ring until Caller ID information has been displayed. Particularly useful when using the <b>PREFERRED</b> and <b>BLOCKED</b> call features or the <b>PRIVATE</b> and <b>UNAVAILABLE</b> ring settings.
4	<b>Time Set:</b> Changes the time and date.
5	<b>Contrast:</b> Adjusts the brightness of the LCD Screen for optimum viewing.

## Caller ID System Operation

 
## Caller ID



TELEPHONE KEYPAD	Function
6	<b>PBX Number:</b> Inserts if a "PBX Number" before an outgoing number is dialed. Select the number (0-9) which is required to access an outside line when using a switchboard system, and the phone will automatically dial the PBX number and a pause before any speed dial or Caller ID callback number. Factory setting is "OFF."
7	<b>Language:</b> Changes the language that appears on the LCD Screen. Choose between English, French, or Spanish.
8	<b>User Name:</b> Changes the user name (ID) that appears on the LCD Screen during STANDBY mode.
9	<b>MSG Waiting Delete:</b> Clears current message waiting indication.
0	<b>Area Code:</b> Adds the local Area Code to numbers that were stored as 7-digits in the phone book and 10-digit dialing is required in the local calling area.
*	<b>Register:</b> Initiates the registration of <b>HANDSETS</b> to the <b>BASE UNIT</b> .
#	<b>Alarm Clock:</b> Sets the Alarm clock time.

**NOTE:** At any time during options programming you can quit and the settings that you have changed will be saved. Press the **VOL/MENU** button to quit the options menu or let the options programming time out by not pressing any TELEPHONE KEYPAD buttons for 20 seconds.

### A. Setting the Ringer Level

1. Press the **VOL/MENU** button to enter the menu.
2. Press the **1** button to go to the RINGER LEVEL programming option.
3. Press the **EDIT/FLASH** button to change the setting. "High" will begin flashing.





4. Press the SCROLL UP  or DOWN  button to toggle between High, Low, and Off.
5. When the desired setting is displayed, press and hold the **SAVE/RE/PA** button to save the setting. A long "beep" will sound to confirm the setting has been saved.
6. Continue with programming or press the **VOL/MENU** button to return to STANDBY mode.

## Caller ID System Operation

### B. Setting the Ring Melody

1. Press the **VOL/MENU** button to enter the menu.
2. Press the **2** button to go to the RING MELODY programming option.



Ring melody  
10:20 AM 10/02 \* 2-12

3. Press the **EDIT/FLASH** button to change the setting. "2" will begin flashing.
4. Press the SCROLL UP  or DOWN  button to select 1 of the 10 RING MELODIES available. A ringer sample will be heard for 2 seconds when toggling from one RING MELODY to another. The preset RING MELODY is "2."
5. When the desired setting is displayed, press and hold the **SAVE/RE/PA** button to save the setting.
6. Continue with programming or press the **VOL/MENU** button to return to STANDBY mode.

### C. Turning the FIRST RING ON or OFF

1. Press the **VOL/MENU** button to enter the menu.
2. Press the **3** button to go to the FIRST RING programming option.

First ring  
10:20 AM 10/02 \* 3-12

3. Press the **EDIT/FLASH** button to change the setting. "ON" will begin flashing.
4. Press the SCROLL UP  or DOWN  button to toggle between ON or OFF.
5. When the desired setting is displayed, press and hold the **SAVE/RE/PA** button to save the setting. A long "beep" will sound to confirm the setting has been saved.
6. Continue with programming or press the **VOL/MENU** button to return to STANDBY mode.

### D. Setting the Time and Date

1. Press the **VOL/MENU** button to enter the menu.
2. Press the **4** button to go to the TIME SET programming option.

Time set  
10:20 AM 10-02  
10:20 AM 10/02 \* 4-12

3. Press the **EDIT/FLASH** button to change the setting. The hour will begin flashing.
4. Press the TELEPHONE KEYPAD **1** to **0** button to enter the hour. The minute will begin flashing.


## Caller ID System Operation

## Caller ID

5. Press the TELEPHONE KEYPAD **1** to **0** button to enter the minutes. "AM" or "PM" will begin flashing.
6. Press the TELEPHONE KEYPAD **1** button to choose "AM" or press the **2** button to choose "PM." The month will begin flashing.
7. Press the TELEPHONE KEYPAD **1** to **0** button to enter the month. The date will begin flashing.
8. Press the TELEPHONE KEYPAD **1** to **0** button to enter the date.
9. When the desired setting is displayed, press and hold the **SAVE/RE/PA** button to save the setting. A long "beep" will sound to confirm the setting and you are returned to the options menu.
10. Continue with programming or press the **VOL/MENU** button to return to STANDBY mode.

### E. Adjusting the Contrast

1. Press the **VOL/MENU** button to enter the menu.
2. Press the **5** button to go to the CONTRAST programming option.

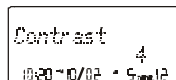


Contrast 4  
10:20 ~ 10/02 ~ 6:00:12

3. Press the **EDIT/FLASH** button to change the setting. "3" will begin flashing.
4. Press the SCROLL UP **▲** or DOWN **▼** button to toggle from level 1 to level 8 of contrast.
5. When the desired setting is displayed, press and hold the **SAVE/RE/PA** button to save the setting. A long "beep" will sound to confirm the setting has been saved.
6. Continue with programming or press the **VOL/MENU** button to return to STANDBY mode.

### F. Setting the PBX Number

1. Press the **VOL/MENU** button to enter the menu.
2. Press the **6** button to go to the PBX NUMBER programming option.

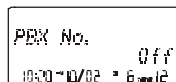

PBX No. Off  
10:20 ~ 10/02 ~ 6:00:12


3. Press the **EDIT/FLASH** button to change the setting. "OFF" will begin flashing.
4. Press the SCROLL UP **▲** or DOWN **▼** button to customize the digit to match your PBX system. When not connected to a PBX system, the phone PBX NUMBER programming option must be set to "OFF" for the phone to function correctly.

## Caller ID System Operation

 5. When the desired setting is displayed, press and hold the **SAVE/RE/PA** button to save the setting. A long "beep" will sound to confirm the setting has been saved.
6. Continue with programming or press the **VOL/MENU** button to return to STANDBY mode.

### G. Changing the Language


1. Press the **VOL/MENU** button to enter the menu.
2. Press the **7** button to go to the LANGUAGE programming option.



3. Press the **EDIT/FLASH** button to change the setting. "English" will begin flashing.
4. Press the **SCROLL UP** (▲) or **DOWN** (▼) button to toggle between English, Espanol, and Francais.
5. When the desired setting is displayed, press and hold the **SAVE/RE/PA** button to save the setting. A long "beep" will sound to confirm the setting has been saved.
6. Continue with programming or press the **VOL/MENU** button to return to STANDBY mode.


### H. Changing the User Name

 1. Press the **VOL/MENU** button to enter the menu.
2. Press the **8** button to go to the USER NAME programming option.



3. Press the **EDIT/FLASH** button to change. The entry will display a flashing prompt over the the first character of the present USER NAME.
4. Enter the desired USER NAME using the TELEPHONE KEYPAD (**0/ABC** to **9/WXY**) buttons. The USER NAME can contain a maximum of 12 characters. See page 17 for details.
5. Press and hold the **SAVE/RE/PA** button to save the setting. A long "beep" will sound to confirm the setting has been saved.
6. Continue with programming or press the **VOL/MENU** button to return to STANDBY mode.

 **NOTE:** The USER NAME will be displayed on the **HANDSET** LCD Screen during STANDBY mode.




## Caller ID System Operation

Caller ID

### I. Deleting Message Waiting Indication

 
1. Press the **VOL/MENU** button to enter the menu.
2. Press the **9** button to go to the MESSAGE WAITING programming option.



3. Press the **EDIT/FLASH** button to reset the Message Waiting Indication. "OFF" will begin flashing.
4. Press and hold the **SAVE/RE/PA** button to delete the indication. A long "beep" will sound to confirm the setting has been saved.
5. Continue with programming or press the **VOL/MENU** button to return to STANDBY mode.

### J. Setting the Area Code

 1. Press the **VOL/MENU** button to enter the menu.
2. Press the **0** button to go to the AREA CODE programming option.




3. Press the **EDIT/FLASH** button. The entry will display a flashing prompt at the left side of the number field.
4. Press the TELEPHONE KEYPAD **1** to **0** buttons to enter the three digit area code for your phone number.
5. When the desired setting is displayed, press and hold the **SAVE/RE/PA** button to save the setting. A long "beep" will sound to confirm the setting has been saved.
6. Continue with programming or press the **VOL/MENU** button to return to STANDBY mode.

#### NOTE:

 To use the call back function, press the **#/OPTION** button and then select the 10-DIGIT DIALING mode. Press the **TALK** button and the unit will automatically dial the stored 7-digit number plus the area code.

The LCD Screen will only display the last 7-DIGITS for all 10-DIGIT INCOMING CALLS that matched the AREA CODE setting.



## Caller ID System Operation

### K. Registering the HANDSET(S)

1. Press the **VOL**/MENU button to enter the menu.
2. Press the **\*** button to go to the REGISTER programming option.

Register  
10:20 \*10/02 \*11:12



3. Press the **EDIT/FLASH** button. The LCD Screen will prompt "Select base." The default setting is "Base 1."
4. To confirm, press the **EDIT/FLASH** button again. The LCD Screen will display "Put down H/S". Put the **HANDSET** on the **BASE UNIT** charge cradle within 6 seconds. A confirmation "beep" tone will be heard.
5. The **BASE UNIT** will automatically assign the ID number of the newly registered **HANDSET**. The **HANDSET ID #** will be displayed on the LCD Screen.
6. To register more **HANDSETS**, follow steps 1 to 4.
7. Continue with programming or press the **VOL**/MENU button to return to STANDBY mode.

Select base:  
base1

Put down H/S

Handset #  
10:20 \*10/02

#### NOTE:

To register the **HANDSET(S)** to another **BASE UNIT**, select the **BASE 2** option by pressing the **SCROLL UP**  or **DOWN**  button. The second **BASE UNIT** (B2) must be connected to a separate telephone line.

### L. Setting the ALARM CLOCK

1. Press the **VOL**/MENU button to enter the menu.
2. Press the **#** button to go to the ALARM CLOCK programming option.

Alarm clock  
Off  
10:20 \*10/02 \*12:12

3. Press the **EDIT/FLASH** button. Set the time by pressing the TELEPHONE KEYPAD **1** to **0** buttons. Press the **1** button to enter AM, or **2** button to enter PM. The default ALARM CLOCK setting is "Off."
4. When the desired setting is displayed, press and hold the **SAVE**/RE/PA button to save the setting. A long "beep" will sound to confirm the setting has been saved.
5. Press the **VOL**/MENU button to return to STANDBY mode.

#### NOTE:

To stop the alarm, press any TELEPHONE KEYPAD button. The ALARM setting is a one time setting, therefore the alarm must be re-set before the alarm will sound again.



## Multi-HANDSET, Multi-BASE UNIT System Operation

Multi-HA

### Multi-HANDSET, Multi-BASE UNIT System

The system supports the registration of **9 HANDSETS** to a **BASE UNIT**. The user can add another **BASE UNIT (B2)** and register the same **HANDSETS**. The **BASE UNITS** must be connected to separate telephone lines. The **HANDSETS** can make **INTERCOM CALLS**, and **CALL TRANSFERS** to one another provided they are using the same **BASE UNIT** at that time.

#### Intercom Call

1. With the **HANDSET** in **STANDBY** mode, press the **DEL/INT** button. The LCD Screen of the initiating **HANDSET** will display "Select H/S:."
2. Enter the ID # of the receiving **HANDSET** by pressing the **TELEPHONE KEYPAD** **1** to **9** buttons.
3. The receiving **HANDSET** will receive a page tone and the LCD Screen will display "Handset #, Paging you."
4. The receiving **HANDSET** will connect by pressing the **DEL/INT** button. Both LCD Screens will display "Intercom with:, Handset #."
5. To end the **INTERCOM CALL**, press the **DEL/INT** again. The LCD Screen of both **HANDSETS** will return to **STANDBY** mode.

Select H/S: #

Initiating HANDSET

Paging With:  
Handset #

Initiating HANDSET

Handset #  
Paging you


Receiving HANDSET

Intercom With  
Handset #X

Both HANDSET

#### Receiving a Call while in Intercom Call

1. When an outside call is received, both **HANDSETS** involved in the Intercom call will emit two short double "beep" sounds. The Caller ID information, if available, will display on the LCD Screens after the alert beeps.
2. Press the **DEL/INT** button to terminate the Intercom call.
3. Press the **TALK** button to access the outside call.

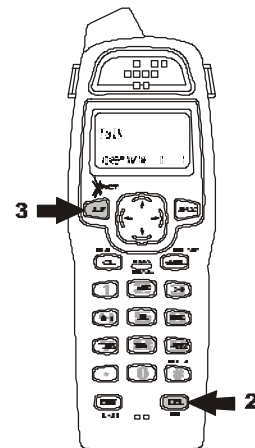



### Transfer Call

1. During a call, press the **DEL/INT** button. The LCD Screen of the initiating **HANDSET** will display "Select H/S:."
2. Enter the ID # of the receiving **HANDSET** by pressing the TELEPHONE KEYPAD **1** to **9** buttons.
3. The initiating **HANDSET** will return to STANDBY mode.
4. The receiving **HANDSET** will receive a special alerting tone and the LCD Screen will display "Transfer call." If available, the caller's telephone number will be displayed on the LCD Screen after the first ring.
5. The receiving **HANDSET** will answer the call by pressing the **TALK** button.
6. If the receiving **HANDSET** does not answer the call within 30 seconds, the initiating **HANDSET** will receive a Ring Back melody.

Select H/S:■

 
Initiating HANDSET

Transfer call

Receiving HANDSET

BEN BOOTH  
12 122426860  
10:28 AM 10/02

Receiving HANDSET

**Security****Rechargi*****Security System***




Your cordless telephone uses a digital coding security system to prevent unauthorized use of your telephone line by another nearby cordless telephone. The system has its own identifying signal created by microcomputers in both the **BASE UNIT** and the **HANDSET**.


***Security Code***

    This telephone has an internal security code with 4,000,000 possible combinations.


***77 Channel Auto-Hop***

Your cordless telephone automatically selects the best channel from the 77 frequencies available to transmit signals between the **BASE UNIT** and the **HANDSET**. When interference is received from other cordless telephones, your telephone automatically hops to the next clear channel.





## Recharging the BATTERY PACK

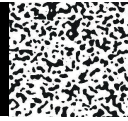

### Battery Type

Use the following type and size of BATTERY PACK:

Cordless Telephone BATTERY PACK  
3.6V, 800mAh  
U.S. Electronics Inc.  
Ni-Cd BATTERY PACK: Model B658



Ni-Cd

This BATTERY PACK is available through:  
U.S. Electronics Service Center  
105 Madison Avenue  
New York, NY 10016  
1-800-828-5208

### NOTES:

1. *During a power interruption, the BASE UNIT does not operate, and a phone conversation cannot be made on the HANDSET.*
2. *To ensure your phone charges properly, place the HANDSET securely KEYPAD face up on the BASE UNIT.*

### Recharging the BATTERY PACK

The nickel cadmium (Ni-Cd) BATTERY PACK in the **HANDSET** can be recharged many times using the built-in charger in the **BASE UNIT**.

When the BATTERY CHARGE INDICATOR appears with two bars blinking on the LCD Screen, a "beep" sound will be heard every 10 seconds. This indicates that the BATTERY PACK needs to be recharged.

Charge the BATTERY PACK at least once every 90 days of non-use to avoid battery failure. When the BATTERY PACK can no longer be charged, replacement of the BATTERY PACK will be necessary.

The BATTERY PACK used in your telephone may develop a condition known as "MEMORY." Once subjected to a regular short discharging routine, the BATTERY PACK assumes the discharging pattern it was subjected to. This causes rapid discharging thereby shortening the BATTERY PACK charge span. If you believe your BATTERY PACK has developed a "MEMORY" condition, do not charge the **HANDSET** until the BATTERY CHARGE INDICATOR appears with two bars blinking on the LCD Screen. When the BATTERY CHARGE INDICATOR appears with two bars blinking on the LCD Screen, then charge the **HANDSET** fully for 12 hours.

### IMPORTANT

In order to get maximum life from the **HANDSET** BATTERY PACK, be sure to charge the **HANDSET** for 12 hours before initial use.

## Changing the BATTERY PACK


*Problem*

### Changing the BATTERY PACK

The BATTERY PACK provides power for the **HANDSET** of your cordless telephone.

#### To Replace the BATTERY PACK:

1. Remove the **HANDSET BATTERY COMPARTMENT COVER** by sliding it down.
2. Pull out the BATTERY PACK PLUG and remove the BATTERY PACK.
3. Plug the new BATTERY PACK into the BATTERY CONNECTOR.
4. Slide the **HANDSET BATTERY COMPARTMENT COVER** firmly into place in its closed position.
5. Before use, charge the new BATTERY PACK for 12 hours.

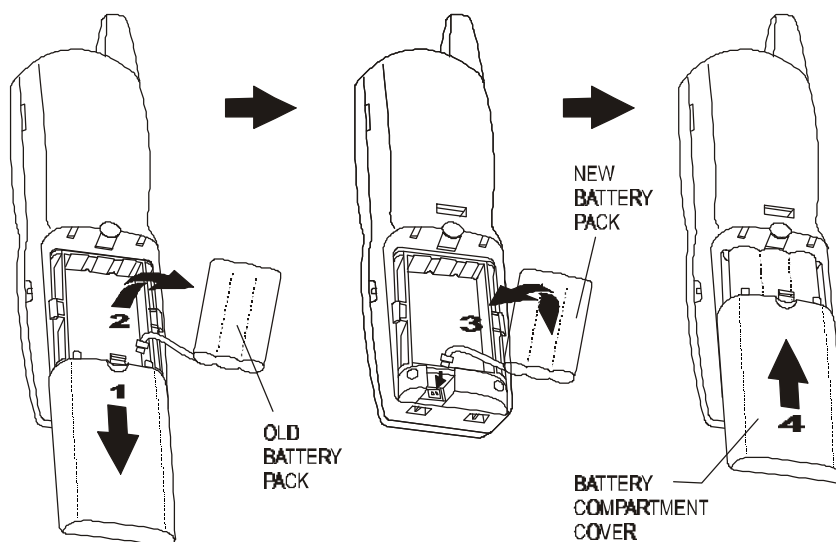

#### ATTENTION:

The telephone that you have purchased contains a rechargeable BATTERY PACK. The BATTERY PACK is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this BATTERY PACK into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

#### IMPORTANT

In order to get maximum life from the **HANDSET BATTERY PACK**, be sure to charge the **HANDSET** for 12 hours before initial use.

## Problem Solving

### Problem Solving Section

For your assistance, we have listed below a few common problems.

#### *Phone does not work, check the following:*

1. **BASE UNIT** is plugged into a power source.
2. **HANDSET** is charged.
3. TONE/PULSE Select Switch is in the right position.
4. TELEPHONE LINE CORD is plugged into the TELEPHONE JACK.

#### *Range of phone limited, check the following:*

1. **BASE UNIT** is centrally located in your residence.
2. **BASE UNIT** is not located near appliances.

#### *No dial tone, check the following:*

1. TELEPHONE LINE CORD plugs are connected to the TELEPHONE JACK and TELEPHONE LINE CONNECTION JACK.
2. **BASE UNIT** is plugged into a power source.

#### *Received signal flutters or fades, check the following:*

1. BATTERY PACK in the **HANDSET** is fully charged.
2. **HANDSET** is not too far from the **BASE UNIT**.

#### *Interference on reception, check the following:*

1. Noise may be picked up from electrical products in the home or electrical storms. Generally, this noise is a minor annoyance and should not be interpreted as a defect in your system. (See Technical Information on page 33).

#### *Excess static, check the following:*

1. Check to see that the ANTENNA is not touching another metal object.

#### *If after pressing the button, you receive three "beeps" and no dial tone, check the following:*

 
1. **BASE UNIT** is plugged into a power source.

#### *No connection between the HANDSET and the BASE UNIT, check the following:*

1. Did you register your **HANDSET** to the **BASE UNIT**? (See page 26 for registering the **HANDSET(S)**.)

#### **NOTE:**

*If none of the telephones in the house are working, disconnect one set at a time to verify that none of the phones are causing the problem. If you still have a problem after doing this, and your telephone still does not work, please contact your local phone company.*



## Technical Information

FCC Req

### Technical Information

This cordless telephone uses radio frequencies to allow mobility. There are certain difficulties in using radio frequencies with a cordless telephone. While these are normal, the following could affect the operation of your system.

#### Noise

Electrical pulse noise is present in most homes at one time or another. This noise is most intense during electrical storms. Certain kinds of electrical equipment such as light dimmers, fluorescent bulbs, motors, and fans also generate noise pulses. Because radio frequencies are susceptible to these noise pulses, you may occasionally hear them in your **HANDSET**. Generally they are a minor annoyance and should not be interpreted as a defect in your system.

#### Range

Because radio frequency is used, the location of the **BASE UNIT** can affect the operating range. Try several locations in your home or office and pick the one that gives you the clearest signal to the **HANDSET**.

#### Interference

Electronic circuits activate a relay to connect the cordless telephone to your telephone line. These electronic circuits operate in the radio frequency spectrum. While several protection circuits are used to prevent unwanted signals, there may be periods when these unwanted signals enter the **BASE UNIT**. You may hear clicks or hear the relay activate while you are not using the **HANDSET**. If the interference occurs frequently, it can be minimized or eliminated by relocating the **BASE UNIT**. You can check for interference before selecting the final **BASE UNIT** location by plugging in the telephone.

#### NOTICE:

This cordless telephone uses radio communication between the **HANDSET** and the **BASE UNIT** and may not ensure privacy of communication. Other devices, including other cordless telephones, may interfere with the operation of this cordless telephone or cause noise during operation. Units not containing coded access may be accessed by other radio communication systems. Cordless telephones must not cause interference to any licensed radio service.

## ***FCC Requirements***

### ***Federal Communications Commission Requirements***

This equipment complies with Part 68 of the FCC Rules. A label on the **BASE UNIT** of this equipment contains, among other information, the ACTA Product Number and the Ringer Equivalence Number (REN) for this equipment. You must, upon request, provide this information to your telephone company.

The REN is also useful in determining the quantity of devices that you may connect to your telephone line and still allow these devices to ring when your telephone number is called. In most areas, but not all, the sum of the RENs for all devices connected to one line should not exceed five (5.0). To be certain of the number of devices that you may connect to your line, you should contact your local telephone company.

If your equipment should cause harm to the telephone network, the telephone company may temporarily disconnect your service. If possible, they will notify you in advance that temporary discontinuance of service may be required. However, when advanced written notice is not possible, the telephone company may temporarily discontinue service without notice if such action is necessary under the circumstances. The telephone company may make changes in its communication facilities, equipment, operations, or procedures where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations of the Federal Communications Commission. **Do not attempt to repair or modify this equipment.**

 
**WARNING:** Changes or modifications not expressly approved by the party responsible for its compliance could void the user's authority to operate the equipment.

Some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the **BASE UNIT** of the cordless telephone should not be placed on or near a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

#### **IMPORTANT**

Placing your **BASE UNIT** near appliances such as televisions, refrigerators, radios, or microwave ovens may cause interference.





## FCC Requirements

## Warranty

### *Federal Communications Commission Requirements (continued)*

This equipment should not be used on coin telephone lines. Connection to party line service is subject to state tariffs. If trouble is experienced, disconnect this equipment from the telephone line to determine if it is causing the malfunction. If the equipment is determined to be malfunctioning, its use should be discontinued until the problem has been corrected.

**NOTE:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

 
1. Reorient or relocate the receiving ANTENNA.
2. Increase the distance between the equipment and the receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **EXPOSURE TO RADIO FREQUENCY ENERGY**

The radiated output power of the device is far below the FCC radio frequency exposure limits. The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community. The level of energy emitted

is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of the device may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before use it.



## Warranty

### Warranty Information

#### XACT Products

##### One-Year Limited Warranty

This limited warranty sets forth all **XACT Products** responsibilities regarding your product. There are no other expressed or implied warranties from **XACT Products**.

#### Warranty Service Provided

 
If you purchased the telephone new from a retail vendor, **XACT Products** warrants the telephone against defects in material and workmanship for a period of one (1) year from the original date of purchase. This warranty is in lieu of all other expressed warranties. This warranty begins when you purchase the telephone and continues for one (1) year unless you sell or rent the telephone, in which case the warranty stops.

**XACT Products** disclaims any implied warranty, including the warranty of merchantability and the warranty of fitness for a particular purpose, as of the date of 90 days from your original purchase of the telephone. **XACT Products** assumes no responsibility for any special, incidental, or consequential damages.

This warranty gives you specific legal rights and you may have other rights which vary from state to state. Some states do not allow the exclusion or limitations of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitation may not apply to you.

#### Warranty Service Not Provided

This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, the affixing of any attachment not provided by **XACT Products** with the telephone and/or loss of parts. This warranty is voided in the event any unauthorized person opens, alters or repairs the telephone. All **XACT** equipment being returned for repair must be suitably packaged. Telephone companies use different types of equipment and offer various types of services to customers. **XACT Products** does not warrant that this telephone is compatible with the type of equipment of any particular telephone company or the services provided by it.



## Warranty

## Notes

### ***What to Do for Warranty Service***

During the first thirty (30) days, a defective product is eligible for over-the-counter exchange at the retailer from whom it was purchased. After thirty (30) days, the defective product should be returned to the authorized service center. Please allow 2-3 weeks for the return of your telephone product. The shipping address of the authorized service center is:

XACT CONSUMER CENTER  
C/O Southern Bonded Warehouse  
7137 Southlake Parkway  
Morrow, GA 30260

**NOTE:** *A product received which was not made for **XACT Products** or which is not defective as determined by our test procedures will not be repaired and will be returned C.O.D., freight.*

### **To Obtain Warranty Service**

- Provide proof of the date of purchase within the package.
- Prepay all shipping costs to the authorized service center.
- Include a return shipping address within the package.

Please retain your sales receipt, the carton, the packing materials, and the printed material. The original carton is the best shipping container for the telephone should you have to return it.

For your reference:

 
Serial number \_\_\_\_\_

 
Date of Purchase \_\_\_\_\_

Name of Dealer \_\_\_\_\_



Visit Us on the Web:  
[www.uselectronics.info](http://www.uselectronics.info)



Customer Service Telephone Number:  
1-866-466-9228  
OUTSIDE THE U.S.A. CALL 1-212-242-6978







*Notes*

  


  



*Notes*

   *Wall Mou*







## *Wall Mount Template*

 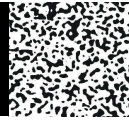

This page serves as a template for attachment of screws to the wall when mounting this telephone on the wall.

  1. Cut out this page.
2. Use this template to determine the distance between screws when mounting this phone on the wall. The two cross hairs identify where to attach the screws.





### **IMPORTANT**

In order to get maximum life from the HANDSET BATTERY PACK, be sure to charge the HANDSET for 12 hours before initial use.

### **IMPORTANT**

Placing your BASE UNIT near appliances such as televisions, refrigerators, radios, or microwave ovens may cause interference.

### **IMPORTANT**


The AC ADAPTOR must always be plugged into an electrical outlet.

### **IMPORTANT**

In order to utilize the Caller ID feature, you must subscribe to Caller ID service from your local telephone company.

### **IMPORTANT**

If you live in an area which receives frequent thunderstorms, we strongly recommend plugging your AC ADAPTOR into a surge protector.

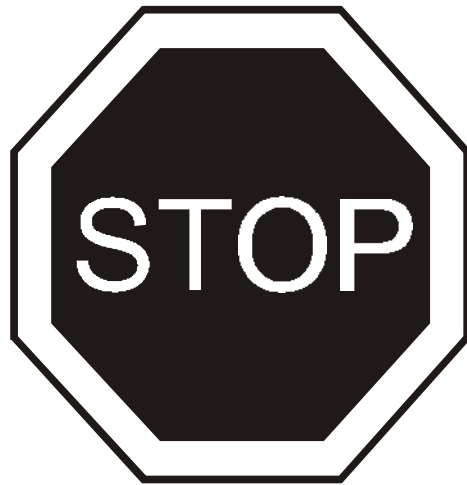

Visit Us on the Web:  
[www.uselectronics.info](http://www.uselectronics.info)

GH9702  
XXX

Made in China  
LD