

1. Please charge the unit at least 5 hours before first time using.
- CHARGE THE BATTERY**
When the battery is charging, the CHARGE STATUS light shows on the LED display is red. After the battery has fully charged, the light turns to no lights.
1. Connect the charge cable to the DC5V interface of the speaker firmly.
 2. When the battery is fully charged, please disconnect the charge cable from the speaker.
 3. The speaker works normally when charging.
- POWER/VOLUME**
Twist the dial clockwise/anticlockwise to increase/decrease the volume.
- PREVIOUS/NEXT BUTTON**
Under playing status, press PREVIOUS/NEXT button to get back to a previous or next song.
- PAUSE/PLAY BUTTON**
To stop playing the current track, please press PAUSE/PLAY button on the control panel. Press it once again to continue playing.
- MODE/LED**
Long press to turn on/off light.
- Lightly press to enter into playing mode selection (Bluetooth, FM Radio, AUX Input, USB, TF).
- AUX IN JACK**
1. Connect an audio cable to the AUX IN JACK of the speaker and to the audio output socket on the external audio devices such as Mp3 player, discman, etc., then select LINE by pressing the MODE/LIGHT button on the control panel.
3. Play from an external audio device.
- MIC IN JACK**
Plug in microphone directly for playing.
- USB JACK**
Insert USB card directly for playing.
- TF JACK**
Insert TF card directly for playing.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Instruction manual



TTD-2807

Thank you very much for using our products
Please keep this manual safe for future reference

 
Product name: Wireless Speaker

Brand: Atatech

Model: TTD-2807

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions meanwhile, please observe all the indications about safe operating. These and safety:





1. Protection of electric power supply line: Be aware that the electric power supply line and outlet on the machine DO NOT lengthen the electric shock. DO NOT pull or drag or the power supply line;
2. Ventilation: This set must be put in ventilated place DO NOT put disk on it or cloth to cover it; the distance away from the wall should not be less than 10 centimeters DO NOT put this set on the bed;
3. Casing Dismantling: DO NOT dismantle the casing if one touches the inner components, he will probably get serious electric shock;
4. Unusual smell when you discover unusual smell and smoke, cut power supplies immediately and pulls out the plug from the outlet on the wall. Contact the sell shop or nearest repairing center. Attention: This set applies to AC 110~220V 50Hz-60Hz power supply. Use standard power supply. Please be sure for the correct power supply before use it.

PRODUCT FEATURES

1. High output power;
2. With Karaoke function;
3. The treble is clear, natural and bass is powerful;
4. Compatible to DVD/VCD/CD/TAPE/Audio/MP4/AUX;

REMOTE CONTROL

  1. Standby state;
2. Mode conversion (Media player/AUX/FM) ;
3. Mute;
4. Play/pause in Video/Music mode;
Long press for 2 seconds to automatically search for channels in FM mode;
5. Short press for Previous song in Video/Music mode;
Long press for Rewind in Video/Music mode;
Short press to Manual search of channels in FM mode;
6. Short press for Next song in Video/Music mode;
Long press for Fast forward in Video/Music mode;
7. Short press to adjust EQ in Audio mode
8. Decrease volume;
9. Increase volume;
10. Repeat song in audio mode;
11. USB/SD;
12. 0-9 Directly select the channel which has saved in the

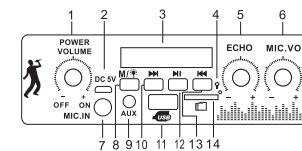

FUNCTION INTRODUCTION

1. Mainly Volume +/-
2. Adaptor DC 5V input(50-500mA)
3. Digital display
4. Charging Indicator: RED=Charging Light off=Fully Charged
5. Adjust de Echo Microfone
6. Adjust de Volume Microfone
7. Wired Mic input
8. MODE/LED (Lightly press to enter into selection for Bluetooth, FM Radio, AUX Input, USB, TF)
9. AUX input
10. Next song/channel
11. USB input
12. Play/Pause/TWS
13. Previous song/channel
14. TF input