

使用说明书(Operating instruction)

请在使用前详细阅读本使用说明书 (Please read the instructions carefully before using.)

请保管好本说明书以备不时之用. (Please take care of the instructions for necessary at a later date.)


本产品特点:

赛车放电时间更长:6-10分钟 (车身配有高容量电池, 正常充放电几次后, 即可达到最佳效果);  
距离更远: 6-20米;  
性能更好: 选频特性好, 抗干扰能力强.

PRODUCT FEATURES:

The car turn on electricity longer time:6-10minutes(equipped with large-capacity battery, it can reach the best effect after charged and discharging several times.);  
Longer distance:6-20meters;  
Better performance: reliable frequency selection and strong anti-interference ability.

## 套装内容(CONTENTS)

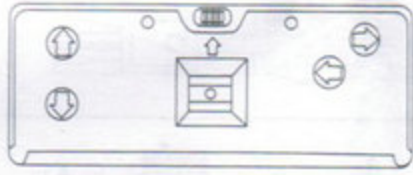

遥控器(Transmitter)x1



赛车(Mini racer)x1



路障(Road-block)x4



天线(Antenna)x1



说明书

(Instruction sheet)x1

## 各部件名称(PART DETAILS)

### ● 遥控器

(Transmitter)

功能指示灯  
(Signal indicator)

前进按键  
(Forward)

后退按键  
(Reverse)


解锁键

(Release button)

充电指示灯  
(Charging indicator)

左转按键  
(Left turn)


右转按键  
(Right turn)

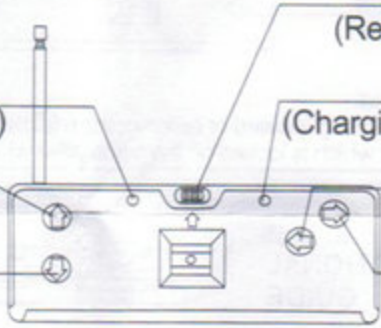

### ● 赛车(Mini racer)


微调器

(Directional guide)

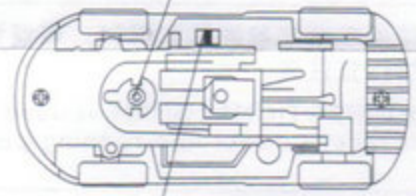

开关(ON/OFF)


## 准备(PREPARATION)

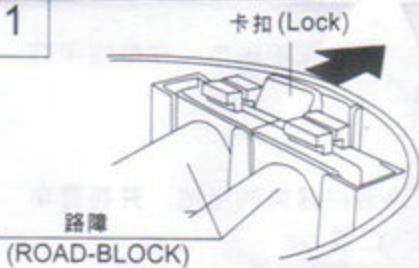


1 打开包装罐, 翻转包装罐盖, 按箭头方向推开卡扣, 取出4个路障。  
Open the can, detach the can cover and can body. Push the LOCK inside the can cover towards the direction shown to release the 4 ROAD-BLOCKS.



2 从包装罐中, 取出遥控器和赛车。按下解锁键, 然后向左拖动, 取出赛车。  
Take out the transmitter and mini racer from the can body. Press down the RELEASE BUTTON, slide the mini racer in the direction shown to release it.

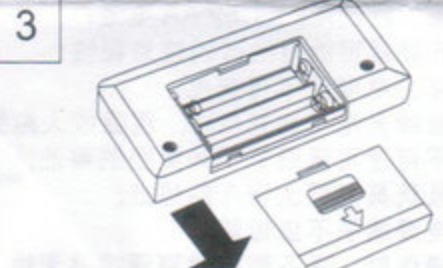

3 按箭头方向打开遥控器背后的电池盖。  
Slide the transmitter's battery compartment cover towards the direction shown and open it.

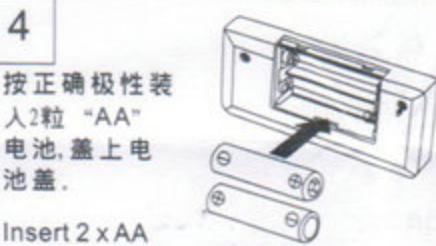


4 按正确极性装入2粒“AA”电池, 盖上电池盖。

Insert 2 x AA batteries with the correct polarity, then replace the battery compartment cover.



5 按下任何按键, 操作指示灯亮, 证明电池安装正确。  
Insert the CHARGING PLUG to the CHARGING JACK on the bottom of the mini racer, the CHARGING INDICATOR lights up to indicate the charging is in process.

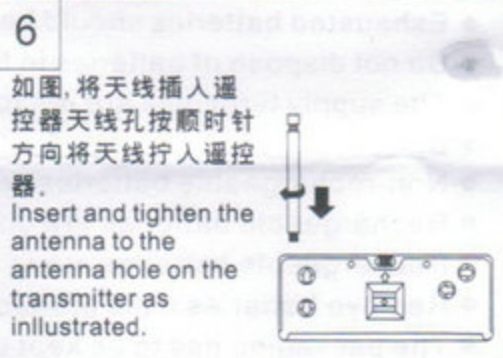

6 如图, 将天线插入遥控器天线孔按顺时针方向将天线拧入遥控器。  
Insert and tighten the antenna to the antenna hole on the transmitter as illustrated.


## 充电(CHARGING THE MINI RACER)



1 如图, 打开遥控器旁边充电盖, 取出充电插头。  
Open the charger cove as illustrated and take out the CHARGING PLUG.



2 充电插头插进车底的充电接口, 充电指示灯亮起, 表示充电进行中。  
Insert the CHARGING PLUG to the CHARGING JACK on the bottom of the mini racer, the CHARGING INDICATOR lights up to indicate the charging is in process.

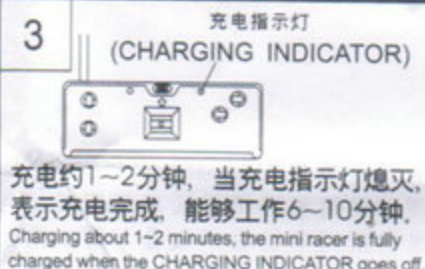


3 充电约1~2分钟, 当充电指示灯熄灭, 表示充电完成, 能够工作6~10分钟。  
Charging about 1~2 minutes, the mini racer is fully charged when the CHARGING INDICATOR goes off, and it works 6~10 minutes.



## 操作(OPERATION)


- 1、使用时，将遥控器天线拉出至最长；将赛车的电源开关拨至“ON”位置，将赛车放在平地上。  
Extend the transmitter's antenna for better signal reception. Move the ON/OFF switch on the mini racer to ON, and place it on the ground.

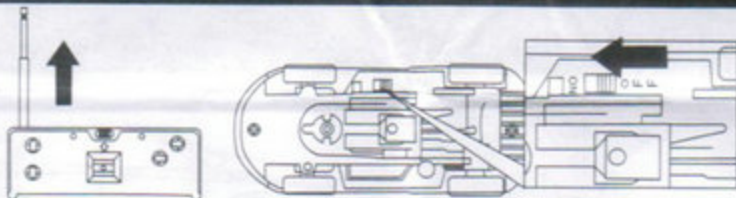

### 2、遥控器按键的功能(The transmitter is full-function.):

- (1)、按下遥控器按键，赛车便可启动，遥控器上的功能指示灯会随着按下遥控器的按键而发亮。（按下遥控器的任何按键，遥控器的功能指示灯均会发亮）。
- (2)、当按前进/后退按键时，赛车可前进/后退，前/后灯也随着发亮。
- (3)、当按前进/后退按键，同时按住左转/右转按键时，赛车可左/右转。
- (4)、解锁键：当要玩耍赛车时，按下遥控器上的解锁键，向右拿出赛车。

- (1) The SIGNAL INDICATOR lights up when any button on the transmitter is pressed.
- (2) The mini racer run forward and lights up its headlights when the transmitter's FORWARD button is pressed. The mini racer run reverse and lights up its tail lamps when the transmitter's REVERSE button is pressed.
- (3) Pressing the LEFT/RIGHT button on the transmitter while the mini racer is running forward or reverse, the mini racer will make left/right turns.
- (4) The RELEASE BUTTON on the transmitter is used to release the mini racer which is locked on the transmitter when packaging.

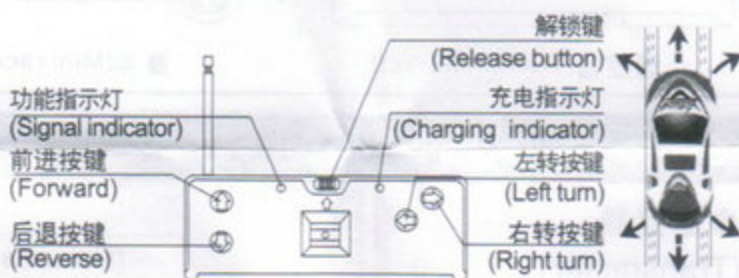

### 3、调整赛车底部前端的微调器，可调整赛车的直线行驶性能。

The DIRECTIONAL GUIDE is used to adjust the mini racer's direct-line-running-performance.



## 注意(CAUTIONS)

- 玩具车本身使用1.2V 1/4AAA NI-HM可充电电池，遥控器使用2节1.5V AA 电池；
  - 安装或更换电池时请注意极性；
  - 非充电电池不可充电；
  - 当给充电电池充电时，需要成人监护；
  - 不可使用新旧或不同类型的电池；
  - 从玩具内取出用尽的电池；
  - 电源端子不应短路。
  - 操作时，手不能接触到遥控器天线，否则会影响遥控距离；折断的天线需由成人处理。
  - 本赛车因配有强大动力，高速行驶时，由于惯性原因，不能急刹车，请使用时特别注意。
  - 当赛车车速减慢时，说明车体电量不足，请将赛车按以上方法充电即可。
  - 如遥控器电池电量不足，赛车充不进电，充电指示灯变暗或不亮，换新电池即可。
  - 充电时请认准充电插头和充电接口。
  - 长时间不使用时，请取出遥控器内的电池，并将赛车的电源开关拨到“OFF”位置。
  - 拆包装时在成人的指导下进行。
  - 保留本资料以供日后参考。
- Different types of batteries or new and used batteries are not to be mixed.
  - Only batteries of the same or equivalent type as recommended are to be used.
  - Exhausted batteries should be removed from the product.
  - Do not dispose of batteries in fire, or batteries will explode or leak.
  - The supply terminals are not to be short-circuited.
  - Batteries are to be inserted with the correct polarity.
  - Non-rechargeable batteries are not to be recharged.
  - Rechargeable batteries are only to be charged under adult supervision.
  - Rechargeable batteries are to be removed from the product before being charged (if removable).
  - Remove batteries if the product is not to be used for an extended period.
  - The packaging has to be kept since it contains important information.

## Special attention

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.