

8+
FOR AGES

MR-24-1/5632 MINI RACER



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE


NOTE: PHYSICAL DAMAGE TO THE PRODUCT OR ITS PARTS, CAUSED DUE TO OPERATIONAL REASONS IS NOT COVERED IN THE WARRANTY. MANUFACTURERS / DISTRIBUTORS / RETAILERS ARE NOT RESPONSIBLE AND / OR LIABLE FOR ANY DAMAGE / LOSS OF PROPERTY OR INJURY CAUSED DUE TO USE OF THIS PRODUCT.

PRODUCT FEATURES

Play time : 6-10 minutes

Range: 9-30 feet

CONTENTS

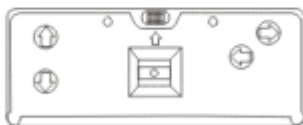

Transmitter x1



Mini racer x 1



Road block x 4




Antenna x 1




Instruction Manual

PART DETAILS



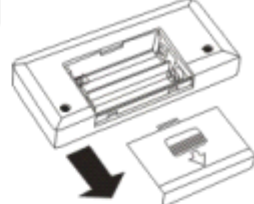
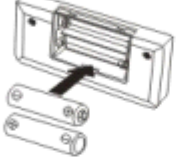
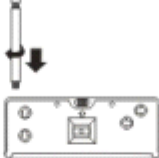
● Transmitter

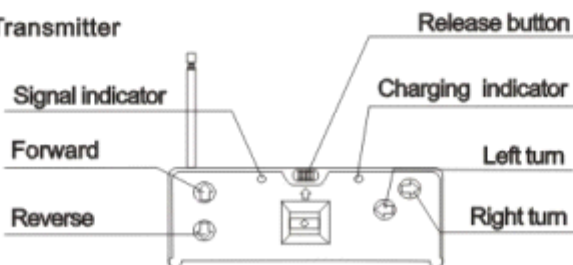

● Mini Racer

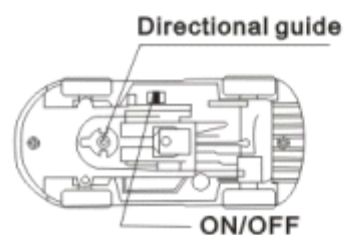
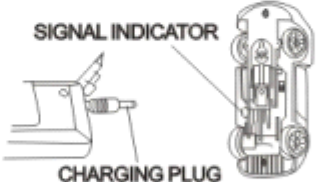
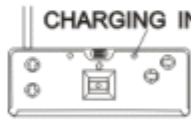


PREPARATION
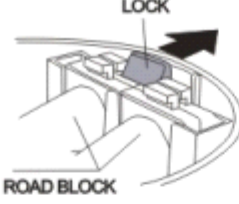
<p>1</p>  <p>LOCK</p> <p>ROAD BLOCK</p> <p>Open the can, detach the can cover from the can. Push the LOCK inside the can cover towards the direction shown to release the 4 Road blocks.</p>	<p>2</p>  <p>RELEASE BUTTON</p> <p>Take out the transmitter and the mini racer from the can. Press the RELEASE button. Slide the mini racer in the direction shown to release it.</p>	<p>3</p>  <p>Slide the transmitter's battery compartment cover towards the direction shown to open it.</p>
<p>4</p>  <p>Install 2 AA batteries according to the polarities indicated.</p> <ul style="list-style-type: none">• Do not mix new and old batteries.• Don't mix different types of batteries.	<p>5</p>  <p>Insert and tighten the antenna on the antenna hole of the transmitter.</p>	

Caution: Parental guidance is recommended.

CHARGING THE MINI RACER

<p>1</p>  <p>Open the charge cover and remove the charging Cable, insert in the transmitter.</p>	<p>2</p>  <p>SIGNAL INDICATOR</p> <p>CHARGING PLUG</p> <p>Insert the charging plug to the charging jack on the bottom of the mini racer, the charging indicator lights up to indicate the charging is in process.</p>	<p>3</p>  <p>CHARGING INDICATOR</p> <p>Charging takes about 3 minutes, the mini racer is fully charged when the charging indicator goes off and it runs for about 6-10 minutes.</p>
---	---	--

Note: Battery life may vary depending on external conditions, handling, control range etc.


Caution

- If the racer needs to recharge, please wait for 10-15 minutes.
- Do not over-charge the battery, if the battery becomes too hot to touch while charging then remove from charging immediately and leave it to cool, otherwise battery may get damaged.
- Always pay attention to when you are charging the battery.
- Do not disassemble or reconstruct the battery.
- Do not connect the battery to an electrical outlet.

OPERATION


1、

Extend the transmitter's antenna for better signal reception. Move the ON/OFF switch on the mini racer to ON, and place it on the ground.

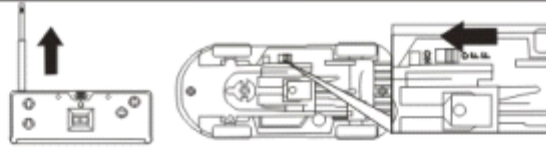

2、Transmitter

- The signal indicator lights up when any button on the transmitter is pressed.
- The mini racer runs forward and headlights will light up when the transmitter's forward button is pressed. The mini racer runs reverse and lights up its tail lamps when the transmitter's reverse button is pressed.
- Mini racer car will turn left/right on pressing the left/right button on the transmitter.

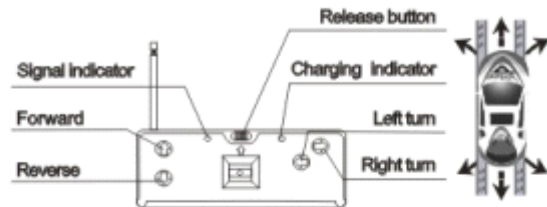

3、

The directional guide is used to adjust the mini racer's direct-line-running-performance.



NOTICE

- The control distance will be shortened when the mini racer is under low power condition.
- If the mini racer gets damaged, deformed, please repair it in time. If the rotor becomes damaged or broken, DO NOT play, otherwise, it will lead to injury.
- If you don't use the transmitter for a long time. Remove all the batteries out, in order to avoid battery leakage to damage this product.
- Don't drop the mini racer from high positions or crash it seriously, because that will damage it seriously or shorten the usage time.

WARNING

- YOU are responsible for the using of the mini racer car with necessary precautions to ensure that it doesn't harm or cause any injury to anyone or damage to any property.
- When you assemble and play with mini racer car, you must operate it accordingly to the instruction manual.
- The user is responsible completely for correct operation and use of this product. Manufacturers and dealer accept no responsibility and / or liability for damage and loss of property / injury to human life caused due to use of this item.
- Not recommended for children under 8 years of age.

Note: DO NOT operate your mini racer car if someone else is operating a similar device in the same operating range, as it may interfere with the frequency range and impact the controlling capacity of the mini racer car.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.