

Appendix 5

Prüfbericht - Nr.:
Test Report No.:

14032518 001

Seite 6 von 9
Page 6 of 9

User manual



 
INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE


NOTE: PHYSICAL DAMAGE TO THE PRODUCT OR ITS PARTS, CAUSED DUE TO OPERATIONAL REASONS IS NOT COVERED IN THE WARRANTY. MANUFACTURERS / DISTRIBUTORS / RETAILERS ARE NOT RESPONSIBLE AND / OR LIABLE FOR ANY DAMAGE / LOSS OF PROPERTY OR INJURY CAUSED DUE TO USE OF THIS PRODUCT.

PRODUCT FEATURES
Play time : 6-10 minutes
Range: 9-30 feet

CONTENTS



Transmitter x1

 

Mini racer x 1



Road block x 4




Antenna x 1




Instruction Manual

PART DETAILS

● Transmitter

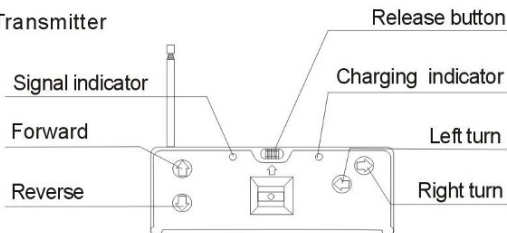

● Mini Racer

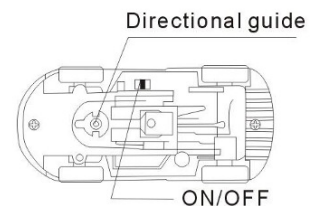

Appendix 5


Prüfbericht - Nr.:
Test Report No.:

14032518 001

Seite 7 von 9
Page 7 of 9


PREPARATION

1

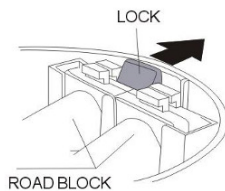


Open the can, detach the can cover from the can. Push the LOCK inside the can cover towards the direction shown to release the 4 Road blocks.

2

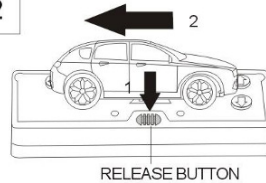


Take out the transmitter and the mini racer from the can. Press the RELEASE button. Slide the mini racer in the direction shown to release it.

3

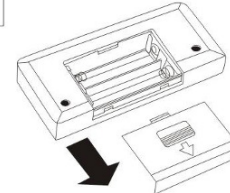

Slide the transmitter's battery compartment cover towards the direction shown to open it.


4

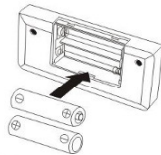

Install 2 AA batteries according to the polarities indicated.

- Do not mix new and old batteries.
- Don't mix different types of batteries.

5

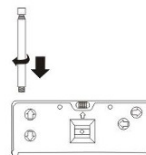

Insert and tighten the antenna on the antenna hole of the transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Caution: Parental guidance is recommended.


CHARGING THE MINI RACER

1



Open the charge cover and remove the charging Cable, insert in the transmitter.

2

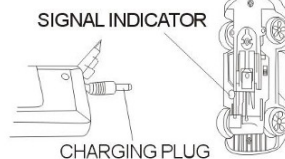

Insert the charging plug to the charging jack on the bottom of the mini racer, the charging indicator lights up to indicate the charging is in process.

3



Charging takes about 3 minutes, the mini racer is fully charged when the charging indicator goes off and it runs for about 6-10 minutes.

Note: Battery life may vary depending on external conditions, handling, control range etc.

Caution

- If the racer needs to recharge, please wait for 10-15 minutes.
- Do not over-charge the battery, if the battery becomes too hot to touch while charging then remove from charging immediately and leave it to cool, otherwise battery may get damaged.
- Always pay attention to when you are charging the battery.
- Do not disassemble or reconstruct the battery.
- Do not connect the battery to an electrical outlet.

Appendix 5

Prüfbericht - Nr.:
Test Report No.:


14032518 001

Seite 8 von 9
Page 8 of 9

OPERATION


1.

Extend the transmitter's antenna for better signal reception. Move the ON/OFF switch on the mini racer to ON, and place it on the ground.

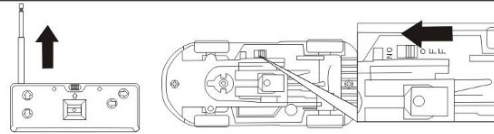

2. Transmitter

- a. The signal indicator lights up when any button on the transmitter is pressed.
- b. The mini racer runs forward and headlights will light up when the transmitter's forward button is pressed. The mini racer runs reverse and lights up its tail lamps when the transmitter's reverse button is pressed.
- c. Mini racer car will turn left/right on pressing the left/right button on the transmitter.

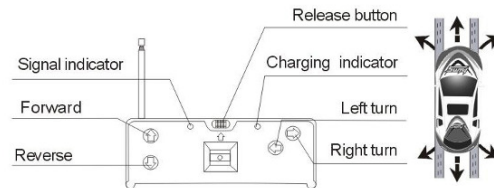

3.

The directional guide is used to adjust the mini racer's direct-line-running-performance.



NOTICE

1. The control distance will be shorten when the mini racer is under low power condition.
2. If the mini racer gets damaged, deformed, please repair it in time. If the rotor becomes damaged or broken, DO NOT play, otherwise, it will lead to injury.
3. If you don't use the transmitter for a long time. Remove all the batteries out, in order to avoid battery leakage to damage this product.
4. Don't drop the mini racer from high positions or crash it seriously, because that will damage it seriously or shorten the usage time.

WARNING

1. YOU are responsible for the using of the mini racer car with necessary precautions to ensure that it doesn't harm or cause any injury to anyone or damage to any property.
2. When you assemble and play with mini racer car, you must operate it accordingly to the instruction manual.
3. The user is responsible completely for correct operation and use of this product. Manufacturers and dealer accept no responsibility and / or liability for damage and loss of property / injury to human life caused due to use of this item.
4. Not recommended for children under 9 years of age.

Note: DO NOT operate your mini racer car if someone else is operating a similar device in the same operating range, as it may interfere with the frequency range and impact the controlling capacity of the mini racer car.

Appendix 5

Prüfbericht - Nr.:
Test Report No.:

14032518 001

Seite 9 von 9
Page 9 of 9

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, etc. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 9am to 5pm CST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.