


# INSTRUCTION MANUAL

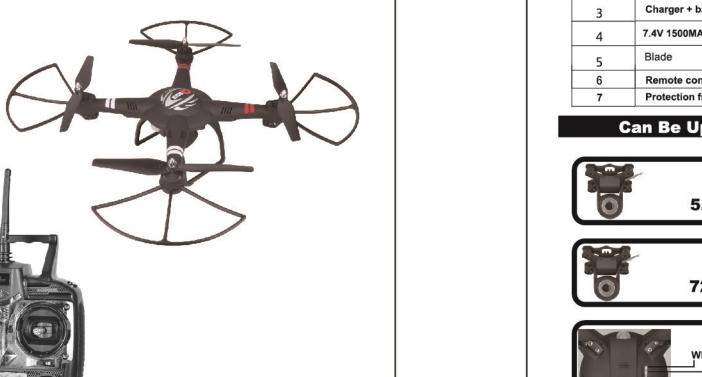

Standard Packing List

## Additional Safety Precautions and Warnings

. Age Recommendation: Not for children under 14 years. This is not a toy . Always operate your model in open spaces away from full-size vehicles

. Never operate your model with low transmitter batteries

outdoors, in order to make it easier and easier to control the craft, please carefully reading this manual before operating this craft units, and please keep this manual for future adjustments

All instructions and warnings must be followed exactly. Mishandling of Li-Po s can result in a fire, personal injury, and/or property damage.

Iling, charging or using the included Li-Po battery you assume all risks

**Notice:** When a Li-Po battery is discharged below 3.7 V, the battery may be damaged and may no longer accept a charge. Please land the helicopter immediately and recharge the flight battery.

ACAUTION AWARNING AWARNING AWARNING AWARNING



en the power switch, make sure the throttle stick at the bottom, both sides firmed the throttle hold switch and pull the stunt mode switch to the back.

ed if the same frequency and Aircraft, if an exception on the

4 .Looking for a suitable venue flight, away from the crowds, cars, high-voltage towers, reservoirs, etc., can be carried out safe and

controller has 4models,can exchange without open the controller.Left and righthrottle,set the switch to the "up" position:remember to turn it off to avoid accide be exchange,hold on the switch button,and turn on the power switch at the same me,you can exchange from mode1 to mode 3,or mode 2 ti mode 4.

on to exit headless headless mode Note: You must use the headless mode before on the code of the aircraft! When people can not change the direction of control!

slowly and completely with the rocker Circle, and ensure rocker hit comers. Then the left side c

Lampholder