



3Com

Quick Start Guide

AP2750 Managed Access Point

3CRWX275075A

The 3Com AP2750 Managed Access Point provides IEEE 802.11a or 802.11b/g wireless access to the network. The access point is designed for use with a 3Com Wireless LAN Switch, and requires hardware installation only. All configuration for the access point takes place on the 3Com Wireless LAN Switch.

You must have a wireless switch device to operate the access point. Two WLAN switch devices can be connected to the access point:

- 3Com WX4400
- 3Com WX1200

Power can be supplied via Power Over Ethernet (PoE) or by an external power supply. Four 3Com PoE devices supply power to the access point:


- 3Com PoE Injector
- 3Com 4400PWR PoE Switch
- 3Com Multi-port PoE power supply
- 3Com WX1200

About This Guide

This Quick Start Guide describes the basic installation of the access point. It covers the following topics:

- 3Com AP2750 Managed Access Point Features
- Observing Safety Precautions
- Step 1: Unpacking the Access Point
- Step 2: Preparing for Installation
- Step 3: Attaching the Antennas
- Step 4: Mounting the Access Point
- Step 5: Connecting the Access Point to a Switch
- Step 6: Checking the LED Indicators
- Troubleshooting

3Com AP2750 Managed Access Point Features

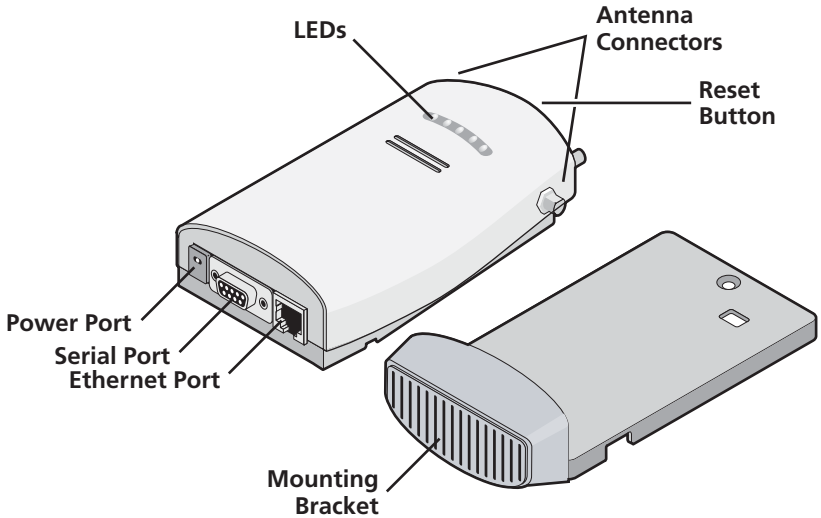

Feature	Description
Power Port	The access point can be powered either via Power Over Ethernet (PoE), or by an external power supply (not included) that is plugged into the Power Port.
Serial Port	The serial port is not supported.
Ethernet Port	The Ethernet port provides a 10/100BASE-TX Ethernet connection to a 3Com Wireless LAN switch. The connection can be direct to a 3Com switch or indirect through an intermediate Layer 2 or Layer 3 network. Use a standard Category 5 cable with straight-through signaling and standard RJ-45 connectors to connect the access point to the switch on the network.
LEDs	The LEDs indicate power and activity. See "Checking the LED Indicators" on page 7 for details.
Antenna Connectors	Two SMA-female antenna connectors allow you to connect antennas that operate in 2.4 GHz and 5.3 GHz bands.
Reset Button	The reset button is accessible from the back of the access point as well as through the mounting bracket. Push the reset button to restore the access point to its factory default settings.
Mounting Bracket	The mounting bracket comes attached to the access point. This mounting bracket allows the access point to be mounted to a wall or ceiling.

Observing Safety Precautions

This equipment must be installed in compliance with local and national building codes, regulatory restrictions, and FCC rules. For the safety of people and equipment, only professional network personnel should install the access point.



WARNING: To comply with FCC radio frequency (RF) exposure limits, a minimum body-to-antenna distance of 20 cm (8 in.) must be maintained when the access point is operational.



WARNING: To avoid possible injury or damage to equipment, you must use power supply equipment that is safety certified according to UL, CSA, IEC, or other applicable national or international safety requirements for the country of use. All references to power supply in this document refer to equipment meeting these requirements.

1 Unpacking the Access Point

Make sure that you have the following items, which are included with the access point:

- Two external 2.4 GHz and 5.3 GHz dual-band antennas
- Mounting bracket (attached to the access point)
- Wall-mounting hardware:
 - Locking bar (used for securing a wall- or ceiling-mounted installation)
 - Two sheet metal screws
 - Two thread screws
 - Two wall anchors
- Four adhesive rubber feet (used for a flat-surface installation).

2 Preparing for Installation

It is advisable to connect the power (if using an external power supply) and check the Ethernet cables and LEDs before installing the access point in a hard-to-reach location. Additionally, observe the following items before mounting or connecting the access point:

Installation Item	Description
Switch port	3Com recommends that you install and configure the 3Com Wireless LAN switch before installing the access point. Set the port type on the switch to an AP2750 access point.
Cabling	Make sure that standard Category 5 cable with straight-through signaling is installed at the site before you install the access point. Make sure that the cable is highly flexible and that there is no extra covering on the RJ-45 connector that could prevent the cable from being routed through the mounting bracket.
Power Requirements	Power can be supplied via an 802.3af Power Over Ethernet (PoE)-compliant device or by an external power supply with a minimum 5v @ 2.0 amp. If using an external power supply, make sure the power outlet is accessible. The power supply plug is the only means of disconnecting the access point from power.
MAC Address	Record the access point MAC address in a safe place before the access point is installed in a hard-to-reach location. The MAC address is printed on the back of the access point. Additional MAC address labels are shipped with the access point.