


## 6. Application

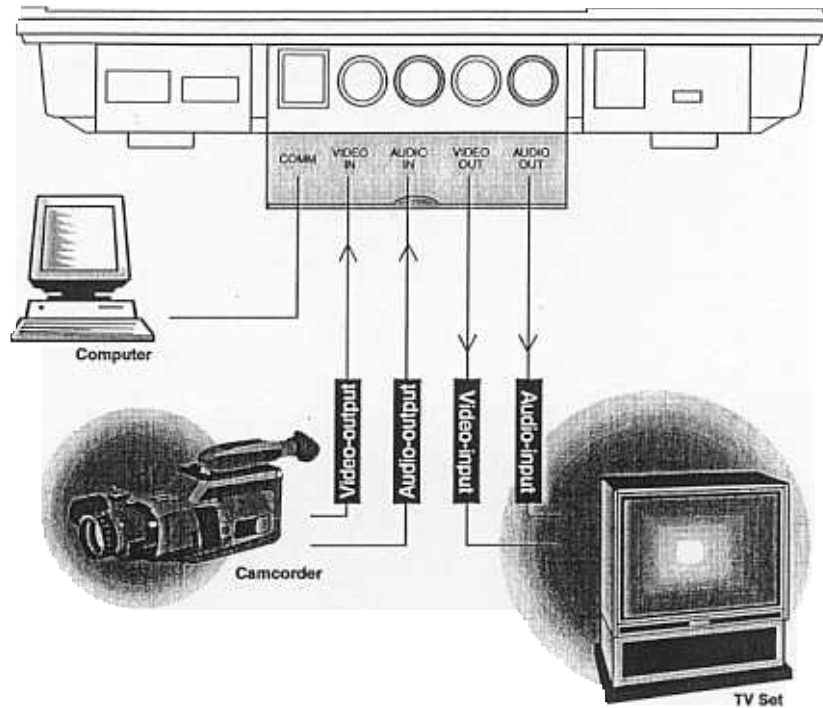

1. To watch the remote side via TV, plug a TV cable into the jack labeled Audio-Out and Video-Out on the back of the GVP and the other end of the TV cable into the jack labeled Audio-Out and Video-Out of the TV.
2. To transmit recorded memory or contents (video and audio) of camcorder to the remote side, connect the Camcorder cable into the jack labeled Audio-In and Video-In on the back of the GVP and the other end of the Camcorder cable into the jack labeled Audio-Out & Video-Out of the Camcorder.
3. To transmit data to computer or research GCP-2000 operating condition internally, connect RS-232C Connector to the computer. (Engineering use only)