 



### 1. Volume Control

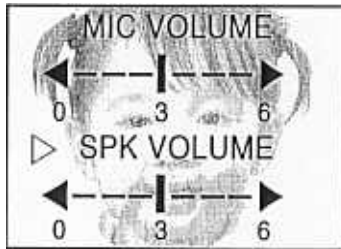

Volume up or down the voice you send or the sound you hear. Move the pointer from 0 to 6.


MIC: Microphone  
SPK: Speakerphone
 
### 2. Video Quality

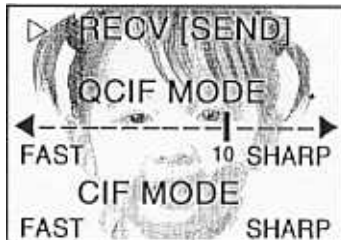

Adjust Video View Quality. First select RECV(Receive) or SEND with ◀ or ▶ key (0~15). To get excellent picture quality with slower motion move the pointer toward SHARP. To see fast movement, move the pointer toward FAST. CIF MODE is twice sharper than QCIF MODE.

### 3. Input Select (Selected Model)

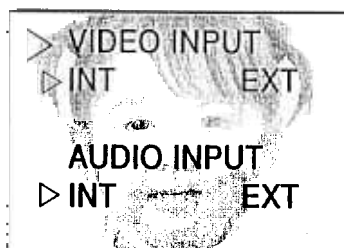 

You can select Video & Audio Input sources. Set both Video and Audio Input Internal mode when you use GVP in normal operation. When you want to transmit recorded camcorder image to the other party, Set to External mode both Video and Audio Input. Press ENT key to confirm your choice.