 


How to try remote monitoring

1. Call to your home or office using another videophone from the outside.
2. After the programmed number of rings, your phone answers.
3. Just enter your password, then press VIDEO key.
4. When video connected you can monitor remotely.
5. If you fail, hang up and retry 1 through 4.

2. AV INPUT

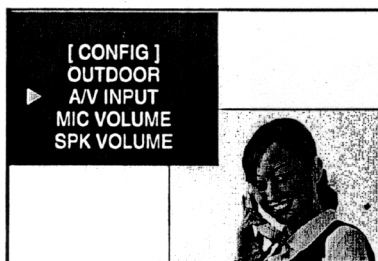 


You can select Video & Audio Input sources.


Set both Video and Audio Input Internal mode when you use GVP in normal operation.

When you want to transmit recorded camcorder image to the other party, Set to External mode both Video and Audio Input.

Press ENT key to confirm your choice.

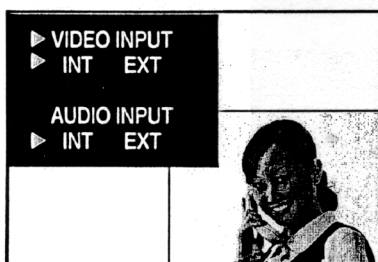

 3. MIC VOLUME/ 4.SPK VOLUME

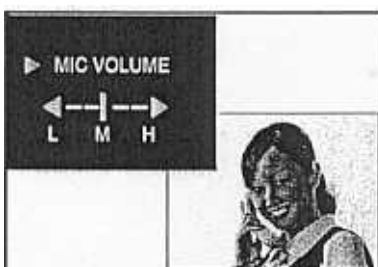

Volume up or down the voice you send or the sound you hear. Move the pointer from L to H.

MIC: Microphone
SPK: Speakerphone

