

Using instructions

Before using the equipment, please carefully read the instructions to ensure safety and used correctly.

The description of this instruction based on the tablet computer default setting.

This instruction difference may remain between the image in the manual and real product.

The contents in the manual may have minor difference from the real product, and may cause from service provider or different software version. This is only result from software upgrading, not quality problem.

This instruction the format and information is based on Google Android system, minor difference may exist and this depends on the user OS.

1.1 Safety alerts and the matters needing attention

Using the equipment before please carefully read the notes to ensure safety used correctly.

1.1.1 Safety alerts

- ◆ You can only use this equipment of company designated the battery and charger, use other products may cause battery leakage, overheating, burst and fire, or even damage to equipment
- ◆ Do not put equipment on uneven or the instability of the mesa, prevent fault by fall or damage.
- ◆ Please do not violent collisions, vibration, drop, casting equipment, or you will cause damage to equipment.
- ◆ Do not put the battery, the equipment, the charger and its attachments in flame lit cigars or cigarettes or the next, or microwave ovens high temperature and high pressure equipment, or you will cause damage to the equipment, such as fire accident.
- ◆ If the battery leaks in a strange smell, please immediately put it out of flame, lest cause fire or explosion.

- ◆ Please do not in flammable and explosive gas place equipment use, if could lead to equipment failure and cause a fire.
- ◆ Do not put a device in a high temperature and high humidity or have a large number of dust place, otherwise it will cause the equipment to damage.
- ◆ When children use, please in the guardian under the guidance of the use, in order to avoid the children be treated as a toy, cause injury.
- ◆ Do not put equipment and attachments to contact liquid or in the damp environment
- ◆ Do not put equipment and attachments in the temperature too high or too low in the environment.
- ◆ Please keep the equipment dry, away from the rain, moisture and contains corrosion electronic circuit minerals liquid, use of equipment and save please avoid electrostatic
- ◆ Please do not put the flammable and explosive substances and radio transmitters (such as equipment), together or stored in handling

1.1.2 Equipment use the matters needing attention

- ◆ Please use the equipment in 5 ~ 40 degree Celsius, the temperature and 35% ~ 85% humidity environments, from the sun, a cool ventilated place use the equipment.
- ◆ Using the equipment, please avoid in high temperature, low temperature, a damp, more dust under the environment of using
- ◆ Equipment input for touch screen, when using, do not use hard or rough surface objects, lest touch screen damage.
- ◆ Because LCD screen, batteries, etc. belong to the fragile, delicate parts, please attention preservation, don't let the hit or powerful extrusion, so as to avoid the device damaged.
- ◆ Please avoid direct sunlight equipment use, lest affect display effect and cause damage to the eyes of the damage, and never will device in more than 60 degree Celsius temperature of the place such as car dashboard, window or direct sunlight after the place such as glass, high temperature will shorten the life of the equipment, the damage to the battery and cause equipment failure, etc.

- ◆ Please don't send your equipment under the sun exposure to strong, high temperature will shorten the life of the electronic devices, damage to the battery, to bend or melting some plastic parts
- ◆ Do not put the equipment in low temperature place, when it moved to the place from low temperature in normal temperature, the interior will produce the moisture, may cause a short circuit board, damaged equipment
- ◆ If the equipment gets wet, please shut down, determine equipment already worked to use, such as not normal use, please look for professional thrusters maintenance
- ◆ Please do not throw or know the device, rough way of using will damage it.
- ◆ Do not attempt to disassemble the device, user is not allowed to repair the device or accessories himself. With improper handling by non-professionals may result in device damage. If there is some problem, please go to look for professional maintenance to repair.
- ◆ Please do not make metal parts contact with the device charger interface, less it may cause short circuit.
- ◆ Use qualified accessories for replacement; unauthorized accessories may damage the device.
- ◆ To ensure normal work, please charge the battery timely.
- ◆ During charging, the battery device and charger will have a heat, this is normal phenomenon.
- ◆ When using the internet, to avoid the poor network, please use it in an effective network signal area.
- ◆ Please do not uninstall the application program in the system so as not to cause the device or part of functions can not be available.
- ◆ Avoid formatting operations, while formatting, please do not suddenly interrupt the operation, this will lead to a hard disk failure.
- ◆ When using the file in the T-Flash (Micro SD) card, please do not pull out it, otherwise it would damage the card or device.
- ◆ To avoid eye fatigue and damage to human body, please keep 20 cm away from the user and do not keep using it for a very long time.
- ◆ In the use of headphones, please ensure that headphones are in the acceptable range, so as not to damage your hearing.
- ◆ If you accidentally make the device wet, please turn it off, make sure to use it after it dries. If it is still unavailable, please look for

- ◆ professional maintains to repair it.
- ◆ In case of a cleaning needed, please use a soft fabric to wipe gently the shell surface and the LCD panel; do not use a solution or other chemicals to wipe it.

1.1.3 Battery precautions

- ◆ Please do not Knock or extrude the device, which may cause damage to the battery and generate heat, smoke and even may cause fire, if smoke occurs, please keep far away to avoid any damage to user body.
- ◆ It is forbidden to throw battery into fire to avoid explosion. Used battery should be returned to supplier or put into designated recycle place. Do not put it into household garbage or thrown it into general life garbage. If there are explicit regulations in some place, please do as the provisions said.
- ◆ Please avoid the metal parts of battery contacting the necklace, coins and other metal conductor, and avoid crushing the battery with sharp objects such as nail.
- ◆ Please do not disassemble or remodel battery, or it could lead to battery leakage, overheat, blowout and fire.
- ◆ Please do not uses or place the device in a high temperature such as around the fire and heater, otherwise it may damage the battery and shorten battery life, and cause battery leakage, overheat blowout and fire.
- ◆ If the battery is to heat up, discoloration, deformation, and other anomalies in the process of charging or saving, please stop using and replace the batteries with new ones.
- ◆ Please do not make the battery moist, it can cause the battery overheat, smoke or corrosion.
- ◆ Do not use the device in direct sunlight or high temperature place, it will cause the device to fluid leakage and be overheating, reduce battery performance and shorten life, also will lead to battery leakage, overheating, smoke, burst and fire.
- ◆ If the battery is damaged, leaking, user should avoid contacting the stuff inside. If it contacts skin, use amounts of water to wash, if necessary, should seek medical help.
- ◆ If the battery liquid comes into the eyes, it will have insomnia dangerous, then please do not rub your eyes, rinse with fresh water,

- ◆ and then immediately go to the hospital.
- ◆ Battery life is limited. The battery life time is gradually shortened with the frequent charge (normally: 400times). If many times of charging is invalid, it means the battery life ends, please go to the designated repair place to replace a new battery with specified models.

1.1.4 Adapter using note

- Using the standard voltage, the use of other voltage will cause leakage, fire and damage to the right equipment and chargers.
- ◆ Equipment charging voltage AC100~240V/ 50~60Hz, 0.5A, make sure the charger specifications before use. Charge must be placed in the temperature +5 ~ +40 degree Celsius well-ventilated place, do not use any non-equipment manufacturers specify the charger, otherwise it will result in equipment damage, serious cause battery leakage, overheating, smoke, burst and fire.
- ◆ Do not charge at the following locations: Direct sunlight; multi-place of the ashes or vibration (may cause a malfunction); near the TV, radio and other electrical (will affect the image, sound effects)
- ◆ Prohibit short-circuit the charger, otherwise it would cause an electric shock, smoke, fire and damage to the charger.
- ◆ If the charger's power cord is broken, do not use the charger, so as not to cause a fire or electric shock.
- ◆ If the charger is exposed to water or other liquids, and immediately the power from the outlet pulled down to prevent overheating, fire, electric shock and charger failure.
- ◆ Do not disassemble or modify the charger, otherwise it will lead to personal injury, electric shock, fire and damage to the charger.
- ◆ Do not place the charger in the bathroom or high-humidity place, otherwise it will cause electric shock, fire and damage to the charger.
- ◆ Do not touch the chargers, wires and electrical outlets with wet hands; otherwise it will cause an electric shock.
- ◆ Pull the plug must hold the charger insulation parts, take the power cord can damage wire, cause electric shock and fire.

Directory

Illustration-----	07
Safety alerts and cautions-----	07
Accessories-----	08
Appearance illustration and connection description-----	09
Storage card-----	11
Interface Operation-----	11
Basic operation-----	12
Main interface-----	13
Basic menu function-----	14
Menu function	
Wi-Fi setting-----	15
GPS application-----	16
Files management-----	16
Internet Browsing-----	16
APK Install-----	17
Electronic Market-----	17
Menu Function	
Application program-----	18
Setting-----	19
Specification-----	20
Maintenance service -----	21
Disclaimer-----	21

Illustration

Read this user manual carefully before using this device for safe and correct operation.
This user manual based on the default settings of the device.
Minor difference may remain between the image in the manual and real product.
The contents in the manual may have minor difference from the real product, and may cause from service provider or different software version. This is only result from software upgrading, not quality problem.
The format and information is based on Google Android system, minor difference may exist and this depends on the user OS.

Safety alerts and cautions

1. This is an electronic product, please avoid using under the environment of over high temperature, over low temperature, moisture or dusty.
2. This product features touch screen, please do not touch the screen with hard or rough objects.
3. When carrying or moving, do not apply extra pressure to prevent the possibility of damage the components.
4. Avoid dropping of the product when using.
5. Please access the internet in the network covering area to avoid a poor networking.
6. Try to avoid formatting, in case of a formatting operation, do not interrupt it otherwise there will be hard disk malfunction.
7. Keep away from static when using and storing the product.
8. Please do not use the product for a long time to avoid eyestrain.
9. Please try to avoid using the product under direct sunshine to prevent the display effect from being influenced and the eyes from injury.
10. In case of a cleaning needed, please use a soft fabric to wipe gently the shell surface and the LCD panel; do not use a solution or other chemicals to wipe it.
11. The battery is fixed inside the device, user is not allowed to load or unload it freely.

Accessories

Items	functions
Adapter	please use the attached adapter to charge
Data cord	connect the PC to transfer data
Quick start guide	to guide you use the tablet pc
Warranty card	After-sales maintenance certificate

Start up

Charge

The battery is fixed inside the device, user is not allowed to load or unload it freely, please charge with the attached adapter before first time use. It is charging when  appears and it is full when  appears.

Notice: the battery life is varies from the different using environment and habits. Please charge it full each time and please charge it regularly when it set aside for a long time. Try to avoid operation and charging simultaneously

Warm: do not touch the metal part when you charging the device and please guide your kids to correctly use this product.

Turn on

Press the power button for 3 seconds, the device is on when it appears startup image.

Notice: start up time is about 30 seconds. (it depends on the system and software the user has installed)


Turn off

Press the power button for 3 seconds when the device is on, a window will appear, choose TURN OFF, then click OK, the device will turn off.

Reset

Press the power button for 10 seconds, the system will turn off to reset automatically. And power on, the device will reset automatically.

(This image is only for reference, please check with the real product)

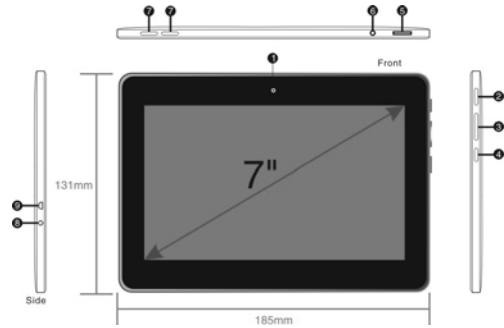

1. Camera
2. Power
3. Volume +/-
4. Return
5. Micro SD (TF) Card
6. Headphone jack
7. Mini resonance speaker
8. DC Input
9. Micro-USB jack



USB Connection

After USB connected computer and MID, system will automatically detect the connecting status, now you can copy the files in computer to MID's default movable hard disk.

USB Close


Click CLOSE on the popping out frame to close the USB storage device.

Note: Files copied to the device can only be available for use until USB data cable is closed completely.

Storage card

1. copy files to Micro SD card
After insert TF card, in the menu interface-resources management>SD card
Select the file you want to copy to edit and paste in the SD card.
2. TF card close
After transfer, click uninstall Micro SD card in the storage according to setting menu
Click OK to uninstall Micro SD card, then users can safely remove memory card.
note: only in the fully closed situation can the storage card be removed so that the damage to the memory card can be avoided.

Interface Operation

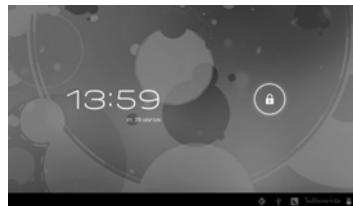

Note: You can accord System security option to choice the Graphics or digital that you like, but you should remember, if not, you will reset OS.

Unlock methods

1. the factory default sliding way to unlock
2. Through setting menu>security>screen lock setting: None, Face to unlock, icon to unlock, PIN to unlock, password to unlock.
Note: users can do any setting above based on their own need.

Basic operation

1. Turn on/off

- ① When turn on, press the power button with a long time, open the main menu of the screen.
- ② When turn on, press the power button with a long time, the information of whether turning on or off will be shown, and then operate as the information to turn off.

Note: press the power button for 10 seconds to reset and restart.

2. Turn on and off the screen

- ① Turning off screen: tap the power button, turning up a screen slightly to standby, temporarily turning off the screen to save power.

- ② Turning on screen: tap the power button, turning up a screen lock, sliding the lock turning on the screen

Note: in the unused situation, the machine will enter the standby situation automatically, if turning on the screen is needed, please press the power button to unlock.

3. charge

- ① When the power is not enough, a notification menu will be seen on the screen: please connect charge device so as to make sure the normal operation.

- ② User the AC power adapter to connect the machine and the power, the AC adapter input voltage: 220V.

After the adapter is connected with the power, it means the machine can be charged normally if the charging symbol at the lower right corner

Note: in charging situation, users can operate the machine normally.

4. The use of touch screen


- ① Touch slightly: touch slightly the menu item or the icon on the screen. Then can operate the machine as we want.

- ② Drag: drag on the space of the screen to move left or right.

- ③ move or delete Click icon and hold the mouse, it appears  symbol at the top of the screen, at this time we can retain or delete the icon as we need, to let go if reserves the icon ,to hold to drag the icon to  dustbin to delete it.

Main interface

Display the menu main interface

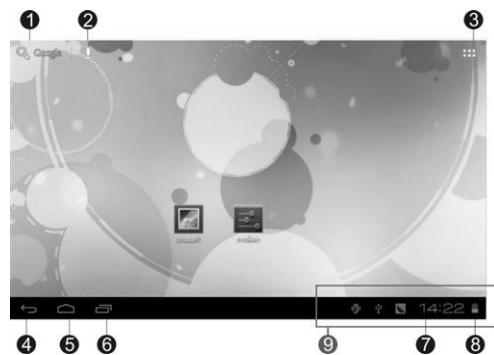

1. Google search: Search each application
2. Voice Search: Through the speech recognition to search
3. Programs icon: Display all application of the machine
4. Return: Return to the previous menu
5. Home: Press home to return to main interface
6. Page switch each application
7. Time: Show the time
8. Batter: Show the power
9. Display running applications

Basic menu function

1. Time ,time zone setting
Click setting>  setting date / time and choose time zone.
2. language and keyboard(select language zone and word setting)
When setting menu language and input method options, you can set the language of the machine as you need.
Note: factory default Arch Thai keyboard input method.
3. Brightness setting
Click setting>display>brightness, users can adjust the brightness as they need.
Note: users can also click the brightness adjustment to adjust the brightness when the video is playing.
4. switch between the page and function



Hold the  symbol at the under left for 3S.you can switch quickly.
If you want to cancel you can click  .

Menu function

The following operations are similar; illustrate a few of them as representatives

Setting

Note: "v" indicates the mode is on.

Wi-Fi setting:

Click  , enter the device main interface, click  , click Wireless and network in the setting menu to enter the wireless and network setting.

Open Wi-Fi network, click Wi-Fi setting, select the attached Wi-Fi network, if Wi-Fi network has set password protection, please insert the password already set, click Connection, it will appear  in the device status bar, and this indicates the Wi-Fi network has already been connected.



1. Ensure the Wi-Fi function is on (wireless network is on) .
2. Click on Wi-Fi setting, the system will list automatically the networks within the searching scope if Wi-Fi is on.

3. Select the available Wi-Fi network in the list and click on OK.
4. Now the Wi-Fi icon is shown in the status bar.

5. Click on "Back" or "Home" to return to Main Interface.

Note: if a password is required for the Wi-Fi Menu setting, enter the password before the connection menu setting.


Menu function

• GPS application

Under the security items, select GPS positioning, at this time can position on the map.

• Files management

Click , enter the main interface, select , enter the file management interface.

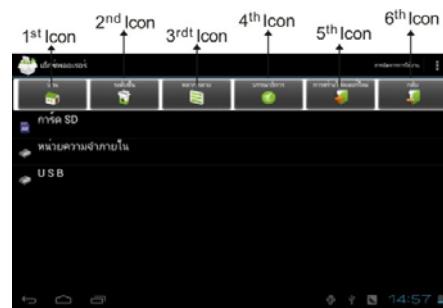

1. Click  (1st Icon), return to the file manager interface
2. Click  (2nd Icon), return to the previous menu
3. Click  (3rd Icon), can select several files at the same time
4. Click  (4th Icon), can copy,select,remove,paste,rename etc.

Operations

5. Click  (5th Icon), can establish and name a new file folder
6. Click  (6th Icon), return to the previous file folder
7. If want to do related operations to a file, only need to press the file, and then pop-up a dialog box.

• Internet Browsing

Click , enter the main interface, Click , enter Internet browsing interface.

• **APK Install**

Enter the electronic market to download and install APK

First copy the APK application program which need to install from other device to the MID content, or store the data to TF card and insert it to MID, click APK installer——click install---select the place of stored application program, select application file that needed installation, at this time pop-up a password enter box, the original password is ***** (Request from Administrator), at the same time, tick the unknown source among the security item and then can install APK.

Password change: Click setting---Security item---Select APD install password and then can change the password.

• **Electronic Market**

In the main interface, click  , enter the electronic market, for the first time to enter the electronic market, need to set account login, after finishing setting account according to the indicates, select games or applications needed to download, after downloading, the device will finish downloading automatically.

Point:

If the device has already set a email address (no matter it is set in email, electronic market or calendar), the account for the device will be the same. Other programs that need an account to log in all can use it.

Menu Function

Application program

Item	Function
	Browse or manage local and external (SD Card, U disk etc.) data of the device, can establish file folder, copy, cut, paste the file of the device.
	Link to Internet, webpage browsing, web surfing
	Add Gmail mail box
	Set schedule
	Multi-formats video player
	Play and manage the music file of the device, also can browse the webpage at the same time enjoy the music.
	Photo and video
	Massive application program can be downloaded for you
	Clock
	Sound recorder
	Calculator
	Short-cut search
	Pictures, music, video etc. downloaded by Google explorer default storage path.
	More personalized settings.

• Setting

Click  In the main interface, enter setting menu to do more personalized settings.

Item → Function

WIFI→ Select WIFI network, set network connection

Sound → Can select device mode (volume, mute mode, vibration), select and setting notice ring, operation ring etc.

Display → Can do screen brightness setting, rotate screen automatically setting, enable VGA output setting, dynamic picture setting, screen timeout setting.

Position and Service → Can go on GPS positioning search with wireless network

Application program→ Setting application program source, install place, management and program delete

Account and synchrony→ Add account information, select synchronic data, setting the account information, after the synchrony, all the program which need log in account can use the account directly.

Data backup → Go on data backup, and can restore the factory setting

Security → Boot encryption, install APK unlock.

Storage→ Have a grasp of the capacity of the device

Language and input method → Setting the language and Android key board

Language input and output → Setting text to speech and speed and language setting

Date and time → Setting the time and date format of the device.

About the device → know the basic information of the machine.

Factory Product Name	ScoPad
Factory Model Name	SP0712
Display	7 inch 16:9 TFT-LED panel ,1024x600 display resolution, Made by CMI,AUO,HST,IVO etc.
	Capacitive Touch panel, support multi-touch feature
CPU	Cortex A8 Rockchip RK2918 1.2GHz
Memory	DDRIII 1GB
Nand Flash	8G
Storage Card	Support maximum 32GB Micro SD (TF) external
GPS	with
Wireless Network	Wi-Fi 802.11b/g/n
Audio	Support MP3, WMA, WAV and other formats
Camera	Dual camera: front 2 Mega Pixel
Port	USB 2.0 high speed port, support OTG function
Audio Output	3.5 mm earphone and speaker
Sensors	Support for 3-axis sensor
Battery	High capacity 3600mAh internal battery
Operation System	Android OS 4.0.
Input Method	Android THAI soft-keyboard
Sound Mode	Normal, Popular, Rock, Classical, Woofer, Bass and User
Video	Support WMV,MKV and other video formats
Picture Format	Support JPG,BMP,PNG and other image formats
Adapter	Input: AC100~240V/ 50~60Hz,0.5A, Output: DC 5V /2A
brightness adjustment	Grade 5 brightness adjusting function
LxWxH (mm)	184x131x11.5
Weight (g)	350

Maintenance service

- ◆ If you use the equipment or accessories that it's no manufacturing or authorized by Shenzhen Scope Scientific Development Co., Ltd, may result in the failure of product warranty, but also affects the products to use for the normal.
- ◆ Battery and charger equipment in no spear part for the user that repair by themself. We suggest that you can send the product to the service office of the Shenzhen Scope Scientific Development Co., Ltd. If you need maintenance service. Please consult by the service office of the Shenzhen Scope Scientific Development Co., Ltd., as details.

Disclaimer

- ◆ if this manual content and your equipment not match ,please shall prevail by equipment.
- ◆ The Scope Scientific Development Co., Ltd. has the ultimate power of interpretation for this manual.
- ◆ If the Scope Scientific Development Co., Ltd revised technical rules that can reserves the right to notice of no in advance.
- ◆ The Scope Scientific Development Co., Ltd reserves the right to revise this manual , changes without prior notice.
- ◆ Manufacturers retained the right that if without notice in advance can amend the technology rules.

Thank you for choosing "SCOPE SCIENTIFIC DEVELOPMENT CO., LTD. Tablet PC", at a later date, we will provide you with good after-sales service, and try to ensure timely solve your problem.

To give you a more comprehensive understanding" SCOPE SCIENTIFIC DEVELOPMENT CO., LTD. Tablet PC". We provide you with this special after-sale service guide, aims to introduce to you our professional service hotline to Thailand, the warranty terms and other information

Customer service department

**Declaration: SCOPE SCIENTIFIC DEVELOPMENT CO., LTD BASE
ON INTERNATIONAL AFTER SERVICE PRACTICE, AND
INTERPRETATION RIGHT IS RESERVED**

SCOPE SCIENTIFIC DEVELOPMENT CO., LTD

Customer service department

Statement: SCOPE SCIENTIFIC DEVELOPMENT CO., LTD for this interpretation of messages.

In order to let you better use of this product, SCOPE SCIENTIFIC DEVELOPMENT CO., LTD, through the product accompanied with guarantee to you make the following maintenance service commitment, and according to the requirements of the service promise to provide you with maintenance services. This service commitment applies only to date after sales the tablet PC of Scope t standard. The guarantee acceptances please see the relevant product warranty card. All content with products of attachment commitment warranty card shall prevail

1. Definition

SHENZHEN SCOPE SCIENTIFIC DEVELOPMENT CO., LTD:
tablet pc brand name is SCOPE.

2. After-sales service validity

Tablet pc: 2 years

Accessories: without warranty

Others: user manual, After-sales service book, gift box and etc., are not covered into after-sales range.

3. Validity confirmation

a. Warranty period starts from the 15th day of production day. If the last warranty day is legal holiday, then it prolongs to the next day of the legal holiday.

b. If the user unable to provide the invoice and warranty certificate, then the warranty period is calculated from the 15th day of the date

of production on the body of the device.

- c. Prolong of the warranty period after repairing: assumes the remaining warranty of the original product or thirty (30) days from the date of repair, whichever provides longer coverage for you.
- d. The warranty period is from the date of exchange if there is a replacement of new tablet pc. The consumer should ask the sales stamp the invoice and mark the replacement date with new warranty certificate.

4. The following conditions are not within warranty, but repairable with reasonable charges:

- a. Expiration of the warranty period;
- b. Without warranty certificate and invoice, except the one who can provide the evidence of within warranty period.
- c. The nonconformity of the goods with the warranty certificate shows or altered the certificate.
- d. Damage caused by misuse, abuse and improper maintenance such as liquid contact, fire or external causes.
- f. Damage caused by reparation of NON-SCOPE service center or authorized by SCOPE.
- g. Damage caused by natural calamities, such as earthquake, fire, flood and etc.
- h. Damage caused by accident, abuse, misuse, or other external causes including miss operation, carriage, collide, or input the wrong voltage.
- i. Application of nonstandard or have not public released software, or nonstandard tablet pc parts, such as adapter, accessories and etc.
- j. Malfunction due to network or improper operating environment.
- k. Natural wear of the product(including the housing, panel, scratches on touch panel, scratches, dents, and broken plastic on ports) the consumable parts, such as batteries, or protective coatings designed to diminish over time;
- l. The product without original label, or the label is tore, stained or nonconformity of the ID code with the code in the device.
- m. The product or part that has been modified to alter functionality or capability without the written permission of SCOPE; or to defects caused by normal wear and tear or otherwise due to the normal aging of the product .

NOTICE: Do not open the hardware product. Opening the hardware product may cause damage that is not covered by this warranty. Only SCOPE or an authorized service provider should perform service on this hardware product.

5. Terms and conditions

- 1) consumer can return replace or repair the goods within 7 days after selling, if the device has performance problems as article 6 says.
- 2) consumer can replace or repair the goods from the 8th to the 15th day of buying the goods, if the device has performance problems.
- 3) The table pc warrants hardware product against defects in materials and workmanship under normal use for a period of TWO (2) YEARS from the date of retail purchase. If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, SCOPE will repair the hardware defect at no charge, using new parts or refurbished parts that are equivalent to new in performance and reliability, exchange the product with a product that is new or refurbished that is equivalent to new in performance and reliability and is at least functionally equivalent to the original product, or refund the purchase price of the product.
- 4) SCOPE will exchange the product with a new one for free if the device has performance problem after repaired twice with marks in the warranty certificate.
- 5) The seller will exchange the product with a new one for free if the producer fails to provide the spare parts according to the contract which caused the repairing delay beyond 90 days with invoice and marks in warranty certificate.
- 6) Because of the repair center for their own reasons, the repair time than not repaired in 60 days, base on invoice and after-sales service certificate maintenance repair records provided by the seller is responsible for free for consumers to replace the host of the same model specifications.

Note: If your product has to store software programs, data and other information, you should protect its contents, to prevent the loss caused by the possible operational failure. Before you take your product to after-sales service, you have a responsibility to back up the contents

separate, clear you want to protect all personal information and data, and to cancel any protection password. After-sales service process, your products will be deleted, the storage medium will be reformatted. Your product or replacement product will be the return of your initial purchase products to you, and upgrade. System upgrades, third-party applications installed on the hardware may be associated with this hardware is not compatible or does not work. You will be responsible for reinstalling all other software programs, data and passwords. Re-install software programs and user data is not covered under the terms of service.

6. After-sale Service performance failure table

Note: except for network caused by the malfunction.

Name	Performance failure
Host	Functional failure listed on the specification
	Can't open, not working normally
	Non-normal shutdown
	Interface bad
	Housing broken because of structural or material factor
Charger	Not working or not working properly, use the specified charger can not charge
Battery	The charging device is still not working properly.

Terms of Service with reference to the <Tablet PC repair replacement return the responsibility of states>, and continuous improvement based on state laws and regulations. Any questions please call our customer service phone, contact as follows:

Tel:

Fax:

Customer Service Tel:

E-mail:

**SHENZHEN SCOPE SCIENTIFIC DEVELOPMENT CO., LTD
PRODUCT AFTER-SALES SERVICE CERTIFICATE**

Customer Information		Repair Information											
Name	Address	Contact	Postcode										
SN	MAC	Device Information	Model										
		Manufacture date/return date											
Repair date	Record	Repair staff	Return date										
<p>Remark: 1. this warranty card only for scopad 2. Please keep this warranty card for repairing purpose</p> <table border="1"> <thead> <tr> <th colspan="2">Service Information</th> </tr> <tr> <th>Service Office</th> <th>Scopad After sales department</th> </tr> </thead> <tbody> <tr> <td>address</td> <td>tel</td> </tr> <tr> <td>E-mail</td> <td>Post code</td> </tr> <tr> <td></td> <td>website</td> </tr> </tbody> </table>				Service Information		Service Office	Scopad After sales department	address	tel	E-mail	Post code		website
Service Information													
Service Office	Scopad After sales department												
address	tel												
E-mail	Post code												
	website												

- 26 -

FCC Notice

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct

The interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: "Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."