

PEI
Vehicle Security System

GENESIS

Installation & Operating Manual

- ※ Two 3 Channel Transmitters
- ※ 2nd Channel Output for Trunk release
- ※ 3rd Channel Output for Remote Starter
- ※ Dual Zone Shock Sensor Plug-In
- ※ Door Entry Protection
- ※ Personal/Panic Feature
- ※ Dome Light supervision
- ※ Remote Shock Sensor Disable
- ※ Five Function LED Plug-In
- ※ Intrusion Event Memory
- ※ 120dB 6Tone Siren
- ※ Last Door Automatic Arming
- ※ Flashing Parking Lights
- ※ Starter Disable
- ※ R.F Lock-Out Safety Feature
- ※ Valet Override Switch Plug-In
- ※ Faulty Zone By-Pass
- ※ Audible/Visual Intrusion Alert
- ※ Door locking & Unlocking W/Ign
- ※ Remote Door Lock/Unlock Plug-In