

LT004 User Manual

1. You can use it by remove the plastic film.
2. Press Still the transmitter button and the relativity receiver will have beep sound after 1~5 seconds. Each color receiver has different Beep Sounds.
3. Keep each receiver distance over 1 meter and put away from iron.
4. In no barrier place, transmitter cans remote handling receivers over 10 meters.

Specification:

Receiver Battery: 2032 / 3 V

Transmitter Battery: 23A /12V

Receiver operating current: 3 mA

Transmitter operating current: 16 mA

Receiver Battery stands by: about 90 days

Transmitter Battery stands by: 1 year

Frequency: 433.92 MHZ

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFEERENCE THAT MAY CAUSE UNDESRIED OPERATION