

Characteristics of Device:

1. Press and Hold Both 1#3 of AR88 to enter program status. At this time, the LED on AR88 will flash 3 times, then 2 times after 10 seconds.
2. Place your Source Remote Control and AR88 (Target) as close as possible (within 3 cm ~ 5 cm) Press and hold one button on your Source Remote Control as well as the desire programmed button on AR88 (we recommend from button #1) at the same time.