

# Operation Manual

When press the first button of the **Remote Control Lock**, it will send out the first set of anode signal. Press the second button, it will send out a second set of signal. This Remote Control Lock is for car auto lock. When the first button pressed, the auto lock will Lock up the door. And when the second button pressed, the door will Unlock.