



Portman Security System International Co., Ltd.


COMPACT ALARM AM50/AM52/AM55

Remote Controller Functions

Button	Step	Functions
1	Press once	Arm/disarm
1→2	Press button 1 then 2 within 5 sec	Arm bypassing shock sensor
1→2→2	Press button 1 once then 2 twice within 5 sec.	Arm bypassing current sensor
1+2	Press button 1 and 2 at the same time	Set shock sensor trigger intensity/current sensor trigger delay time
1	Press button 1 for 3 seconds	Car finder and remote panic

AM55

T25-315

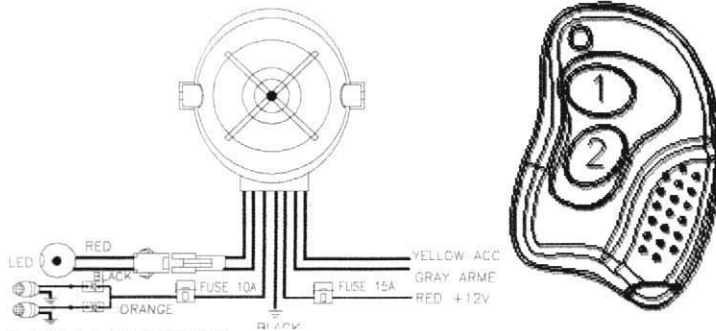

CODE LEARNING:

In case the transmitter is lost or failed, or if you want to add more transmitters, Please refer to the following procedures:

- When disarmed, turn ACC OFF/ON 8 circles (OFF then ON as a circle) and stay at ACC ON within 8 seconds. After 8 seconds the siren will chirp 3 times to enter code-learning mode.
- Press any button of the transmitter within 8 seconds. If over 8 sec the transmitter is not pressed or turn ACC OFF, the system will exit code-learning mode automatically.
- The siren will chirp accordingly for confirmation as soon as the code is learned. For example, the first transmitter is learned, the siren will chirp once. The second transmitter is learned, the siren will chirp twice.
- If one of the transmitters is programmed, the other transmitters must be reprogrammed at the same time.
- Up to 3 transmitters can be learned per module.

ARMING

- When disarmed, press button 1 once, siren will chirp once, lamp will flash once, LED will flash slowly and engine starter will be disabled. 5 seconds later, the system will be armed completely. (System will not be armed when ACC ON.)
- In armed mode, the system will be triggered by shock or current change.
- The current sensor trigger delay time can be selected with 8 seconds or 4 minutes. (Selected in system setting column)

ARM BYPASSING SHOCK SENSOR

- When disarmed, press button 1 once, siren will chirp once, and then press button 2 once within 5 seconds, the siren will chirp once shortly, 5 seconds later, the system will be armed completely, at the same time the shock sensor is bypassed.
- In this mode, the system cannot be triggered by shock. But the current sensor will work normally.

ARM BYPASSING CURRENT SENSOR

- When disarmed, press button 1 once, siren will chirp once, and then press button 2 twice within 5 seconds, the siren will chirp once lengthily, 5 seconds later, the system will be armed completely, at the same time the current sensor is bypassed.

- In this mode, the system cannot be triggered by current change. But the shock sensor will work normally.

DISARMING

- When armed, press button 1 once, siren will chirp twice, lamp will flash twice, then the system is disarmed.
- If siren chirps 4 times, lamp will flash 4 times which means that the system has been triggered during arming mode. LED will be OFF and engine will be enabled.

CAR FINDER AND REMOTE PANIC

At any time, press button 1 for 3 seconds, siren will sound for 30 seconds to find car or for remote panic. And press button 1 once will stop the sounding. (When ACC OFF, siren will sound for 30 seconds and lamp will flash for 30 seconds, system will be armed 30 seconds later.)

SYSTEM SETTING

- Within 10 seconds after disarming the system, press button 1+2 at the same time, siren will chirp lengthily, indicating that the system enters shock sensor trigger intensity setting mode.
- Press button 2 once, siren will emit different tones, total eight tones, representing 8 levels of shock trigger intensity. The lower tone the lower the trigger intensity, the higher tone the higher trigger intensity.
- While setting the shock trigger intensity, knock the vehicle, siren will chirp once when the shock intensity can trigger the alarm. Then press button 1, the system will record the setting. The siren will chirp twice to confirm the setting. And if you press button 2, system will shift to other level of trigger intensity setting. Once you get the desired shock trigger intensity, just press button 1 to record and confirm the setting.
- After setting the shock trigger intensity, the system will automatically enter the mode of setting current trigger delay time. The delay time can be 8 seconds or 4 minutes.
- Press button 2 once, the siren will chirp once, indicating that the system will be triggered by current change after 8 seconds of pressing the arming button;
- While press button 2 twice, siren will chirp twice, indicating that the system will be triggered by current change after 4 minutes of pressing the arming button.
- Press the button 1 once to confirm your selection, siren will chirp once. Then the system will exit the setting mode.

During system setting mode, if no button is pressed over 20 seconds, the system will automatically return to the disarmed mode.

SIREN EMERGENCY SOUND

When armed, siren will continue sounding for 30 seconds, lamp will flash for 30 seconds and LED will flash quickly, if the system is triggered.

EMERGENCY DISARMING - OVERRIDE

- In arming, insert the key, then turn ACC OFF/ON 5 circles (OFF then ON as a circle) and stay at ON within 8 second.
- 8 second later siren will chirp 4 times for indication of disarming

Notice :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC COMPLIANCE STATEMENT:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

REV: A