


MOTORCYCLE ALARM

REMOTE CONTROL:

Button	Step	Function	Condition
1	Press once Press once	Arm/Disarm Stop alarm sounding	ACC OFF Alarm sounding
2 1	Press 2 then 1 within 2 sec.	Silent Arm/Disarm	When disarmed & ACC OFF
2	Press once	1. Enter Anti motorcycle-jacking 2. Set Arm w/o Shock Trigger	While driving Armed
2 for 2 sec	Press and hold for 2 sec.	1. Exit Anti motorcycle-jacking 2. Shock Sensor Trigger Intensity Learning	In Anti motorcycle-jacking mode. Disarmed
1 + 2	Press 1&2 at the same time	Panic	Anytime

T23

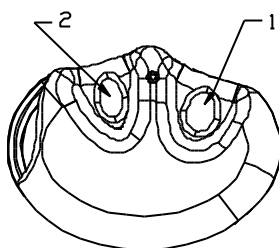

FEATURES:

CODE LEARNING

In case the remote control is lost, or you want to add more remote controls (up to 3 most). Please refer to following procedures:

1. In disarming mode, turn ACC ON, press Valet switch 10 times within 8 sec. Siren will chirp 3 times.
2. Press any button on the transmitter, siren will chirp the times of transmitter's sequence. E.g. One chirp for the first transmitter, twice for the second, three times for the third.
3. After 8 sec or turn ACC OFF., the system will automatically exit code learning and store the code.

SHOCK SENSOR TRIGGER INTENSITY LEARNING

1. In disarmed mode, turn the key to OFF position, press button 2 for 2 sec., siren will chirp 3 times to indicate entering Shock Sensor Trigger Intensity learning mode.
2. To knock the motorcycle to create the vibration intensity threshold you want to set, siren will chirp twice to indicate shock sensor intensity has been learned. At the same time system will exit the learning mode, or chirp 5 times in 8 sec. to indicate shock sensor intensity has not been learned, and exit this mode automatically.

ARMING

1. In disarmed mode, turn ACC OFF, press button 1 once, siren will chirp once. After 5 sec., system will be armed automatically, LED flashes slowly for 15 sec. and disable engine.
2. In arming mode, to turn on the key will trigger the siren. The siren will keep 30 sec-cycle sounding till key turned to OFF. After the key is turned to OFF, siren will keep sounding till cycle end.

ARMING W/O SHOCK SENSOR

When system enters arming mode, within 5 sec. , press button 2 once, system will long chirp once and lamp will flash once to indicate that the shock sensor is bypassed.

SILENT ARMING

In disarmed mode, turn the key to OFF, press button 2 and then button 1 within 2 sec., lamp will flash once, 5 sec. later system will be armed automatically, LED will flash slowly for 15 sec. and disable engine.

DISARMING

1. In arming mode, press button 1 once, siren will chirp twice, lamp will flash twice. Then system will be disarmed and enable the engine starter.
2. If the alarm is triggered during arming mode, siren will chirp and lamp will flash 4 times when disarming.
3. If auto re-arming selected, 30sec. later system will be armed automatically when key keeps OFF.

AUTO RE-ARMING

After disarming, 30 sec. later if driver hasn't start engine, system will be rearmed automatically. LED will flash slowly for 15sec.

CAR FINDER

In arming mode, press button 2 once, siren will chirp 5 times and lamp will flash 5 times for motorcycle finding.

PANIC

1. Press button 1+2 at the same time, lamp will flash and siren will sound for 10 sec.
2. Press any button to stop sounding.

ANTI MOTORCYCLE-JACKING

1. When key has been turned ON, press button 2, then motorcycle-jacking mode is activated. Siren will chirp once every 3sec., after chirping 5 times, siren will chirp once every 1.5sec. After chirping 8 times, lamp will flash and siren will sound for 10 sec. Then lamp will continue flashing and siren will continue sounding and disable the engine. During anti motorcycle-jacking mode, when the key turns to OFF, siren will stop and engine will be disabled. If key has been turned to ON again, siren will sound and engine will not be able to start. LED will flash quickly.
2. To exit anti motorcycle-jacking : Turn key to ON, and press button 2 for 2 sec.

SHOCK SENSOR

In arming mode, if motorcycle is knocked lightly, siren will chirp twice and lamp will flash twice for warning (chirp 1 sec. and stop 1 sec.), if motorcycle is shocked heavily, siren will chirp 10 sec.,

EMERGENCY OVERRIDE

In arming mode, if remote control is failed or lost, please refer to following step for Emergency Override: Turn key to ON, press valet switch 5 times within 10 sec., siren will chirp 4 times, the system is then disarmed.

FUNCTION SELECTION

1. In disarming mode, turn ACC to ON, press valet switch 7 times within 8 sec. After 8 sec siren will chirp 1 time.
2. Then turn ACC OFF, LED will flash, press valet switch (siren will chirp once per press) until you get the numbers you want to change the functions (within 10 sec.).
3. Turn ACC to ON, siren will chirp once or twice to indicate the functions you select. In case it chirps 3 times to indicate input failed.

NO.	FUNCTION SELECTION	PRESET (CHIRP ONCE)	VARIABLE (CHIRP TWICE)
1	AUTO REARMING	YES	NO
2	ANTI MOTORCYCLE-JACKING	YES	NO

Notice :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.