

HWT-5000

Owner's Manual
HANWHA/TELECOM

FCC RF EXPOSURE INFORMATION

Read this information before using your handset

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations using the Hanwha belt-holster. To comply with FCC RF exposure requirements use only Hanwha approved accessories. When carrying the phone with the power on, use only the specific Hanwha belt-holster that has been tested for compliance. The use of non Hanwha approved accessories may not comply with FCC RF exposure requirements and should be avoided.











For more information about RF exposure, please visit the FCC website at www.fcc.gov

Getting to know Your phone.

1. MENU : used to enter the MENU facility and return to standby mode
2. SEND : Lets you place and receive calls
3. CLS : Allows you to clear characters from the screen
 - To erase one character from the display screen, briefly press it once
 - To erase all of them, hold it down for one second
4. END : Lets you disconnection a call and backup menu levels
5. Message Key : Lets you access your voicemail or SMS box and read to your messages.
6. PWR : Turns the phone on and off
7. STO : used to confirm a setting in the menu facility and stored the number
8. i : emergency Key, you can store one number for emergency. It does operate when the Keyguard is activated
9. '▲*': - used to scroll up through menu functions & allows you to select the type of character(upper-case , lower-case, symbol) while in edit functions
10. '#▼': used to scroll down through menu functions

Display indicators.

Different indicators are displayed based on the phone's operation mode.

-  Indicates that your Phone is operating in digital mode. If this indicator is not displayed, either your phone is operating in analog mode or no service is available.
-  Indicates that your Phone is operating in analog mode.
-  Measures your current signal strength. More lines means more signal strength.
-  This means the phone is outside service areas. When this is displayed, you cannot use your phone.
-  Tells you a call is in progress.
-  If this indicator is not displayed, you are in the HOME Network. If it is displayed(it may or may not be flashing), you are on another service provider's network.
-  Indicates when you have SMS messaged waiting.
-  Shows the level of your battery charge. The more black you see, the greater the charge.
-  Ringer off indicator
-  Voice message indicator

QUICK GUIDE:

- Making a call: Key in the area code and phone number and press "SEND" key
- Receiving a call: Press any key except the "PWR" key
- Adjust Volume: Press to ▲ increase and ▼ to decrease the volume. (side key will do
The same function)
- Clear a digit: Press the "CLR" key
- Clear display: Press and hold the "CLR" key for more than 1 second
- Ending the call: Press the "END" key
- Last number redial: Make sure the display is clear and press "SEND" key for more than 1 second

The Menu Facility:

- Enter menu facility: Press the "MENU" soft key
- Select function: Press the "STO" soft key
- Exit function: Press the "END" key
- Scroll key: Press▲ to scroll forward and ▼ to scroll backward

Memory Functions:

- Storing a number: ensure the display is clear, enter area code and phone number. Press
"STO" key to enter a name. Press and hold the "STO" key to save the
name.
- Searching for a name: with a clear display, press the "STO" key then follow the display
- Searching for a number: with a clear display, press the "STO" key then follow the display
- Speed dialing: Press a location number for more than one second.

Contents:

Page

1.For your safety

2.Battery and signal

- To charge the battery
- Talk and standby time
- Important Information for the battery
- Signal Strength Indication

3.The Basis

- To switch your phone on and off
- To make a call
- To male a call by using stored numbers
- To answer a call
- To send your own number
- To store information
- To store caller's number
- To mute your phone's microphone
- To make an emergency call
- Roam indicator beep
- Voice mail confirmation

4. Standby State

a. Memory Function

- Call Time
- Number Store
- Memory Search
- Emergency
- Memory Clear
- Memo View

b. Call Set

- Ring Volume
- Ring Type
- Auto Redial
- Auto Answer
- Handsfree Volume
- Anykey Answer
- Connection Beep

c. Phone Set

- Backlight
- Greeting
- Call Volume
- Key Volume
- Key Length
- Start Sound
- Contrast

d. Security

- Auto Lock
- Lock Code
- Restrict
- Phone Reset
- Network

e. Alert Option

- Area Change
- Call Drop
- 1Min. Alert
- Roaming Alert

f. NAM Select

- Manual NAM

g. Schedule

- Alarm Set
- Plan Setting
- Plan Search

I. Call Alert

J. Phone Number

5. Standby State

a. Message Viewing/Hearing

- Text Message Viewing
- Voice Message Hearing
- Message All Clear

b. Message Edit/Send

- Text Message Send
- Paging

- 6. Dialing State
 - a. Stop
 - b. Hyphen
- 7. Conversation State
 - a. Send Phone Number
 - b. View Phone Number
 - c. Memo
 - d. Phone Number Memo
 - e. Mute
 - f. Memory Search
- 8. Conversation & Dialing State
 - a. Send Phone Number
 - b. Stop
 - c. Hyphen
- 9. Accessories
- 10. Reference Information
- 11. Care and Maintenance
- 12. Troubleshooting
- 13. Technical Information

1. For your safety

- ☞ Don't use a Hand-held phone while driving; use hands-free equipment or park the vehicle first
- ☞ Switch off in Hospitals, on Aircraft, when refueling, near blasting area
- ☞ Use only in the normal position (to ear)
- ☞ Radio interference may affect the performance of the phone. Please, do not rely solely upon the phone for essential communications.
- ☞ Only qualified service personnel may install or repair cellular phone equipment.
Use only approved accessories and batteries.

2. Battery and signal

- ☞ Please use only batteries approved by the phone manufacture and recharge your battery only with the charges approved by the manufacture.
- ☞ A new battery's full performance is achieved only after two or three complete charge and discharge cycles.

Please turn off the power before removing the battery.

To charge the battery

- ☞ Plug the charger into a standard AC wall outlet then place the phone in the desk top charger.
- ☞ If the battery charging is too hot or cold, the charging may be interrupted.

Talk and standby time

Size	Spec.	Calculation	CDMA mode	Amps Mode
Standard Battery (1000mAh)	Standby Time	Calculation Data	50~70 hours	9 hours
	Talk Time	Display in Manual	30~70 hours	5~10 hours
	Standby Time	Calculation Data	115~117 mins	60mins
	Talk Time	Display in Manual	90~120 mins	30 ~ 60 mins
Extended Battery (1400mAh)	Standby Time	Calculation Data	71~100 hours	13 hours
	Talk Time	Display in Manual	50~100 hours	10~15hours
	Standby Time	Calculation Data	164mins	84mins
	Talk Time	Display in Manual	140~170mins	60~90 mins

Important Information for the battery.

- ☞ Use only batteries and chargers approved by the phone manufacturer.
- ☞ The battery can be charged and discharged many of times but it will eventually wear out.
- ☞ When the operating time is noticeably shorter than normal, it is time to buy a new battery.
- ☞ Do not dispose of a battery in a fire.
- ☞ Use the battery only for its intended purpose
- ☞ Overcharging may shorten its life. Please do not leave the battery connected to charger for more than a week

Signal Strength Indication



- ☞ The higher the bar, the stronger the signal is where you are operating your phone.
- ☞ If the signal is poor and you are using the phone in a building, you may get better Reception near a window.

The Basics


1. To Switch your phone On and Off

To Switch your phone On

- Press and hold down the “END” key for more than 1 second.
(Your phone number will appear on the display briefly and you will hear a beep.)
- Then, a greeting, the day of the week, month, date and time will appear on the display.
- Your phone allows you to change the greeting that appears on the display.
(For changing the greeting, see “Banner”(MENU + 2 + 2) in the menu.)

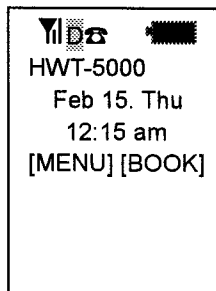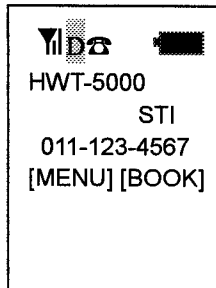

 - If Lock Mode is activated, your phone will ask you to enter your security code.
- After you enter your security code, your phone will be in standby state. (The factory default code is 0000, and that is what your phone will accept until it is changed.)

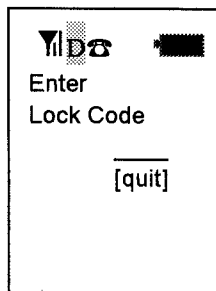

To Switch your phone Off

- Press and hold down the “END” key for more than 1 second.

2. To make a call

- Enter the phone number. Include the area code if necessary.
- Press the “SEND” Key.
- Then you can speak.
- When you want to hang up, press “END” key.
(When you press “END” key, call timer will remain on the screen for about 2 seconds.)
- Press “CLR” key to delete the last character or press and hold down “CLR” key to clear the entire display.
- You can adjust volume of earpiece with the two buttons on the side of your phone, the [Side-down] Key. (This feature is only available while in a conversation.)



 
- In standby state, the [Side-down] Key adjusts the ringer volume.

3. To make a call by using stored numbers. (Speed dialing)

- If you plan on using this feature, you will need to store your most frequently-dialed numbers in memory locations 0 through 99.
- For stored numbers in memory location 0 to 9, press the digit for more than 1 second, and for stored numbers in memory location 10 to 99, press the first digit briefly and then press the second digit for more than 1 second.


4. To answer a call

- The ring sounds.
- When you receive a call, you can press any other key on your phone to answer an incoming call, with the exception of the “END” key.
- When you want to hang up, press “END” Key.
- Call timer will remain on the screen for about 2 seconds, then connected time will be appeared.

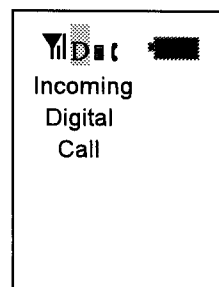

5. To mute your phone's microphone (MUTE)

 - This feature allows you to mute your phone's microphone while in a conversation.
- While using mute, you can still hear the caller's voice.
- Press the “MENU + 7 + 4” Key while in a conversation.
- **To unmute your phone's microphone.**
Press the “MENU + 7 + 4” Key again or press “END” key to deactivate this feature.

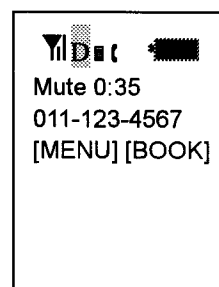

6. To make an emergency call (EMERGENCY CALL)

- This feature allows you to make emergency calls with a single push of a button.
- For more information about storing the emergency call number, see the section on “MENU + 6 + 4”.)

 
7. Roam indicator beep (ROAMING)

- When you enter or leave your roam service area, your phone will beep and display the roaming icon on the screen.

Standby State (Menu Key)


1. Volume

- This feature allows you to customize your phone's volume settings such as your phone's ringer, your phone's earpiece, your phone's keypad tones and your phone's received message.

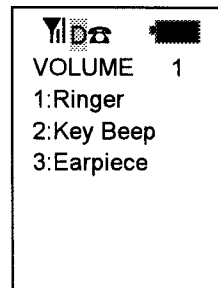


1) Ringer

 - ⇒ With this feature, you can adjust your phone's ringer volume.
- ⇒ Press the "MENU + 1 + 1" Key.
- ⇒ Use the '▲*' or '#▼' Key to adjust your phone's ringer volume, then press the "SK1" Key to store it.

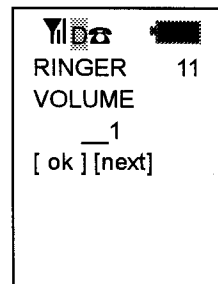


2) Key keep

 - ⇒ You can adjust the volume of keypad tones.
(The keypad tones are the sounds you hear when you press any key on your phone's keypad.)
- ⇒ Press the "MENU + 1 + 2" Key.
- ⇒ Use the '▲*' or '#▼' Key to adjust the volume of keypad tones, then press the "SK1" Key to store it.
- ⇒ The two buttons on the side of your phone allow you to adjust keypad tones in standby state.

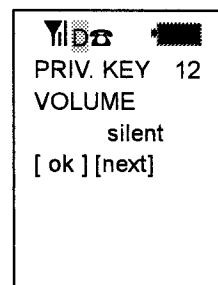


3) Earpiece

 - ⇒ You can adjust volume of earpiece.
(The earpiece are the sounds you hear while in a conversation.)
- ⇒ Press the "MENU + 1 + 3" Key.
- ⇒ Use the '▲*' or '#▼' Key to adjust the volume of the earpiece, then press the "SK1" Key to store it.
- ⇒ The two buttons on the side of your phone allow you to adjust earpiece in a conversation.

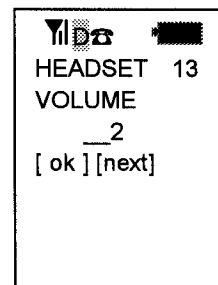

4) Message

 
- ⇒ You can adjust the volume of beep when your message is received.

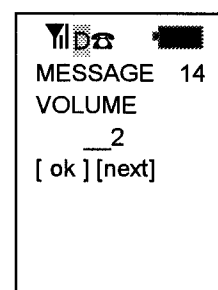

- ⇒ (The message alert are the sounds you hear when your phone's received message.)
- ⇒ Press the "MENU + 1 + 4" Key.
- ⇒ Use the '▲*' or '#▼' Key to adjust the volume of the received message, then press the "SK1" Key to store it.


2. Display

 - This feature allows you to customize your phone by setting its backlight-illuminating duration and setting the banner and setting the date/time.

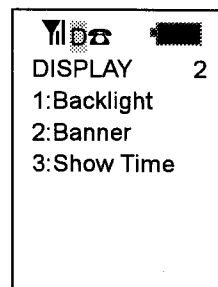


1) Backlight

 - ⇒ You can choose the light-up-duration of your phone's display and keypad.
- ⇒ Press the "MENU + 2 + 1" Key.
- ⇒ Press the '▲*' or '#▼' Key to select the desired setting (Always Off / 10seconds / 30seconds / Always On), then press the "SK1" Key to store it.

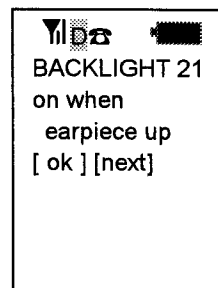


2) Banner

 - ⇒ Your phone allows you to change the greeting that appears on the initial screen.
- ⇒ Press the "MENU + 2 + 2" Key.
- ⇒ Enter new greeting, or edit the existing one, using the letters on the keypad. (Maximum 12 characters)

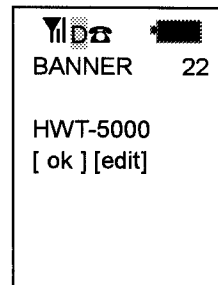


3) Showtime

 - ⇒ Your phone allows time and date you received that appears on the initial screen.
- ⇒ Press the "MENU + 2 + 3" Key.
- ⇒ Your phone's time and date can not change.

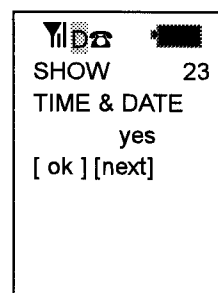


4) AutoHypen

 - ⇒ With this feature, you can insert hyphen into a phone number.
- ⇒ Press the “MENU + 2 + 4” Key when you want to insert hyphen into a phone number.

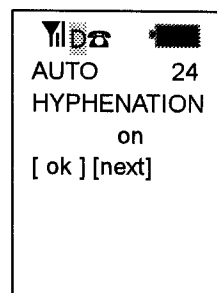


5) Version

 - ⇒ You can see software version of your phone.
- ⇒ Press the “MENU + 2 + 5” Key.
- ⇒ [MORE]
PRL version
ESN

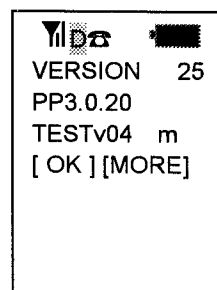


3. System

 - This feature allows you to customize your phone by setting its system, force mode and data/fax.

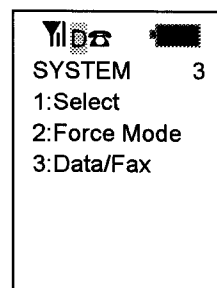


1) Select

 - ⇒ You can choose a home system you should use.
- ⇒ Press the “MENU + 3 + 1” Key.
- ⇒ If this feature is set to **standard** and your phone failure of acquire the system, your phone is able to select another system. (System B preferred)

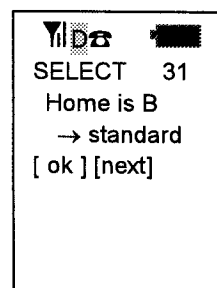


2) Force Mode

 - ⇒ You can choose a network system you should use.
- ⇒ Press the “MENU + 3 + 2” Key.
- ⇒ Press the ‘▲ *’ or ‘# ▼’ Key to select the desired setting (**Automatic / CDMA Only / PCS Only / Cell only**), then press the “SK1” Key to store it.

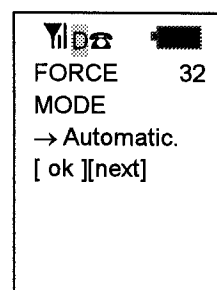


3) Data/Fax

 - ⇒ You can choose a fax and modem you should use.
- ⇒ Press the “MENU + 3 + 3” Key.
- ⇒ Press the ‘^*’ or ‘#▼’ Key to select the desired setting (**fax for next call/fax until powered off/modem for next callmodem until powered off**), then press the “SK1” Key to store it.

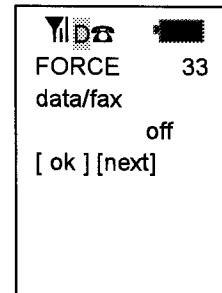


4. Alerts

 - This feature allows you to activate or deactivate every kind of beep sound.

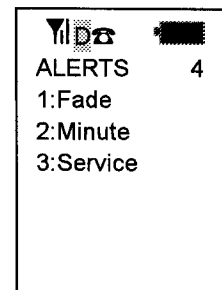


1) Fade

 - ⇒ If your phone's connection is cut off abnormally, and this feature is set to **On**, your phone will beep once.
- ⇒ Press the “MENU + 4 + 1” Key.
- ⇒ Press the ‘^*’ or ‘#▼’ Key to select the desired setting (**On / Off**), then press the “SK1” Key to store it.

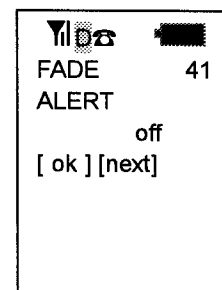


2) Minute

 - ⇒ If this feature is set to **On**, your phone will beep once per minute.
(The beep will not be sent to other party)
- ⇒ Press the “MENU + 4 + 2” Key.
- ⇒ Press the ‘^*’ or ‘#▼’ Key to select the desired setting (**On / Off**), then press the “SK1” Key to store it.

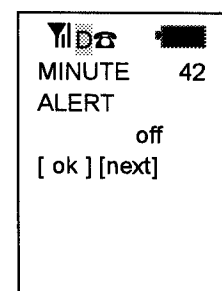


3) Service

 - ⇒ If your service area is changed, and this feature is set to **On**, your phone will beep once.
- ⇒ Press the “MENU + 4 + 3” Key.
- ⇒ Press the ‘^*’ or ‘#▼’ Key to select the desired setting (**On / Off**), then press the “SK1” Key to store it.

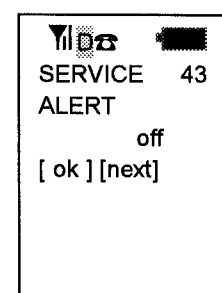


4) RoamRinger

 - ⇒ When your phone begins roaming, your phone will beep once.
- ⇒ Press the “MENU + 4 + 4” Key.
- ⇒ Press the ‘^*’ or ‘#v’ Key to select the desired setting (On / Off), then press the “SK1” Key to store it.

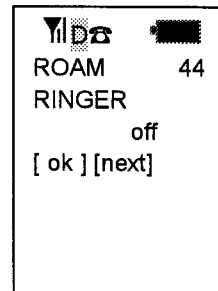


5. Call Info.

 - This feature allows you to manage call and run time.

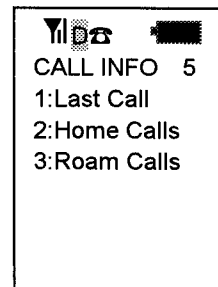


1) Last Call

 - ⇒ This feature shows the duration of the last call.
- ⇒ Press the “MENU + 5 + 1” Key.
- ⇒ If you want to clear, Press the “CLR” Key.

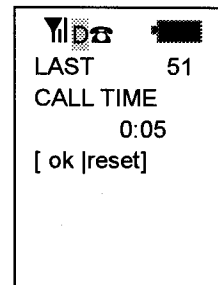


2) Home Calls

 - ⇒ This feature shows the duration of home areas calls.
- ⇒ Press the “MENU + 5 + 2” Key.
- ⇒ If you want to clear, Press the “CLR” Key.

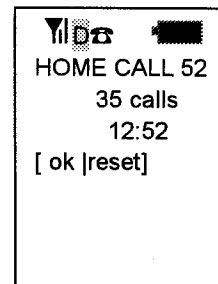


3) Roam Calls

 - ⇒ This feature shows the duration of roaming calls.
- ⇒ Press the “MENU + 5 + 3” Key.
- ⇒ If you want to clear, Press the “CLR” Key.

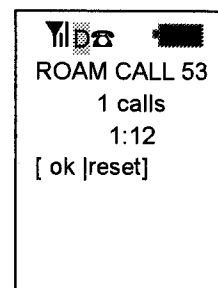


4) All Calls

 - ⇒ This feature shows the duration of all calls.
(This is merged into two sections, the duration of incoming calls and the duration of outgoing calls.)
- ⇒ Press the “MENU + 5 + 4” Key.
- ⇒ If you want to clear, Press the “CLR” Key.

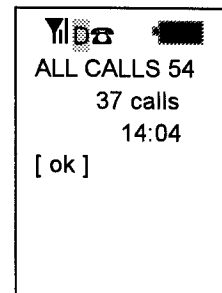


6. Security

 - This feature allows you to restrict calls, lock your phone, change your security code and prevent stored numbers and information from being changed and deleted.
- Unlike other features, your phone will prompt you for your security code to program these security features.

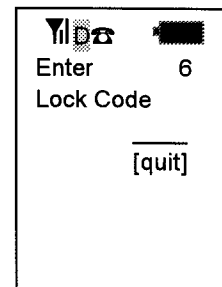


1) Lock Mode

 - ⇒ When this feature is activated, your phone will be locked every time you switch on your phone.
- ⇒ Press the “MENU + 6 + 1” Key.
- ⇒ Press the ‘^ *’ or ‘# v’ Key to choose **on power** or **now** or **never**, then press the “SK1” Key to store it.

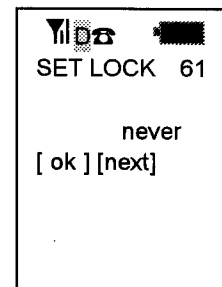


2) Restrict

 - ⇒ This feature allows you to restrict outgoing calls to and from your phone.
- ⇒ Press the “MENU + 6 + 2” Key.
- ⇒ Press the ‘^ *’ or ‘# v’ Key to select the desired setting (**Yes or No**), then press the “SK1” Key to store it.
- ⇒ You can prevent stored numbers and information from being changed and deleted.

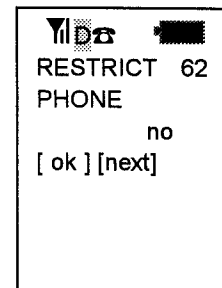

3) New Code


 
- ⇒ You can change your lock code (a security code) with this feature.

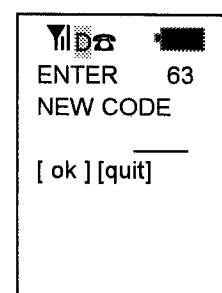

- ⇒ Press the “MENU + 6 + 3” Key.
- ⇒ Enter new lock code you want to store, then press the “SK1” Key to store it.


4) Emergency#

  - ⇒ This feature allows you to change an emergency number. When you enter an emergency number, you can make emergency calls, with a single push of “i” Key
- ⇒ Press the “MENU + 6 + 4” Key.
- ⇒ When you enter your security code, your phone will ask you to enter a new emergency number.
- ⇒ Enter a new emergency number, then press the “SK1” Key.
- ⇒ Enter the associated name, then press the “SK1” Key.
- ⇒ You can, in standby state, enter a new emergency number, then press the “i” Key.
- ⇒ Enter the associated name, then press the “SK1” Key

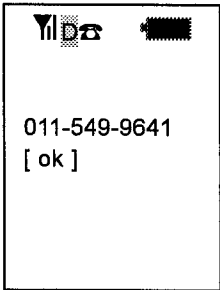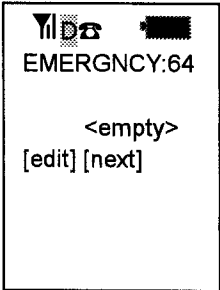


5) ClearCalls

 - ⇒ You can reset your phone back to the initial setting.
- ⇒ Press the “MENU + 6 + 5” Key.
- ⇒ Your phone will be initialized but the phone numbers you stored will remain.
- ⇒ Press the ‘^*’ or ‘#v’ Key to select the desired setting (Yes or No), then press the “SK1” Key to store it.
- ⇒ (After you activate this feature, your phone will be switched off.)

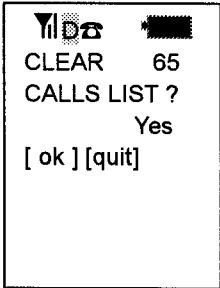


7. Features

 - This feature allows you to customize your phone’s calling settigs such as automatic answering, automatic redialing.

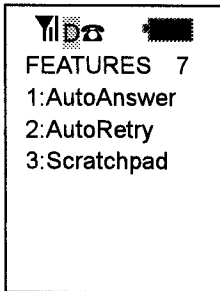

 
1) Auto Answer

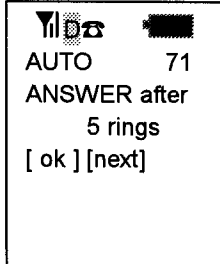

- ⇒ You can set your phone to answer calls automatically.
- ⇒ Press the “MENU + 7 + 1” Key.
- ⇒ Press the ‘*’ or ‘#’ Key to select the desired setting (Off, 1 ring, 3 rings, 5 rings), then press the “SK1” Key to store it.


2) AutoRetry

 - ⇒ When your call does not go through because of a weak signal, your phone can redial the number you are trying to call.
- ⇒ Press the “MENU + 7 + 2” Key.
- ⇒ Press the ‘^ *’ or ‘# v’ Key to select the desired setting (Off, 10sec, 30 sec and 60sec), then press the “SK1” Key to store it.

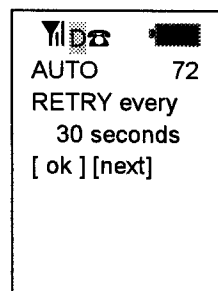


3) Scratchpad

 - ⇒ This feature allows you to store numbers or letters by various means while in a conversation.
- ⇒ Press the “MENU + 7 + 3” Key.
- ⇒ This features can only be used during a call.

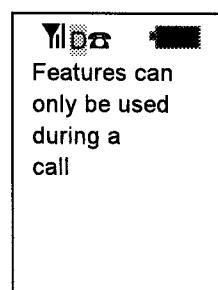


4) Mute

 - ⇒ You can mute your phone's microphone while in a conversation.
- ⇒ Press the “MENU + 7 + 4” Key, then the word “Mute” will flicker on the display.
- ⇒ Press the “MENU + 7 + 4” Key again to deactivate this feature.
- ⇒ This features can only be used during a call.

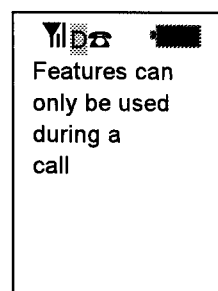


5) BeepLength

 - ⇒ You can adjust the length of beep.
- ⇒ Press the “MENU + 7 + 5” Key.
- ⇒ Use the ‘^ *’ or ‘# v’ Key to adjust the length of beep, then press the “SK1” Key to store it.

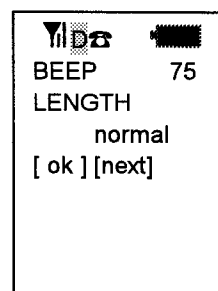

6) One-Touch

 - ⇒ If you plan on using Speed dialing, you will need to store your most

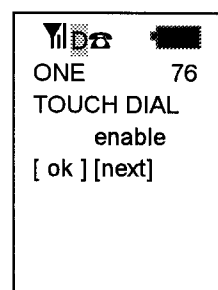


frequently-dialed numbers in memory locations 0 through 99.

- ⇒ For stored numbers in memory location 0 to 9, press the digit for more than 1 second, and for stored numbers in memory location 10 to 99, press the first digit briefly and then press the second digit for more than 1 second.
- ⇒ Press the “MENU + 7 + 6” Key.
- ⇒ Press the ‘^ *’ or ‘# ▾’ Key to select the desired setting (**Enable or Disable**), then press the “SK1” Key to store it.

7) Privacy

 - ⇒ Press the “MENU + 7 + 6” Key.
- ⇒ Press the ‘^ *’ or ‘# ▾’ Key to select the desired setting (**standard or enhanced**), then press the “SK1” Key to store it.
- ⇒ Standard means privacy mode OFF
- ⇒ Enhanced means privacy mode ON

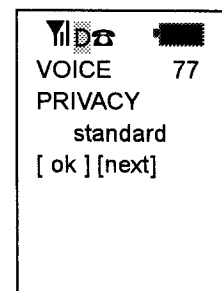


8) SIO Config

⇒




[1] Port Map

 - ⇒ U1 -- HFK

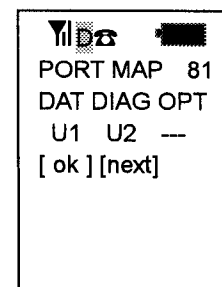

[2] DS Baud

 - ⇒ 9600, 19200, 38400, 57600, 115200, AUTOBAUD

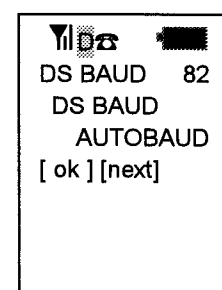

8. Tests

TESTS	8
1:SMS	
2:BC SMS	
3:Call Mngr	

1) SMS

⇒

SMS TEST	1
1:Send Msg	
2:Get Status	
3:Clear AI	

[1] Send Msg

⇒

SMS SEND M1	
1:CMT-95	
2:CPT-95	
3:AC_MAX - 1	

- 1. CMT-95
- 2. CPT-95
- 3. AC_MAX-1
- 4. AC_MAX
- 5. AC_MAX+1
- 6. TC_MAX-1
- 7. TC_MAX
- 8. No b_reply

[2] GetStatus

⇒

SMS GET ST2	
1:Status	1
2:Status	2
3:Status	3

- 1. Status 1
- 2. Status 2
- 3. Status 3
- 4. Status 4
- 5. Status 5
- 6. Status 6
- 7. Status 7
- 8. Status 8

[3] Clear All



Clearing
statuses of
all msgs...

[4] SMS All



- 1. Originate
- 2. Orig SO6
- 3. Org SO14
- 4. Auto-D ON
- 5. Auto-D OFF

SMS CALLS 4
1:Originate
2:Orig SO6
3:Orig SO14

[5] Reset SeqN



Resetting
SMS TL
sequence
number...

2) BC SMS



BC SMS
Not Allowed!

[1] SrvcConfig



BC SMS
Not Allowed!

[2] Srvc Pref

- ⇒ Press the “MENU + 8 + 2 + 2” Key.
- ⇒ Press the ‘^ *’ or ‘# v’ Key to select the desired setting (**Deactivate or Activate Table Only or Activate All Services**), then press the “SK1” Key to store it.
- ⇒

Deactivate

[ok] [next]

[3] Srvc Slct

- ⇒

[4] Srvc Info

- ⇒
- 1. Srvc IDs
- 2. Srvc Info

3) Call Mngr

- ⇒

[1] Register

- ⇒
- 1. PH INFO
- 2. Call INFO
- 3. SS INFO

[2] Activate

⇒

1. PH INFO
2. Call INFO
3. SS INFO

[3] DeRegister

⇒

1. PH INFO
2. Call INFO
3. SS INFO

[4] Get Info

⇒

1. PH INFO
2. Call INFO
3. SS INFO

4) NV

⇒

5) UI

⇒

[1] UI Rng on



 
[2] UI Rng off




6) Analog HFK



7) Other

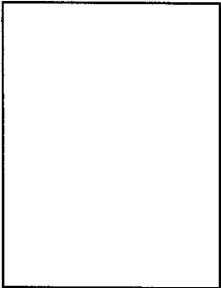

 8) RF

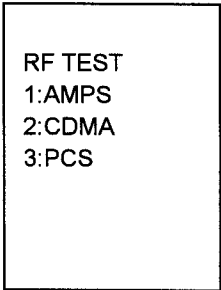


[1] AMPS

⇒ 1:CHANNEL

ENTER

CHANNEL

 : set the AMPS channel

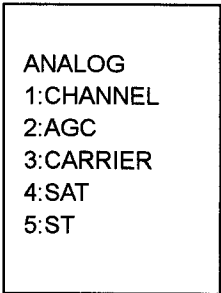

- ⇒ 2:AGC
ENTER
AGC
: set AMPS Tx AGC value
- ⇒ 3:CARRIER
CARRIER
CHOICE
1:ON
2:OFF
: set the carrier On and Off
- ⇒ 4:SAT
0:OFF
1:5970
2:6000
3:6030
: set the SAT
- ⇒ 5:ST
ST OFF
CHOICE
1:ON
2:OFF
: set the ST

[2] CDMA

- ⇒ 1:CHANNEL
ENTER
CHANNEL
: set the CDMA channel
- ⇒ 2:AGC
ENTER
AGC
: set CDMA Tx AGC value
- ⇒ 3:PA R1
PA R1
CHOICE

CDMA
1:CHANNEL
2:AGC
3:PA R1

1:ON (Default)
2:OFF
: set CDMA PA R1

[3] PCS

- ⇒ 1:CHANNEL
ENTER
CHANNEL
: set the CDMA channel
- ⇒ 2:AGC
ENTER
AGC
: set PCS Tx AGC value
- ⇒ 3:PA R1
PA R1
CHOICE
1:ON (Default)
2:OFF
: set PCS PA R1

PCS
1:CHANNEL
2:AGC
3:PA R1

Standby State (Book key)

1. Memory Search

- This feature allows you to store or search for phone numbers in memory.

for all
phone book
entries
[NAME|CALLS]

1) Name

- ⇒ This feature allows you to search stored phone numbers using name or its first few letters.
- ⇒ Press the “BOOK + SK1” Key.
- ⇒ Enter name or its first few letters, then press the “SK2” Key. The stored number you want to search will appear on the display or if you enter its first few letters, your phone may find more than one entry that begins with the same letter.
- ⇒ Use the ‘^*’ or ‘#▼’ Key to move up and down the list until the desired name appears.
- ⇒ If you want to erase a stored number and the person’s name, choose memory location digits, then press the “SK2” Key.

SEARCH FOR

HANWHA
[FIND]

Memory 12
HANWHA
011-123-4567
[edit|erase]

2) Stored Number

- ⇒ This feature allows you to recall stored numbers by entering the memory location digits.
- ⇒ Press the any number keys.
- ⇒ Enter the memory location digits or use the ‘^*’ or ‘#▼’ Key to choose memory location digits, then press the “SK1” Key.

LOOK UP
Location ??

- for 10-19

2. Memory Store

- This feature allows you to store and edit for phone numbers in memory and to manage call and run time.

011-123-4567
[save] [find]

1) Number Store

- ⇒ This feature allows you to store your most frequently dialed numbers and the names.
- ⇒ Press the any number key.
- ⇒ Enter the phone number, then press the “SK1” Key.
- ⇒ Assign memory location digits, using the keypad or Use the ‘▲*’ or ‘#▼’ Key to choose memory location digits then press the “SK1” Key.
- ⇒ Enter the name, then press the “SK1” Key.

HANWHA|
011-123-4567
[ok][x->x]

HANWHA
Location ??
auto= 05
[ok] [next]

Make Secret?
No
[ok] [next]

2) Memory Edit

- ⇒ This feature allows you to edit your stored numbers and the names.
- ⇒ Press the “BOOK” Key.
- ⇒ Enter the phone number, then press the “SK1” Key.
- ⇒ Assign memory location digits, using the keypad or Use the ‘▲*’ or ‘#▼’ Key to choose memory location digits then press the “SK1” Key.
- ⇒ Enter the name, then press the “SK1” Key.

HANWHA
011-123-4567
[ok][x->x]

HANWHA
Location ??
original= 02
[ok] [next]

3) Memory Clear

⇒ If you want to erase a stored number and the person’s name, choose memory location digit, then press the “CLR” Key.

Memory 02
HANWHA
011-123-4567
[edit|erase]

English Menu

Main Menu
1:Volume
2:Display
3:System
4:Alerts
5:Call Info.
6:Security
7:Features
8:Tests

Menu + 1	Menu + 2
1:Ringer	1:Backlight
2:Key Keep	2:Banner
3:Earpiece	3:Showtime
4:Message	4:AutoHyphen
	5:Version

Menu + 3	Menu + 4
1:Select	1:Fade
2:Force Mode	2:Minute
3:Data/Fax	3:Service
	4:RoamRinger

Menu + 5	Menu + 6
1:Last Call	1:Lock Mode
2:Home Calls	2:Restrict
3:Roam Calls	3:New Code
4:All Calls	4:Emergency#
	5:ClearCalls

Menu + 7	Menu + 8
1:AutoAnswer	1:SMS
2:AutoRetry	2:BC SMS
3:Scratchpad	3:Call Mngr
4:Mute	4:NV
5:BeepLength	5:UI
6:One-Touch	6:Analog HFK
7:Privacy	7:Other
8:SIO Config	8:RF

Accessories

For availability of the accessories, please check with your local dealer.

- **Travel charger**

Simply plug the charger into a wall outlet and connect the connector to the bottom of your phone

- **Desktop-charger**

Simply plug the charger plug into a wall outlet and place your phone and/or a spare battery in the stand to begin battery charging

- **Headset Kit**

This accessory is compact and functional. It will provides you with a convenient handsfree facility that you can use anywhere(jogging, hiking, car etc)

- **Cigarette Lighter Charger**

Simply plug the charger plug into a cigarette outlet and connect the connector to the bottom of your phone.

- **Mobile Holder**

You can easily place the phone into the holder with one hand. Place it into the holder top first, then push the bottom in until you hear a click

Pressing the release buttons on left & right side of the holder loosens the top lock. Then you can now pick up the phone from the holder and take it with you.

The mobile holder is easily to install using Air-Vent kit.

Technical Information

Type: Tri-mode AMPS / CDMA Cellular / PCS Phone

Cellular Frequency range: Transmit = 824.04 ~ 848.97MHz

Receive = 869.04 ~ 893.97MHz

PCS Frequency range : Transmit = 1851.25 ~ 1918.75MHz

Receive = 1931.25 ~ 1988.75MHz

Dimensions : 81.5 * 40.8 * 25.5mm (with standard battery)

Weight : 105g(Including Standard Battery)

115g(Including Extended Battery)

65g(with no Battery)

Operational Temperature: -20 degree Celsius to 60 degree Celsius

Reference Information:

Traffic safety

☞ *Please, do not use a hand-held phone while driving a vehicle.*

Operate environment

☞ *Switch off your cellular phone when in an aircraft.*

☞ *Only qualified personnel should install or service the phone in a vehicle*

☞ *Faulty installation or service may be dangerous and may invalidate any warranty which may apply to the unit*

Care and Maintenance:

- ☞ all parts and accessories out of small children's reach
- ☞ Always, keep the phone dry
- ☞ Do not store the phone in hot/cold areas.
- ☞ Do not attempt to open the phone.
- ☞ Do not drop, knock or shake the phone.
- ☞ Do not use harsh chemicals or strong detergent to clean the phone.
- ☞ If the phone or any of its accessories are not working properly, take them to your nearest qualified service facility.

Troubleshooting:

- ☞ If the power does not come on or stay on
 - 7 -Please check the battery is properly installed and charged.
 - Make sure that the contacts on the battery and the charging stand are clean
 - Check the display for the low battery warning
- ☞ If the power comes on, but the phone does not work
 - Make sure check the service indicator, you might be out of the cellular service area.