

ATTACHMENT E.

- USER'S MANUAL

T4

Thank you for purchasing the ***T4*** Pager.

Through its advanced paging technology, the ***T4*** will keep you connected to your important messages-anytime, anyplace.

Please read this manual carefully before using your pager so you can use its functions and capabilities to their fullest.

CONTENTS

▶ FEATURES	5
▶ DESCRIPTION OF INDICATORS & SYMBOLS	8
▶ CONTROL BUTTONS	11
▶ OPERATION	
• Turning the Backlit On/Off	12
• Turning The Pager On	13
• Turning The Pager Off	14
• Main Screen	15
• Function Menu Screen	16
• Inbox Folder Screen	17
• Info Folder Screen	18
• Saved Folder Screen	18
▶ FUNCTION MENU	
• Reading Messages in each Folder	19
• Setting the Time and Date	20
• Setting Alarm	21
• Setting Private Time	22
• Setting Message Alert	23
• Setting Audible ON/OFF	24

CONTENTS

• Enabling the Display Zoom	25
• Enabling the Reminder Alert	26
• Locking and Unlocking Messages	27
• Deleting A Message	28
• Deleting All Messages	29
• Moving A Message to the Saved Folder	30
• Setting the Info Slot Alert Type	31

FEATURES

- ▶ 16 Flex addresses
- ▶ 6 Line x 20 Alpha Character Display
- ▶ Up to 20 Inbox Messages
- ▶ 15 Info Message Slots
- ▶ Up to 16 Saved Messages
- ▶ Inbox Message Storage: 6400 Characters
- ▶ Info Message Storage: 19200 Characters
- ▶ Saved Message Storage: 3200 Characters
- ▶ Inbox Maximum Message Length: 2000 Characters
- ▶ Info Maximum Message Length: 2000 Characters
- ▶ Up to 10 Inbox Messages can be Locked to Prevent Deletion
- ▶ Info History of up to 7 messages

FEATURES

- ▶ Zoom On/Off (User Selectable)
- ▶ Battery Status Display
- ▶ One Time or Daily Alarm (User Selectable)
- ▶ Message with Time & Date Stamp
- ▶ Automatic Alert Reset
- ▶ One Beep, Seven Alerts, plus Chirp, Vibe, Vibe and chirp and Silent Options
- ▶ Reminder Alert for Unread Messages (User Selectable)
- ▶ Menu Option to Turn Device ON/OFF
- ▶ New Message Indication (Flashing Icon)

FEATURES

- ▶ Unread Message Indication
- ▶ Continuous Message Indication (with Icon)
- ▶ Erred Character Indication
- ▶ All or Individual Message Delete
- ▶ Memory Full Indication (with Icon)
- ▶ Message Slot Number
- ▶ Duplicate Message Indication (with Icon)
- ▶ EL Backlit Display
- ▶ Out of Service Range Indication (Optional)
- ▶ Message Retention During Battery Replacement
- ▶ 1 AA Battery
- ▶ Private Time

DESCRIPTION OF INDICATORS & SYMBOLS

Indicators

	Audio Alert		In Range or Out Range Indication
	Vibe Alert		Full Battery Status
	Enabled Alarm		2/3 Battery Status
	Enabled Private Time		1/3 Battery Status
	New Page or Unread Message Indication		Low Battery Status
	Lock Message		Message Continuation
	Unlock Message		Power On

DESCRIPTION OF INDICATORS & SYMBOLS

Symbols



Inbox Folder



Info Folder



Saved Folder



Escape



Set Time



Set Alarm



Set Alert



Pager Off



Set Private



Zoom



Enable Reminder



Disable Reminder



Delete All



Delete



Escape



Move to Saved Folder

DESCRIPTION OF INDICATORS & SYMBOLS

Symbols

	Page by Page		Saved Message
	Slow Speed		Unread Inbox Message
	Medium Speed		Read Inbox Message
	High Speed		Read Info Slot
	Info Slot (Enabled Alert)		Unread Info Slot
	Unread Info Slot (Enabled Alert)		Message Cursor
	Set Info Slot Alert		Set Audible ON
	Enable Private Time		Set Audible OFF
	Disable Private Time		

CONTROL BUTTONS



- Use to navigate through the Function menu and through your messages
- Use to navigate through time, alarm, and date setting functions



- Use to enter the Function menu mode
- Use to turn the Backlight off
- Use to exit to current Function mode



- Use to turn the pager on and off
- Use to read the received message
- Use to activate your selection
- Use to adjust the time, alarm, and date setting functions

Turning the Backlit ON/OFF

The Backlit allows viewing of messages in low light conditions.

 
- To turn the Backlit On, press and hold  for 2 seconds
- The Backlit will automatically turn off after 10 seconds of no buttons being pressed
- To immediately turn the backlit Off, press and hold  for 2 seconds

Turning the Pager On



PowerUp Screen

Press the Read button for two (2) seconds to turn the pager on. A start-up screen is momentarily displayed and the pager alerts the currently selected alert-mode (Vibe, Audio, Silent).



Main Screen



Standby Screen

OPERATION

Turning the Pager Off



Off Screen

- Press the  button to display the Function menu
- Press the  or  button to move the cursor on OFF icon
- Press the  button
- *"TURN PAGER OFF?"* is displayed
- Press the  button again to turn the pager off

The pager is now off and the screen should be blank.

 


Time/Date display in Pager Off mode

Note: If you choose the function key () while the pager is off, the pager will display Pager Off Mode and the time and date. The display disappears after eight (8) seconds or after you press any of the pager keys.

OPERATION

Main Screen



Main Screen

Pressing any of the buttons on the Standby Screen will provide access to the Main Screen.

The Main Screen shows both the current status of message folders (Inbox/Info/Saved) and the time and date.

The Main Screen also displays any activated pager settings in the split screen.

When the Main Screen is initially displayed, the Inbox Folder icon is the first icon followed by the Info and Saved icons.

The Inbox Folder is also highlighted. Choosing either arrow button will highlight the other icons.

- Press  or  to move the cursor between Main Screen Folders
- Press  to enter the selected Folder

Function Menu Screen

The Function Menu provides access to the many features incorporated in the **TITANIV**.



 
Function Menu Screen

As you navigate through the Function menu, the Function icon will change to indicate the current location of the cursor.

- Press  or  to navigate through the Function menu
- Press  to enter the current function
- Press  to exit the Function menu

Note: Depending on the pager and whether it has messages, some icons may not display on the pager.

Inbox Folder



Inbox Folder Screen

The Inbox Folder Screen shows the current status of personal messages. In addition, the first line of your message is displayed as a message preview.

Note: The status of an unread message will not change by previewing the message. You must select the Read button () to open and view the message. Only after the message has been opened will it be marked as "read" on your pager.

Info Folder Screen



Info Folder Screen

The Info Folder Screen shows the current status of your Info messages. In addition, the first line of your message is displayed as a message preview.

Saved Folder Screen



Saved Folder Screen

The Saved Folder Screen shows the current status of the saved messages. In addition, the first line of your message is displayed as a message preview.

FUNCTION MENU

Reading Messages in each Folder

- Press  or  to move the cursor to the message you want to read
- Press  button to read the message

Scrolling Screen by Screen

- Press and hold  button

Reading Previous or Next Message

- When reading a message, Press  or  button to read the Previous or Next message

Note: If the reminder alert is enabled, the pager will give a periodic alert until all unread messages are read. A flashing  symbol on the StandBy screen indicates that there are unread messages on your pager.

Setting the Time and Date

10:12A

7/04/05

Set Time Screen

To set the Time and Date, perform the following steps.
From the Function Menu:

- Press  or  to move the cursor to display **"SET TIME"**
- Press  to display the Set Time Screen
- Press  to move the cursor to the next digit
- Press  to adjust the current digit
- Repeat the two previous steps to adjust all time digits
- Press  to activate the current setting and exit to the Main Screen