

Remote control instruction

off/on

to get into standby when power on

Long Press to 2S –on / Long Press to 2S off
Press it -stop

Waiting for accessing the host after power on ,
access to working set when host reachable.

10 minutes after host unreachable, it will access to working set
again Long press on/off button it will access to working set .

Black screen is Screen saver .

Screen lit up when press any button.

It will go into Screen saver again when no any operation after
30 seconds .

1 AUX: ON; AUX:OFF; on/off status will be showed on the
screen

Voice:

- 2 PLAY_PAUSE, Play or Stop selected songs
- 3 VOL_UP; VOL_DOWN;
- 4 RECALL: Recall to play previous song
- 5 F1/F2/F3/HOT1/HOT2: Long press for 2seconds , EEPROM
remember currently played sound file and volume.

location to store the favourite sound .Press will play
memorial songs . Button no memory no response .(Default
F1 button when first time power on ,remember the first
song.F2-HOT1,HOT2 no memory no response .

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC ID: OF6EIMWRC07