

# The OontZ Guide

The Ultra Portable Wireless Bluetooth Speaker



1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

Thank you very much for selecting the OontZ. We hope that you will love it! The OontZ is designed to be simple to use, and this guide was written to help you get started quickly. Please take a few minutes to read through the guide, and try out the features on your OontZ.

## Contents



**The OontZ**



**Line in Cable**




**USB Cable**



**OontZ Pouch**

## The OontZ - Overview

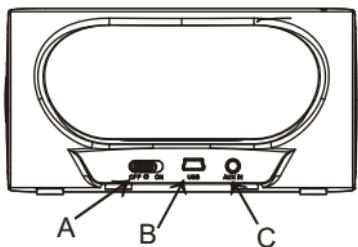


A-Power Switch

B-USB Port

C-Line in

D-Standby Power/Source  
Button

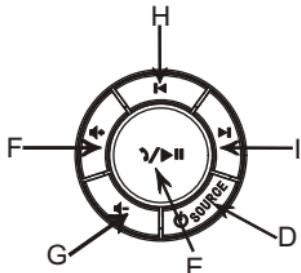

E-Answer Call/Reject  
Call/Play/Pause Button

F-Volume Up Button

G-Volume Down Button

H-Previous Track Button

I-Next Track Button

## **The OontZ is Compatible with most Bluetooth devices that support A2DP**

Most Devices with A2DP Bluetooth can use the OontZ to play music and receive calls.

The functionality and features that can be used on the OontZ are dependent on the bluetooth device (iPhone, iPod, Mobile Phone, MP3/MP4 Player, PC, Mac, etc.) the OontZ is to be paired with.

Devices without A2DP cannot play music wirelessly through the OontZ.

For further instructions on Bluetooth connectivity, please check the user guide for your A2DP Bluetooth device.

### **Using the OontZ speaker with Non Bluetooth Devices**

Non-Bluetooth devices can be connected to the OontZ using the supplied Line-in cable (3.5mm Stereo) for speaker use only.

### **Charging your OontZ**

Note: In order to recharge the OontZ, the Power Switch located on the back of the unit MUST be in the ON position.

The OontZ has a built in rechargeable Lithium Ion battery. To charge the OontZ, connect the USB cable to an available USB port on a PC or Mac or with a USB Power Adapter which has the official USB logo.

Once the OontZ is fully charged, the LED will revert back to the previous LED status (i.e. if the OontZ was in a playing status during charging, the LED will illuminate BLUE).

The OontZ CAN be used while it is recharging.

 
## Paring the OontZ with a Bluetooth Device

1. Ensure the OontZ is charged or that the OontZ is connected to a USB power source.
2. On the back of the OontZ, slide power button to ON.
3. Press and hold the source button,  until the OontZ beeps and the red/blue LED starts flashing on the front of the OontZ. (The OontZ will remain in pairing mode for 3 minutes to connect to your Bluetooth device).
4. Use your Bluetooth device to search for OontZ and select it.
5. Enter pin "0000".
6. The OontZ will beep to confirm pairing, and the LED on front of the OontZ will stop flashing. This confirms successful pairing and you can play audio.
7. Check your Bluetooth device to ensure that connection is successful.
8. Now you can play your music wirelessly from your device to the OontZ.

Note: If no connection is made after 3minutes, the OontZ will beep and the LED will turn OFF, repeat the steps above to re-enter pairing mode.

Note: To switch Bluetooth devices, turn off the Bluetooth connection on your device, the OontZ will go into pairing mode and you can pair the next device.

To switch the OontZ between a Bluetooth device and an AUX IN device press the source button .



## Using your OontZ (Device Dependant)

Now that your device is paired, the following control functions can be used:

Play Next song – Press  on the side of the OontZ.

Play previous song – Press  on the side of the OontZ.

Volume Up/Down – Press  on the side of the OontZ.

Play / Pause – Press    on the side of the OontZ to play / pause music.

To switch the source to Aux in – Press  On the side of the Oontz.

To switch the OontZ to Stand-by – Press and hold  until the Blue LED is OFF.

## Using the OontZ as a Speaker phone (Device Dependant)

To answer a call – Press   at the side of the OontZ.

To reject a call – Press & Hold (3 Seconds)   at the side of the OontZ.


To hang up a call – Press & Hold (3 Seconds)   at the side of the OontZ.

To switch a call between speaker mode and phone mode –

Press (Once)   at the side of the OontZ.

## Playing music from a non-Bluetooth device

To use your OontZ to play other portable audio devices such as iPod shuffle, MP3, MiniDisc and Portable CD Players, connect your device to the OontZ with the line in cable.

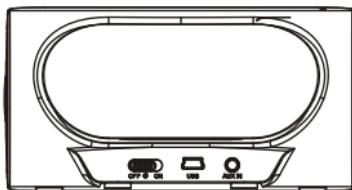

Mp3



MiniDisc

1. Plug the line-in cable into the the AUX IN socket.
2. Connect the other end of the line-in cable to your device' s headphone socket.
3. Press the 'Source' button to switch the source function to 'AUX IN'.
4. Set your device volume level to maximum and press play on your device.

Note: You can have a Bluetooth device paired and have an AUX IN device connected at the same time. To switch between the devices (Bluetooth or AUX IN)press the 'Source' button.

## **LED Status**

Power OFF – LED OFF.

Power ON – LED ON (Blue).

Pairing Mode – LED Flashing Blue/Red.

Very Low Battery – LED will flash RED for 10 seconds and then the OontZ will automatically switch OFF.

Battery recharging – LED Flashing slowly (Blue).

Battery fully recharged – (LED will revert back to the previous LED status).

## **Compatibility (Bluetooth device)**

Most Bluetooth 2.1 devices with A2DP/AVRCP/HFP/HSP.

A2DP - Advanced Audio Distribution Profile.

AVRCP - Audio/Video Remote Control Profile.

HSP - Headset Profile.

HFP - HandsFree Profile.

## Trouble Shooting

Problem	What Should I do?
Music cannot be heard through the OontZ	Ensure the Bluetooth device supports A2DP.
	Check that the device and the OontZ are paired or connected properly.
The OontZ does not power up	Ensure the Power Switch at the back of the OontZ is switched ON.
	Ensure the OontZ is fully charged or the OontZ is attached to a power source.
Sound is distorting	Adjust the volume lower on the OontZ or the Bluetooth device.
Cannot answer calls	Ensure your Bluetooth phone supports HSP/HFP.
	Check that the Bluetooth phone and the OontZ are properly paired.
I cannot control the music from the OontZ	Ensure your Bluetooth device supports AVRCP.
Music does not resume after hanging up a call	Press Play button to resume music.
I cannot find the OontZ on my Bluetooth device	Ensure the OontZ is in pairing mode with the LED on front flashing blue and red (See: Paring the OontZ with a Bluetooth Device).
	Ensure the OontZ is not already connected to another Bluetooth device, the OontZ can only connect to 1 Bluetooth device at a time. To switch Bluetooth devices, turn off the Bluetooth connection on your device, the OontZ will go into pairing mode and you can pair the next device.
	Ensure you have turned on the Bluetooth on your device.

OontZ is a registered trademark of SoundWorks INC.  
Visit us at TheOontZ.com and like us on Facebook.  
Tell your friends!  
OontZ OontZ OontZ!

**FCC Warning:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**INDUSTRY CANADA**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et  
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### safety

a. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

b. A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

C. ~~☒~~ Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.