


billboard®

2x8" Portable Speaker

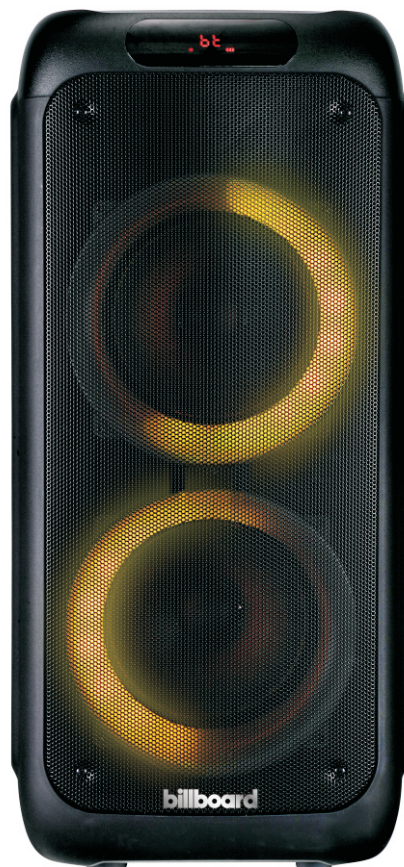

Model # BB2732

Instruction Manual
Instrucciones en español incluidas



WARNING!

**Please read this manual carefully before using the product.
Keep it in a safe place for future reference.**

- a.** There are high voltage zones inside this unit that can cause injuries. Please do not open the unit. In case of technical failure, please contact the authorized service center.
- b.** Never place the unit in the rain or in moist zones so as to avoid a fire or an electric shock.
- c.** This device uses a laser system. To prevent direct exposure to the laser beam, please do not open the unit or stare at the laser beam.
- d.** If technical maintenance is required, please contact the authorized service center.
- e.** If the supply cord is damaged in any way, please have it replaced by the manufacturer, supplier or a qualified electrician.

CAUTION

- a.** Do not place the unit on an unstable surface as it may fall and break or cause damage to people or pets.
- b.** Disconnect the unit from the mains before cleaning it. Do not use cleaning liquids or sprays. Use only a soft, damp cloth.
- c.** To avoid possible damage to the equipment, please unplug it during storms or when it will not be used for a long time.
- d.** Do not insert any object into the unit through the ventilation openings as this could cause a short circuit and start a fire. Do not pour liquid on the speaker.

The Speaker is not a toy. Please keep it out of the reach of young children.

Please do not discard this rechargeable device as trash. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877-273-2925 or online at *call2Recycle.org* for a battery recycling drop off location near you.



BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.






CONTROL PANEL

- | | |
|---------------------|--|
| 1. Micro-SD input | 14. Guitar- |
| 2. USB input | 15. Treble+ |
| 3. AUX input | 16. Treble- |
| 4. Guitar input | 17. Bass+ |
| 5. Microphone input | 18. Bass- |
| 6. Microphone input | 19. Main Volume |
| 7. Led charge | 20. Mode-Bluetooth®, FM, AUX In, USB, Micro-SD |
| 8. DC IN 15V | 21. Record function |
| 9. Power ON/OFF | 22. Previous song |
| 10. MIC Volume | 23. Pause&play/TWS Function |
| 11. Echo+ | 24. Next song |
| 12. Echo- | 25. Repeat function |
| 13. Guitar+ | 26. Change Light mode |

REMOTE CONTROL

2 AAA Batteries required. (not included)

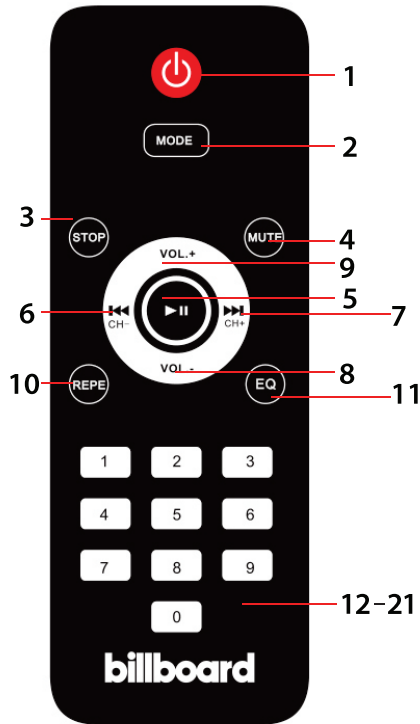

Remote Control (2x AAA Batteries Not Included)

1. POWER BUTTON

2.Mode Button: Toggle between USB, Micro-SD,FM,AUX,BT

3.Stop: Stop the playing track

4.Mute: Mute the track

5.PLAY/PAUSE

6.Previous Track: Select previous channel

7.Next Track: Select next channel

8.VOL-:Reduce the master volume

9.VOL+: Increase the master volume

10.REPE: Repeat the playing track

11.EQ: Select EQ mode

12-21. KEY Number for selecting the certain track for USB flash drive or Micro-SD card.

NOTE: #10 Repeat mode is only available for the USB and Micro-SD functions.

BLUETOOTH®

Press MODE button on the unit or the remote control until Bluetooth® is selected.

1. Put the cell phone up to 33ft.
2. Activate the Bluetooth® features on your cell phone so that the cell phone starts to search for the Bluetooth® device.
3. Select the correct model No. from the device found by the cell phone.
4. Shortly press PLAY/PAUSE button to play or pause music. Short press “◀▶” or “▶▶” key to select the previous or next track.

LINE IN MODE:

Press MODE button on the unit or the remote control until AUX is Selected. Play the music of the device connected to the AUX input.

USB Mode:

1. After start up, press MODE to select “USB” and insert the USB device. The unit will automatically read and play the music in the USB device.
2. Press “⏸” key shortly to pause or play.
3. Shortly press “◀” key to the previous song.
4. Shortly press “▶” key to the next song.

Recording Function

1. When unit is working in USB/TF mode, plug in the wired microphone, then long press button REC to begin recording.
2. Long press button REC for 2 seconds to stop recording and replay the recorded file.
3. Short press button REC during recorded file playback to resume USB/TF playing.
4. Double-click button REC to replay all recorded files repeatedly. Then short press button REC to resume USB/TF playing.

TWS CONNECTION:

Using TWS: Press the “Pause/Play” button for 3 seconds on one of the speakers to turn on/off the TWS function, display will show “t-ON” on one of the speakers. Go to your Bluetooth® device, select “BB-BT-SP , TWS will be connected /disconnected successfully.



1. POWER ON/OFF

2. Press “Pause/Play” button for 3 seconds on one of the speakers to turn on/off the TWS function



3. Display will show “t-ON”

4. Go to your Bluetooth® device, select “BB-BT-SP , TWS will be connected /disconnected successfully.

LIMITED WARRANTY

ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor at any product the exterior of which has been damaged or defaced which design or construction.

The limited warranty described herein is in addition to an applicable law.

ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc.

The warranties described herein shall be the sole and exclusive Warranties granted by ESI Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.