

Return Instructions

If your speaker malfunctions during the warranty period of one calendar year (90 days for battery), contact our customer service department at (800) 472-2735 to obtain troubleshooting information. If troubleshooting assistance fails to remedy the problem, you will receive a return authorization # and instructions for sending your unit to our Service Center. Your return authorization number must be clearly visible and placed on the outside of box when the unit is returned.

Enclose a copy of your original proof of purchase showing the original purchase date, along with detailed information describing the exact nature of your problem. Be sure to include your complete name, address, email address, daytime and evening contact numbers. In addition, please send a check or money order made payable to "ESI Cases & Accessories" for return freight amount (given to you by our service agents). All of the above must be included with your return, or your package will not be eligible for service under our warranty.

The customer is responsible for packing the speaker in it's original carton or equivalent, and for insuring, and shipping the unit to our service center. Please make sure to pack all accessories included with your speaker so that we can properly identify any issues. All freight cost to return the unit to ESI Cases & Accessories., are the responsibility of the customer. If your speaker is under warranty, then ESI Cases & Accessories. will at its sole discretion, exchange or repair the speaker without charge for parts and labor. The customer is responsible for return freight and should include a check or money order payable to "ESI Cases & Accessories." with your return for the return freight amount. Any shipments received without a Return Authorization number will be refused. For more details please contact our customer service department.

Send product:

Manufactured By ESI Cases & Accessories

One Gateway Center Suite 2600

Newark NJ 07102

Tech Support :212-883-8838

FCC Information

FCC ID: OGGK3BB2732

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV/technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard.FOR HOME OR OFFICE USE.

Warning:This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Bluetooth® is a registered trademark of Bluetooth® SIG
All other trademarks are property of their respective companies.

© 2021 Billboard IP Holdings, LLC. All rights reserved.
Billboard®, the Billboard logo, HOT 100 And associated characters, trademarks and design elements are owned and licensed by Billboard IP Holdings, LLC.

billboard®

Altavoz portátil de 2x8"



Model # BB2732

Instrucciones en español

ADVERTENCIA!

Lea este manual detenidamente antes de usar el producto.

Guárdelo en un lugar seguro para futuras referencias.

a. Hay zonas de alto voltaje dentro de esta unidad que pueden causar lesiones. Por favor no abra la unidad. En caso de falla técnica, comuníquese con el centro de servicio autorizado.

si. Nunca coloque la unidad bajo la lluvia o en zonas húmedas para evitar un incendio o una descarga eléctrica.

C. Este dispositivo utiliza un sistema láser. Para evitar la exposición directa al rayo láser, no abra la unidad ni mire al rayo láser.

re. Si se requiere mantenimiento técnico, comuníquese con el centro de servicio autorizado.

mi. Si el cable de alimentación está dañado de alguna manera, haga que lo reemplace el fabricante, proveedor o un electricista calificado.

PRECAUCIÓN

a. No coloque la unidad sobre una superficie inestable, ya que podría caerse y romperse o causar daños a personas o mascotas.

b. Desconecte la unidad de la red antes de limpiarla. No use líquidos o aerosoles de limpieza. Utilice solo un paño suave y húmedo.

c. Para evitar posibles daños al equipo, desenchúfelo durante tormentas o cuando no se vaya a utilizar durante mucho tiempo.

d. No inserte ningún objeto en la unidad a través de la ventilación.

aberturas, ya que esto podría provocar un cortocircuito y provocar un incendio. No vierta líquido sobre el altavoz.

El altavoz no es un juguete. Manténgalo fuera del alcance de los niños pequeños.

No deseche este dispositivo recargable como basura. Consulte a su agencia local de recolección de residuos para conocer los métodos adecuados de eliminación o reciclaje.

También puede comunicarse con * Call2Recycle™ en


877-273-2925 o en línea en * call2Recycle.org * para obtener una ubicación de reciclaje de baterías cerca de usted.



BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.

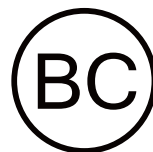




PANEL DE CONTROL

- | | |
|---------------------------|---|
| 1. Entrada Micro-SD | 16. Agudos - |
| 2. Entrada USB | 17. Bajo + |
| 3. Entrada AUX | 18. Bajo - |
| 4. Entrada de guitarra | 19. Volumen principal |
| 5. Entrada de micrófono | 20. Modo: Bluetooth, FM, AUX In, USB, Micro-SD |
| 6. Entrada de micrófono | 21. Función de grabación |
| 7. Carga LED | 20. Modo: Bluetooth®, FM, entrada de AUX, USB, Micro-SD |
| 8. DC IN 15V | 21. Función de grabación |
| 9. Encendido / apagado | 22. canción anterior |
| 10. Volumen del micrófono | 23. Pausa y juego / Funcion TWS |
| 11. Eco + | 24. siguiente canción |
| 12. Eco - | 25. Función de repetición |
| 13. Guitarra + | 26. Cambiar modo de luz |
| 14. Guitarra - | |
| 15. Agudos + | |

REMOTE CONTROL

Se requieren 2 pilas AAA. (no incluido)

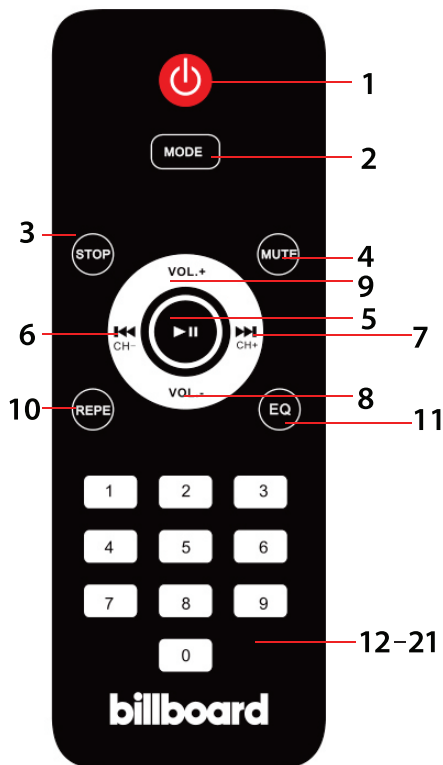

Control remoto (2 pilas AAA no incluidas)

1. EN ESPERA: Haga que la unidad esté en modo de espera.
2. Botón de modo: alterna entre USB, Micro-SD, FM, AUX, BT
3. Detener: detener la pista de reproducción
4. Mute: silenciar la pista
5. JUGAR / PAUSA
6. Pista anterior: seleccione el canal anterior
7. Siguiete pista: seleccione el siguiente canal
8. VOL-: reduce el volumen maestro
9. VOL +: aumenta el volumen maestro
10. REPE: repite la pista de reproducción
11. EQ: selecciona el modo EQ
- 12-21. Número CLAVE para seleccionar la pista determinada para la unidad flash USB o la tarjeta Micro-SD.

NOTA: El modo de repetición # 10 solo está disponible para las funciones USB y Micro-SD.