

Recording onto your USB Device

1. Insert your (FAT32 Formatted) USB Stick into the USB interface (#2)
2. Long Press the RECORD button on your panel and start to record.
3. Play your music devices by long press the RECORD PLAY and use the microphone as needed and your set will be recorded.
4. To stop recording by long press the RECORD PLAY(#6) button once again.
5. Your recording is saved onto your USB device.

Playing music from the built-in FM Radio

1. Press the MODE button (#5) until FM Radio appears on the LED screen (#1).
2. On your wireless remote control press the SCAN button (#G), Or press and hold the Play/Pause button (#9) on your speaker, to have the speaker scan all available FM radio stations in your area.
3. On the wireless remote use the Previous (#F) or Next button (#H), or use the Previous (#8) or Next Button (#10) on your speaker, to select the station that you want to listen to.
4. Adjust the volume (#15) as needed.

Activating the multi-colored LED Speaker Lights

Switch the LED Light Switch (#18) to the on position to activate the colored LED lights and they will blink and chase to the beat of the music.

About Rechargeable Batteries

Rechargeable lead-acid and lithium ion batteries are similar to what is used in your car today. If you use your battery correctly and treat it well, then it can last for years. Here are some tips to get the longest life out of your rechargeable battery

1. Charge the battery FULLY before your first use. This is VERY IMPORTANT for maximum battery life!
2. It is also recommended to charge the battery FULLY after each use.
3. It is OK to leave your speaker plugged in (charging) when not in use. The battery will not over-charge.
4. Do not store your battery in hot temperatures or moist areas.
5. If you are storing your battery for long periods of time, the charge may not store completely. It is recommended to re-charge again fully before your next use.
6. It is recommended to charge your battery every few months. If your battery is not charged for more than 6 months, it may need to be replaced.
7. Keep your speaker away from fire and extreme heat, as the acid in the rechargeable batteries is extremely flammable.
8. If your battery does not charge, or does not keep the charge for long periods then it may need replacing. Please contact the service number for information on replacing your battery.

Troubleshooting

1. Unit does not Power On
 - a. Make sure your outlet has power.
 - b. Make sure the AC connection is completely inserted into the AC connection port (#21).
 - c. Perhaps your battery is fully drained and it will need to charge longer in order to operate correctly.

2. Speaker does not make any sound
 - a. Make sure your speaker is powered ON correctly
 - b. Make sure the master volume level (#15) is not all the way to the MIN mark.
 - c. Make sure your device is connected properly.
 - d. Make sure your device is playing the music and not in PAUSE mode.
 - e. Make sure that the volume on your device is between 50%-85%, and not on mute mode.
3. Microphone does not make any sound
 - a. Make sure your wireless microphone has the required batteries
 - b. For wired microphones, make sure it is plugged into the ¼" MIC INPUT (#17). Make sure the plug is completely inserted all the way.
 - c. Make sure the microphone is in the ON position and not in the OFF or MUTE position.
 - d. Make sure the microphone level (#11) is not all the way to the MIN mark.
 - e. Make sure the master volume level (#15) is not all the way to the MIN mark.
4. USB/TF media does not play
 - a. Make sure the USB/TF is formatted for FAT32 format.
 - b. Make sure the songs are in MP3 format, as the speaker will NOT play music in other formats.
5. Rechargeable battery is not charging, or not keeping the charge
 - a. Make sure the AC adapter is the correct voltage and matches properly with your speaker.
 - b. Make sure the AC adapter is plugged into the AC outlet and the AC outlet has power
 - c. Make sure the AC adapter is fully inserted into the AC charging connection port (#21) on your speaker
 - d. If you do not see the red charge LED (#16) come on the led screen, and your speaker does not play in battery mode, then perhaps your battery needs replacing. Please call our customer service department for assistance.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Innovative Trends Corp. is under license. All other product or company names are trademarks or registered trademarks of their respective owners.

© 2020 Billboard IP Holdings, LLC. All rights reserved. Billboard®, the Billboard logo, HOT 100 And associated characters, trademarks and design elements are owned and licensed by Billboard IP Holdings, LLC.

All other trademarks are property of their respective companies.

LIMITED WARRANTY

ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor at any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law.

ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Manufactured By:
ESI Cases & Accessories
44 East 32nd Street
New York, NY 10016
Tech Support: (212) 883-8838
TechSupport@ESICellular.com

Return Instructions

If your speaker malfunctions during the warranty period of one calendar year (90 days for battery), contact our customer service department at (212) 883-8838 to obtain troubleshooting information. If troubleshooting assistance fails to remedy the problem, you will receive a return authorization # and instructions for sending your unit to our Service Center. Your return authorization number must be clearly visible and placed on the outside of box when the unit is returned.

Enclose a copy of your original proof of purchase showing the original purchase date, along with detailed information describing the exact nature of your problem. Be sure to include your complete name, address, email address, daytime and evening contact numbers. In addition, please send a check or money order made payable to "ESI Cases & Accessories" for return freight amount (given to you by our service agents). All of the above must be included with your return, or your package will not be eligible for service under our warranty.

The customer is responsible for packing the speaker in its original carton or equivalent, and for insuring, and shipping the unit to our service center. Please make sure to pack all accessories included with your speaker so that we can properly identify any issues. All freight cost to return the unit to ESI Cases & Accessories, are the responsibility of the customer. If your speaker is under warranty, then ESI Cases & Accessories will at its sole discretion, exchange or repair the speaker without charge for parts and labor. The customer is responsible for return freight and should include a check or money order payable to "ESI Cases & Accessories" with your return for the return freight amount. Any shipments received without a Return Authorization number will be refused. For more details please contact our customer service department.

Send product:
ESI Cases & Accessories
44 East 32nd Street
New York, NY 10016
Tech Support: (212) 883-8838
TechSupport@ESICellular.com

FCC Information

FCC ID:OGGK3MF15

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV/technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

Warning: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Bluetooth is a registered trademark of Bluetooth SIG
All other trademarks are property of their respective companies.

billboard®

**15" PORTABLE
PARTY SPEAKER**



Model # PRP-2

Instrucciones en español