


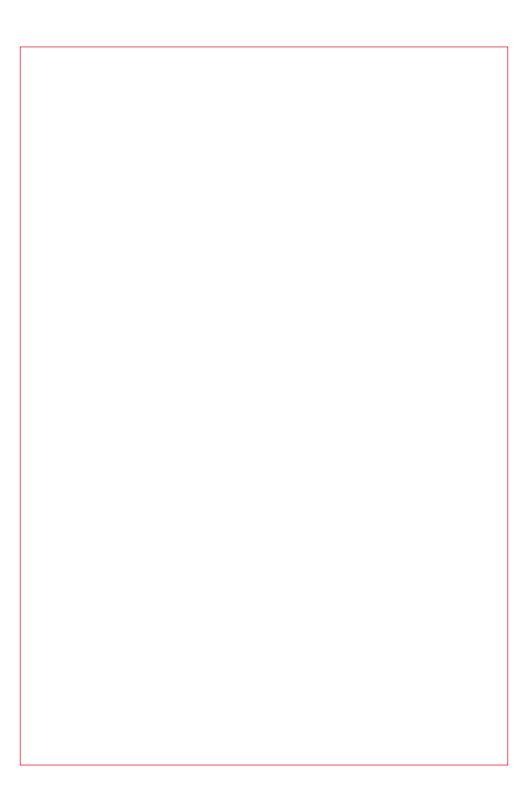

**INSTRUCTION MANUAL** 





## MPX-801 GUIDE

## **WARNING!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids,heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO QUITE LA CUBIERTA EN ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. SOLICITE EL SERVICIO A UN TECNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia o la humedad. No almacene o utilice este producto cerca de líquidos, fuentes de calor, como radiadores, acumuladores de calor. Limpie sólo con un paño seco. Los usuarios deben exhibir una segurida adicional cuando este símbolo aparece en este manual de instrucciones y siga todas las precauciones, ya que se han precisado.

#### MPX-801 BATTERY

The MPX-801 is a rechargeable battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adapter is connected to a power source, it will automatically begin charging (3~4 hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery is charged fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When the battery has been depleted the unit will not play at maximum volume even when it is connected to a power source initially. Please charge the unit for a short while and the volume level will increase while the battery is being restored to its full capacity.

## MPX-801 BATERIA

El MPX-801 es un altavoz PA alimentado por batería de recargable. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar la vida útil de la batería. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (3 a 4 horas para cargar completamente la batería). la batería está baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de la batería es roja. Cuando la batería esté completamente cargada, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería se haya agotado, la unidad no reproducirá al volumen máximo incluso cuando esté conectada inicialmente a una fuente de alimentación. Cargue la unidad por un momento y el nivel de volumen aumentará mientras la batería se restablece a su capacidad máxima.

## MPX-801 BLUETOOTH

Bluetooth Mode: Open the Bluetooth of phone. Find the Bluetooth name of the unit called "QFX MPX-801" to connect. After a successful match, you can play the music from speaker. You won't need reconnect the Bluetooth when switching mode.

## MPX-801BLUETOOTH

Modo de Bluetooth: Abra el bluetooth de moilephone. Find el nombre del bluetooth de la unidad llamada "QFX MPX-801" para conectarse. Después de una persona compatible, puede reproducir la música de los altavoces. Usted no tendrá que volver a conectar el Bluetooth cuando el modo de conmutación.



## MPX-801 GUIDE





## MPX-801 PANEL

- 1. Power Switch: ON/OFF
- 2. USB Slot
- 3. TF Card Slot
- 4. Microphone Input
- 5. AUX IN
- 6. Power Supply: DC 5V
- 7. Battery Indicator
- 8. Mode Button: Toggle between AUX, USB, TF, FM, BT by short press, press and hold to turn light on or off
- Previous Track Button: Select previous track by
- short press; press and hold to decrease volume
- 10. Play/Pause Button(TWS connection)
- 11. Next Track Button: Select next track by short press, press and hold to increase volume

## MPX-801 PANEL

- 1. Interruptor de encendido: ON / OFF
- 2. Puerto USB
- 3. Ranura para tarjeta TF
- 4. Entrada de micrófono
- 5.AUX IN
- 6. Fuente de alimentación: DC 5V
- 7. Indicador luminoso de la batería
- 8. Botón de modo: alternar entre AUX, USB, TF, FM, BT presionando brevemente, presione y mantenga presionado para encender o apagar la luz
- 9. Botón de pista anterior: selecciona la pista anterior con una pulsación corta; mantenga presionado para disminuir el volumen
- 10. Botón de reproducción/pausa (conexión TWS)
- 11. Botón Siguiente pista: seleccione la siguiente pista presionando brevemente, mantenga presionado para aumentar el volumen



## MPX-801 GUIDE

## MPX-801 SYSTEM SETTINGS

- 1. Input Mode: When a USB flash drive / TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.
- 2.FM Mode: Short Press "play/pause" button for auto scan all channels.

#### MPX-801 AJUSTES DEL SISTEMA

- 1. Modo de entrada: Cuando se inserta una unidad de tarjeta de memoria flash USB / TF en la entrada USB / TF, la unidad automáticamente cambiar al modo USB / TF y comenzar la reproducción de archivos deaudio .mp3 del flash USB Card unidad / Tarjeta TF.
- 2. FM: Court pulse el botón "reproducir / pausa" en el panel frontal para auto escanear todos los canales.

#### MPX-801 TWS CONNECTION

- (1)TWS connection: TWS Connection is only for two speakers, can not support quantity over 2 PCS.
- (2)Turn on the Speakers, press the MODE button to switch to BLUETOOTH mode.
- (3)At the first time, please press the Play/Pause (TWS) button of one unit for 3 seconds. Then two speakers will connect together.
- (4) Connect the phone: Open the phone Bluetooth settings, Search and Connect the main device Bluetooth Name 'QFX MPX-801'.
- (5) Select music from phone and enjoy TWS playing in pairs with two Speakers.
- (6) Exit TWS: Long press the Play/Pause (TWS) button for 3 seconds to exit the TWS function

## MPX-801 CONEXION TWS

- (1) Conexión TWS: la conexión TWS es solo para dos altavoces, no puede admitir cantidades superiores a 2 PCS
- (2) Encienda los altavoces, presione el Botón de modo para cambiar al modo BLUETOOTH.
- (3) La primera vez, presione el botón Reproducir / Pausa (TWS) de una unidad durante 3 segundos. Entonces dos altavoces se conectarán juntos
- (4) Conecte el teléfono: abra la configuración Bluetooth del teléfono, busque y conecte el dispositivo principal Nombre de Bluetooth 'QFX MPX-801'.
- (5) Seleccione la música desde el teléfono y disfrute de TWS tocando en pareja con dos altavoces
- (ố) Salir de TWS: mantenga presionado el Botón Reproducir / Pausa(TWS) durante 3 segundos para salir de la función TWS





#### LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the OFK Outsomer Support Department.

Subject to the terms and conditions herein, QPX, Inc. (herein after called "QEX") warrants to the original purchaser of the Product ("Cleut to the terms and conditions herein, QPX, Inc. (herein after called "QEX") warrants to the original purchaser of the Product ("Cleut for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable, QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against OFX for such use.

EXCEPT FOR EXPRESS WARRANITIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QEX DISCLAIMS ALL OTHER WARRANTY (I) OF MERCHANTABILLTY, (II) OF FITNESS FOR A PARTICULAR PURPOSE, OR (III) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT INMITISTION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANT OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING MEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, CAN AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, FANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to DPX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The DPX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com

(800) 864-CLUB (2582) or (323) 864-6900

qfxusa.com

(4) Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS	
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year	
Personal Stereos	\$10.00	1 Year	1 Year	
Portable Radio/Cassette	\$15.00	1 Year	1 Year	
Large Portable Radio Cassette	\$20.00	1 Year	1 Year	
Mobile Audio	\$10.00	1 Year	1 Year	
Pro Audio SBX Systems	\$75.00	1 Year	1 Year	
Pro Audio PBX Systems	\$75.00	1 Year	1 Year	
Televisions	\$25.00	1 Year	1 Year	
Telephones	\$10.00	1 Year	1 Year	

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER PERSONS OR THE MERCHAND FROM BREACH OF WARRANTY OR ANY OTHER PERSONS OR THE MERCHAND FROM BREACH OF WARRANTY OR ANY OTHER PERSONS OR THE MERCHAND FROM BREACH OF WARRANTY OR ANY OTHER PERSONS OR THE MERCHAND FROM BREACH OF WARRANTY OR ANY OTHER PERSONS OR THE MERCHAND FROM BREACH OF WARRANTY OR ANY OTHER PERSONS OR THE MERCHAND FROM BREACH OF WARRANTY OR ANY OTHER PERSONS OR THE MERCHAND FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER PERSONS OR THE MERCHAND FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER PERSONS OR THE WARRANTY OF THE WARRANTY OR ANY OTHER PERSONS OR THE WARRANTY OR THE WARRANTY OR ANY OTHER PERSONS OR THE WARRANTY OR THE WARRAN

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2024 ©







www.qfxusa.com

## FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

# THANK YOU.

Enjoy your speaker and make many memories with it because QFX is Where the Party Begins!

We would love to hear about your MPX-801 Journey! Tag us **@QFXUSA** to share your stories.