



13.56MHz DL-1027 Reader Radio Board – Component View

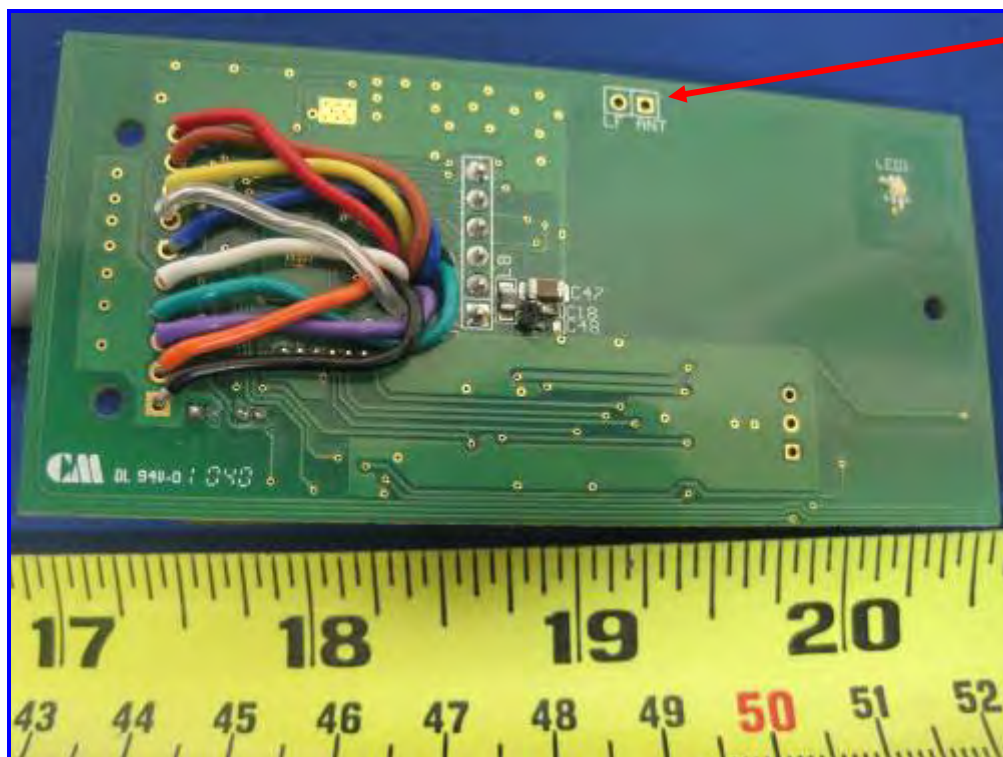


13.56MHz
Antenna

13.56MHz DL-1027 Reader Radio Board – Solder View

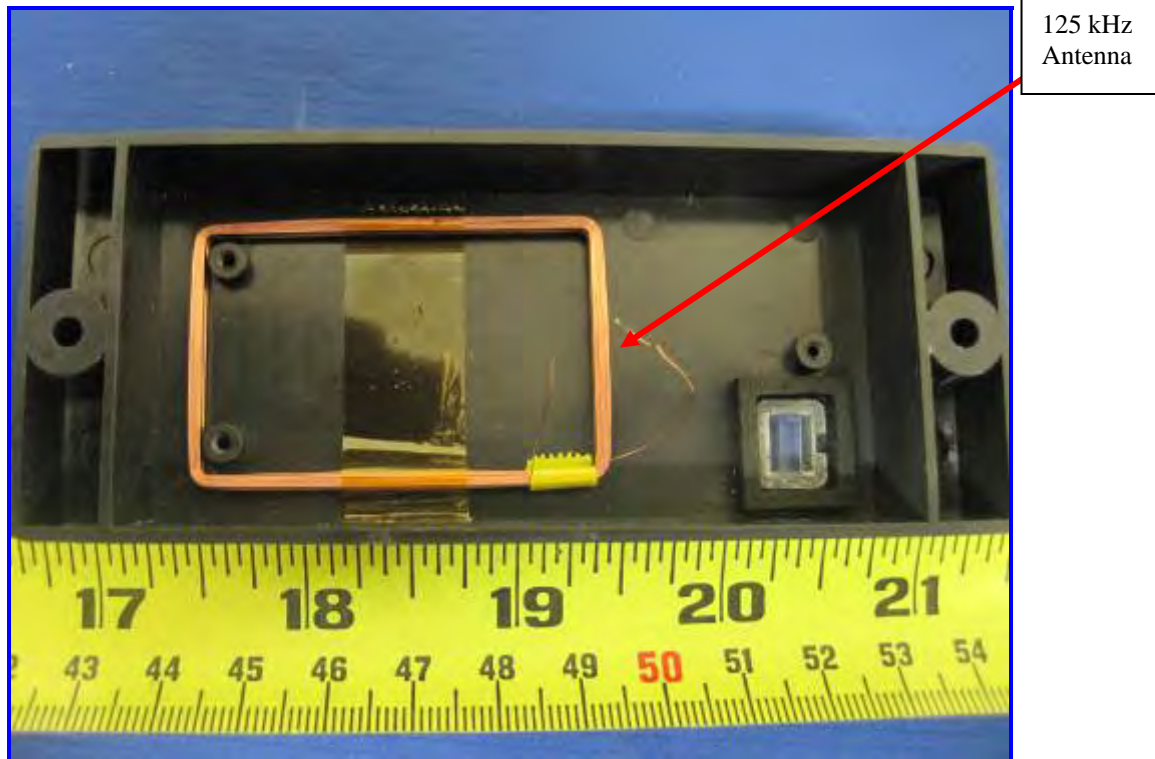

125kHz DL-1027 Reader Antenna View

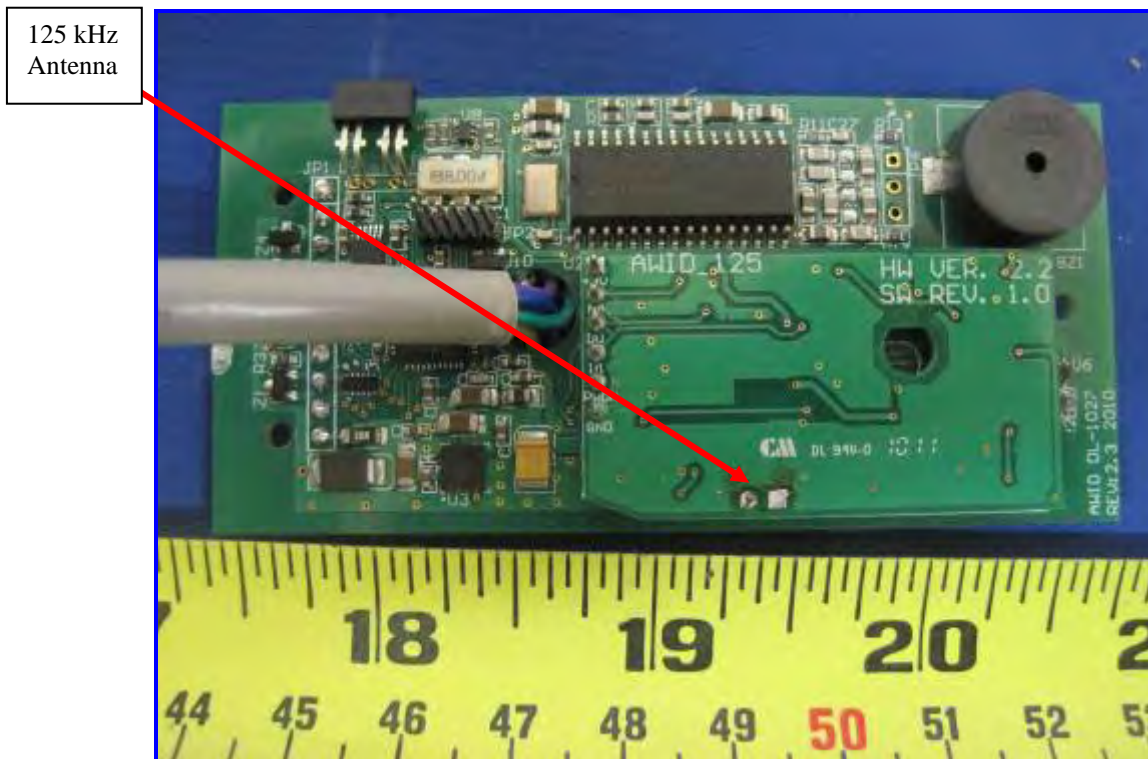

125kHz DL-1027 Reader Radio Board View