


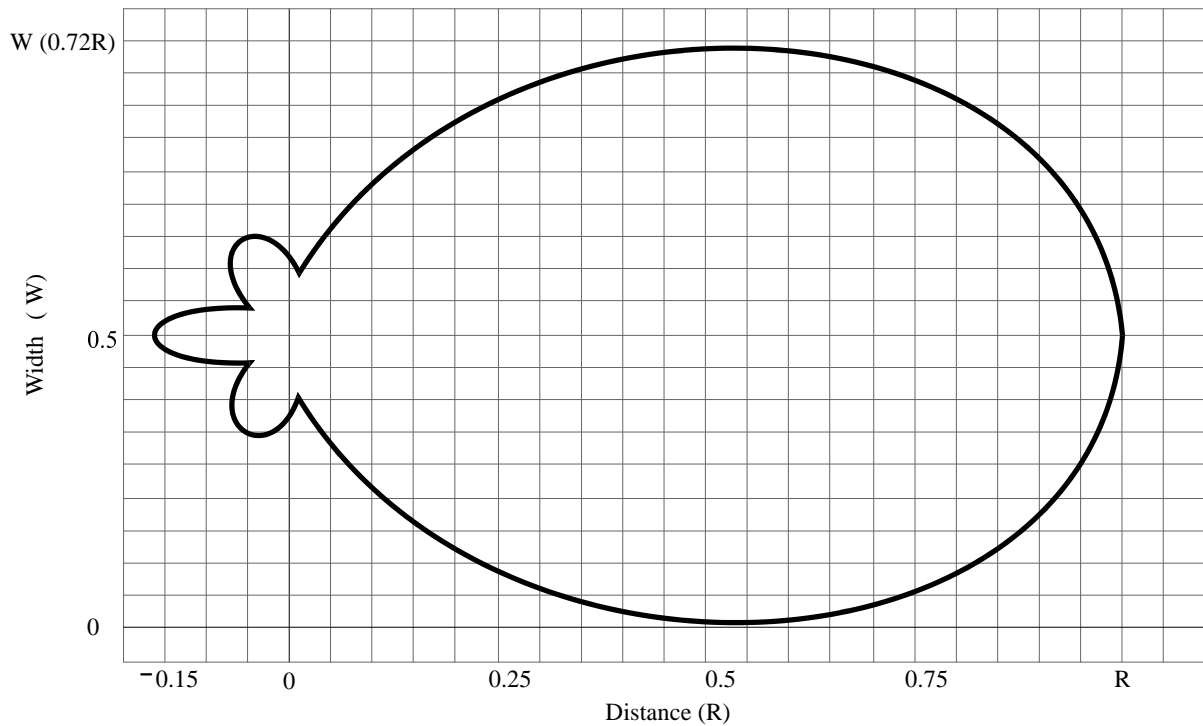

LR-911 SURVEILLANCE ZONE DIAGRAM



- Surveillance zone measurements represent both horizontal and vertical polarized planes of the read area transmitted by the reader.
- In the drawing above, R = approximately 9 feet to 11 feet for LR-911 readers.
- Surveillance zone read area can be affected by RFI and other environmental conditions.

For Technical Support, please call (800) 369-5533 in the U.S. or (845) 369-8800.
Additional information is available at www.awid.com.