

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

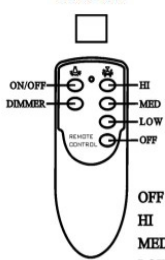 
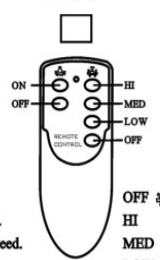 


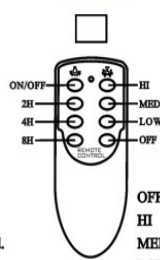 
Radio Transmitters (Part 15)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

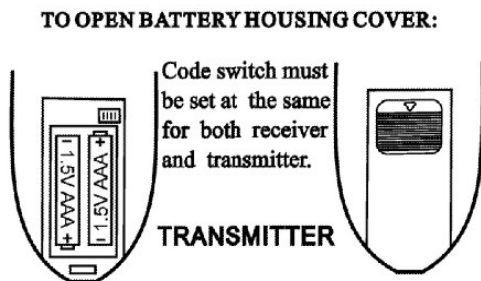 
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FUNCTIONS OF TRANSMITTER:

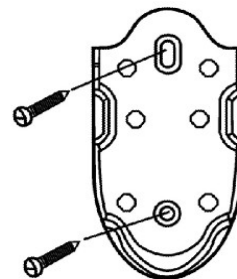 
When you would like to operate ceiling fan by remote controller, you should note that code switch must be set at the same for both receiver and transmitter.

<p>AA1T3</p>  <p>OFF : Turn off ceiling fan. HI : Turn on ceiling fan at high speed. MED : Turn on ceiling fan at medium speed. LOW : Turn on ceiling fan at low speed. ON/OFF : Press and release immediately to turn on or off the light. DIMMER : Press and hold to dim or brighten lights to the desired level and release. (Only for the tungsten bulb.)</p>	<p>AA2T3</p>  <p>OFF  : Turn off ceiling fan. HI : Turn on ceiling fan at high speed. MED : Turn on ceiling fan at medium speed. LOW : Turn on ceiling fan at low speed. ON : Turn on the light. OFF  : Turn off the light.</p>	<p>AA3T3</p>  <p>OFF : Turn off ceiling fan. HI : Turn on ceiling fan at high speed. MED : Turn on ceiling fan at medium speed. LOW : Turn on ceiling fan at low speed. ON/OFF : Press and release immediately to turn on or off the light. 2H : Light and ceiling fan will turn off in two hours. 4H : Light and ceiling fan will turn off in four hours. 8H : Light and ceiling fan will turn off in eight hours.</p>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

To change the batteries is to open the battery housing cover by sliding out the cover downward to the arrow shown direction while pressing down the cover with thumb. (Fig.1) Holder for transmitter: if desired, install onto the wall with screws. (Fig.2)



(Fig.1)



(Fig.2)