



TPC430 TABLET USER'S MANUAL

ATTENTION	3
1. APPEARANCE AND BUTTONS	4
1.1 TOUCH PANEL.....	5
1.2 POWER	5
1.3 BACK.....	5
1.4 MIC	5
1.5 VOLUME+, VOLUME-	5
1.6 HEADPHONE JACK	5
1.7 MICRO SD CARD.....	5
1.8 MINI USB	5
1.9 DC ADAPTER.....	5
1.10 RESET.....	5
2.1 BATTERY MANAGEMENT AND CHARGE	6
2.2 CONNECTION WITH PC	6
3. EQUIPMENT OPERATION INTERFACE.....	7
3.1 MAIN INTERFACE DESCRIBE.....	7
3.2 STATUS BAR DESCRIBE.....	8
3.3 USE TOUCH PANEL	8
4. EQUIPMENT BASIC SET	9
4.1 SILENT MODE, VOLUME, NOTIFICATION RINGTONE, AUDIBLE SELECTION, SCREEN LOCK SOUNDS	10
4.2 APPLICATION	12
4.3 BACKUP & RESET	14
4.4 STORAGE.....	15
4.5 LANGUAGE & KEYBOARD	16
4.6 DATA & TIME SETTING	17
4.7 DEVELOPER OPTIONS.....	18
4.8 ABOUT TABLET	19
5. APPS INSTALL AND MANAGE.....	20
5.1 APP INSTALLER	20
6. PROBLEM SOLUTION.....	20
6.1 DEVICE CAN'T TO OPEN	20
6.2 WHILE USING THE PICTURE HAS BEEN APPEAR, THE DEVICE APPEAR SHUTDOWN.....	20
6.3 HEADSET CAN'T HEAR THE VOICE	20
6.4 CAN'T COPY FILE PLAY MUSIC AND SO ON.....	20
7. BASIC FUNCTION.....	21

Attention

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Please make use to reading the manual carefully before use the device.


- Please don't be in high temperature, moisture or very dust place.
- Please don't be in high temperature, especially in summer don't put the device in the car when Windows closed.
- Avoid fall or violent collision of the device, don't make the TFT display screen were violent tremor, this could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume lower the volume or stop using it.
- Please charge in the following condition,
 - A、The battery power ICONS shows have no power
 - B、The system automatically shut off, startup after power off soon
 - C、Operation buttons no response
- When the device in the format or ongoing upload an download file, please don't suddenly disconnect. This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, the company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol, thinner or benzene to scrubbing products.
- Don't use the device one of the where electronic equipment are prohibited (such as a plane).
- Please don't using the Tablet PC when you in driving or walking down the street.
- USB cable is only bused for data transmission.

The company reserves the right to improve product, products specification and design have any change, the information is subject to changes without prior notice.

(This tablet is no waterproof function)

【Remark】All pictures in this manual is just for your reference. Products specification and design have any change. The information is subject to changes without prior notice.

1. Appearance and Buttons

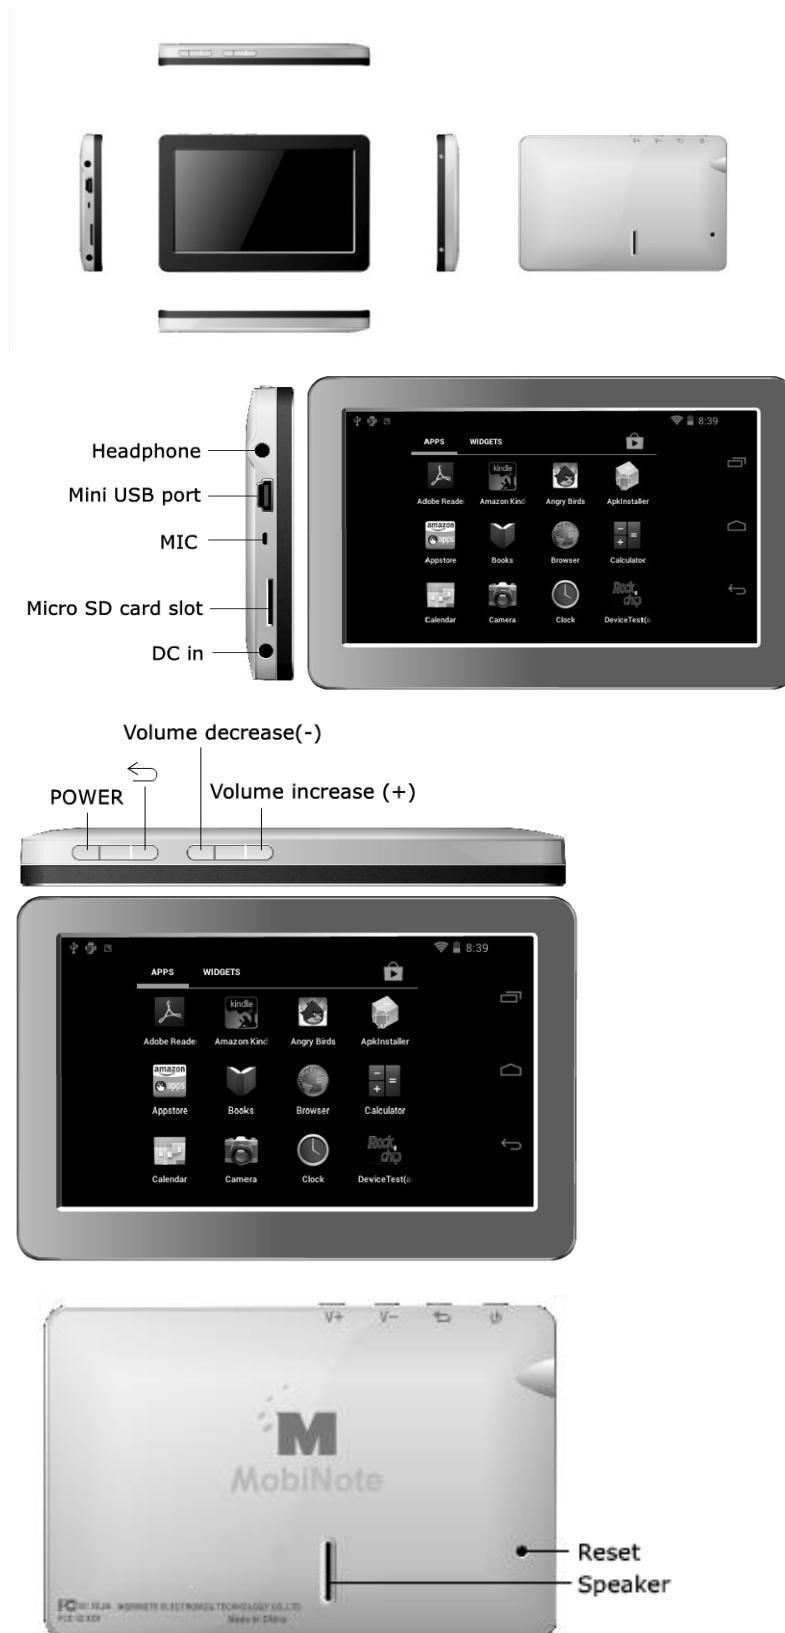

1.1 Touch panel

4.3" Capacitive touch panel: In the operation, to click, dragging on the touch panel.

1.2 Power

Startup: Long Press and hold the power button, the system will enter the main interface

Shutdown: In the main menu interface, Press the power button about 2 second to shutdown, the system can hint "power off" option, Click "ok". You can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen.

【Remark】 1. When power is empty, system will shutdown automatically.

2. Incorrectly turning off the device will result in restarting with scan and restoration of the disk, thus it may take longer time to enter into system.

1.3 Back

Short Press Return button will return the last interface.

1.4 MIC

Used for Voice Recording.

1.5 Volume+, Volume-

The buttons on top Volume+, Volume- achieve changes in the Volume.

1.6 Headphone jack

3.5mm standard headphone jack

1.7 Micro SD Card

Micro SD slot: external Micro SD card.

1.8 Mini USB

Mini USB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive.

1.9 DC Adapter

For charging your tablet battery

1.10 Reset

When the tablet under the condition of the crash or need for upgrade firmware.

2. First use

2.1 Battery management and charge

Before first use, please set the device's battery is fully charged. Just need to connect the adaptor, then you can charge.

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

【Remark】 This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110~240V 50/60Hz ; Output: DC 5.0~5.5V/2A) During the charging ,the battery icon will scroll.

When finished charging, battery icon will become green and stop rolling in order to prolong the service life of the machine, suggest use out battery power before charge it.

【Remark】 1. If you stop using this Tablet after a period of time, in order to avoid power consumption caused damage, please charge/play the battery once a month.

2. After low battery shut down, connect DC adaptor if the device will remind low battery.

Charging it for some time until the battery has enough power is necessary to enter into main menu.

3. Device charging should be in standby status for reach normal charging time, because with device and screen consumption, it may cause longer charging time.

2.2 Connection with PC

Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect PC.




Into the load mode, you can copy or delete the file on the device and the file on the memory card.

3. Equipment operation interface

3.1 Main interface describe

After startup will enter the main interface

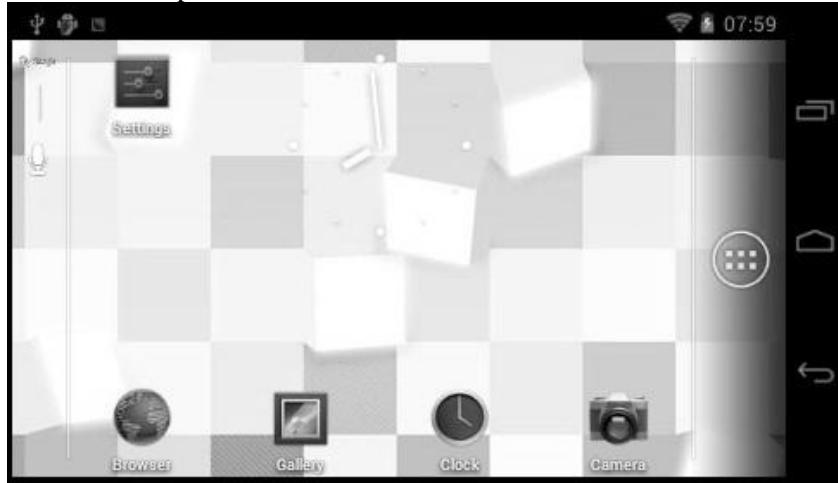


In the main interface, you can :

Management main interface software ICONS: long press the icons 3 second, after the icons bigger, then you can drag anywhere in the interface.



Delete icons: long press the icons 3 second, drag the icons to the Recycle bin icons, once it become red, release you hand to delete icon.

You touch the screen keep a time, appear the dialog box “Add you Home screen” as shown below:

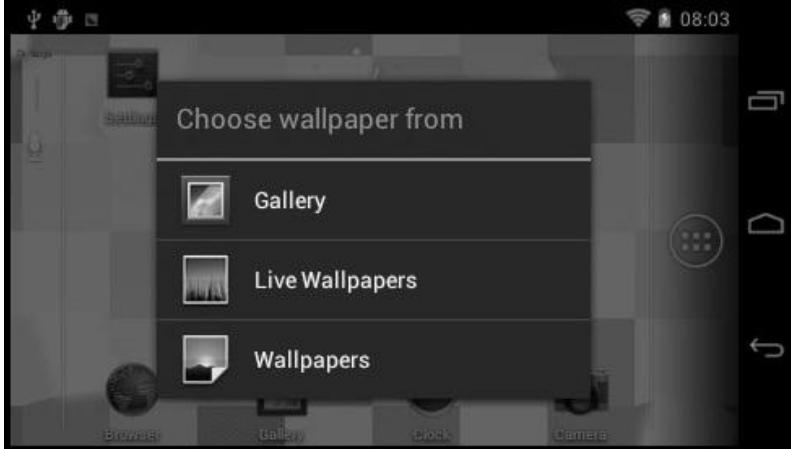

3.2 Status bar describe



● The status bar above of the screen.

Top left display main interface software, micro SD card, USB connection status and so on.

Top right display the Wi-Fi signal, battery(or battery charge) icons, current time and so on.

3.3 Use touch panel

Device equipped with a 4.3” touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key .

In different applications, by tapping the back soft key , you can return to its interface on the up floor.

In different applications, by tapping the menu , the screen will appear operation setting Interface.





In the main Interface, you can touch the icon to open the APPs.

In different browser (file, music, video, pictures), you shift and drag the scroll bar, so that the file list can or down to roll.


4. Equipment basic set




Setting: Click setting icons, enter setting interface:

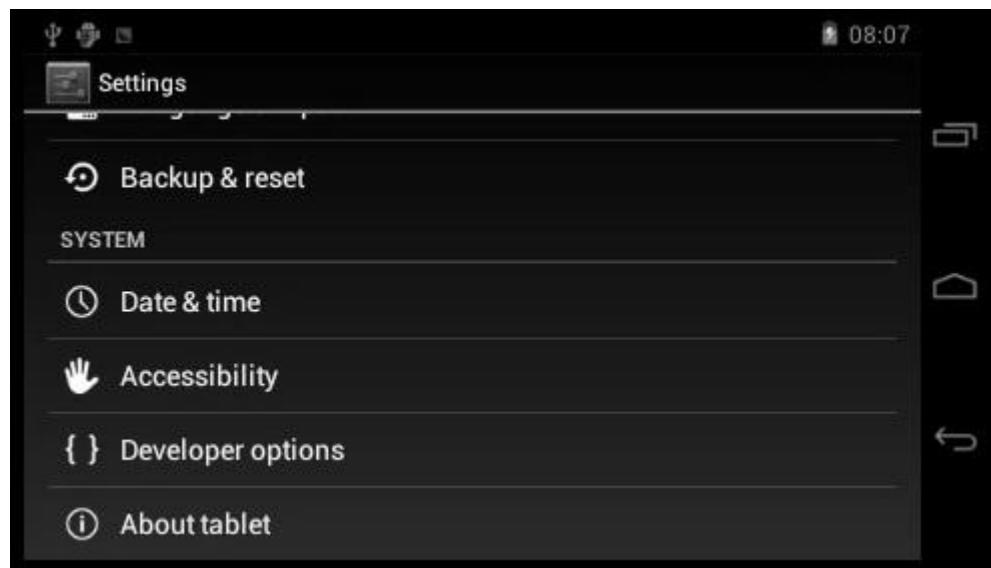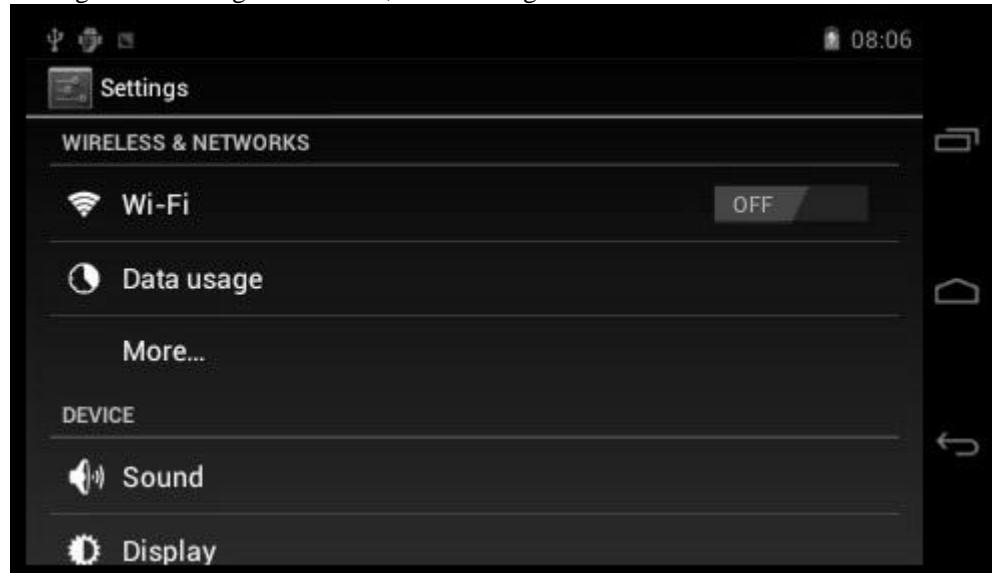


4.1 Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds

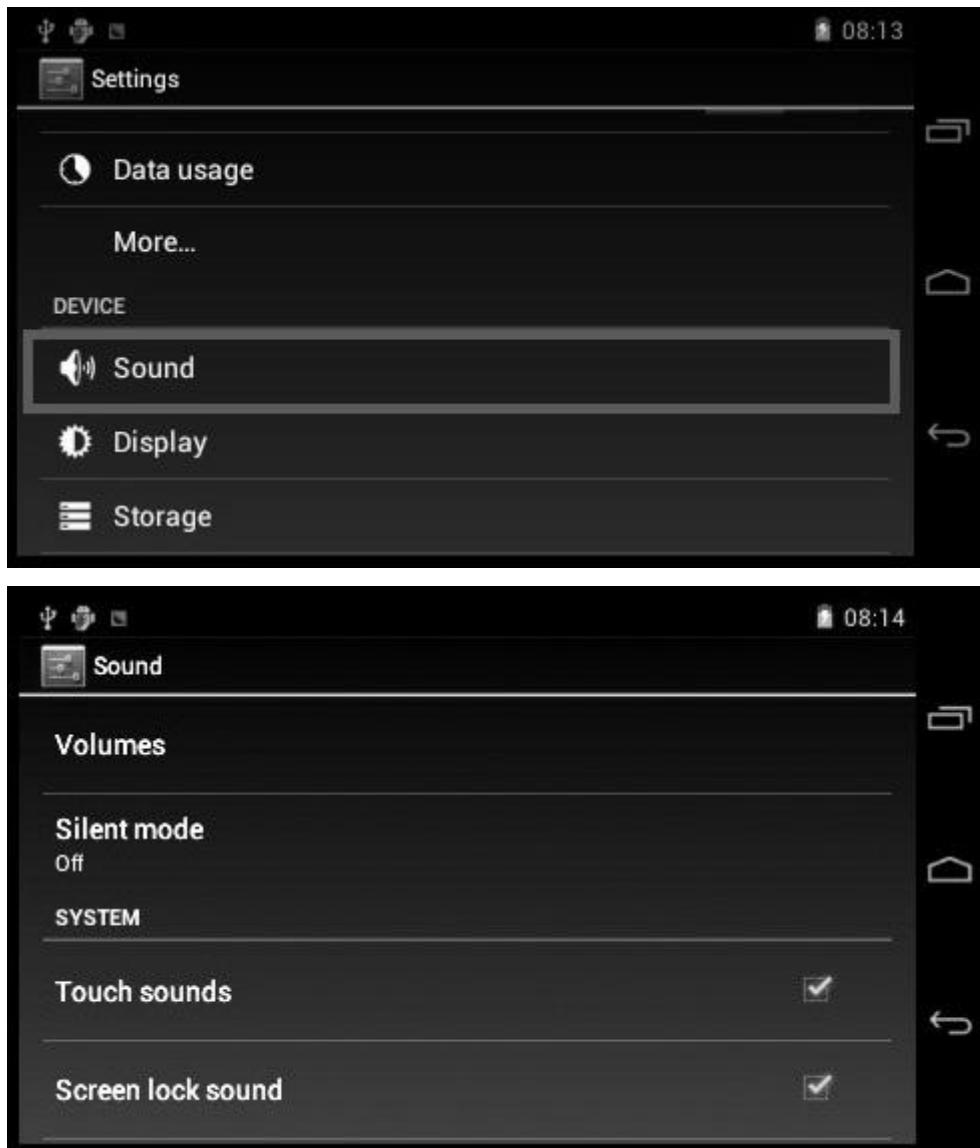

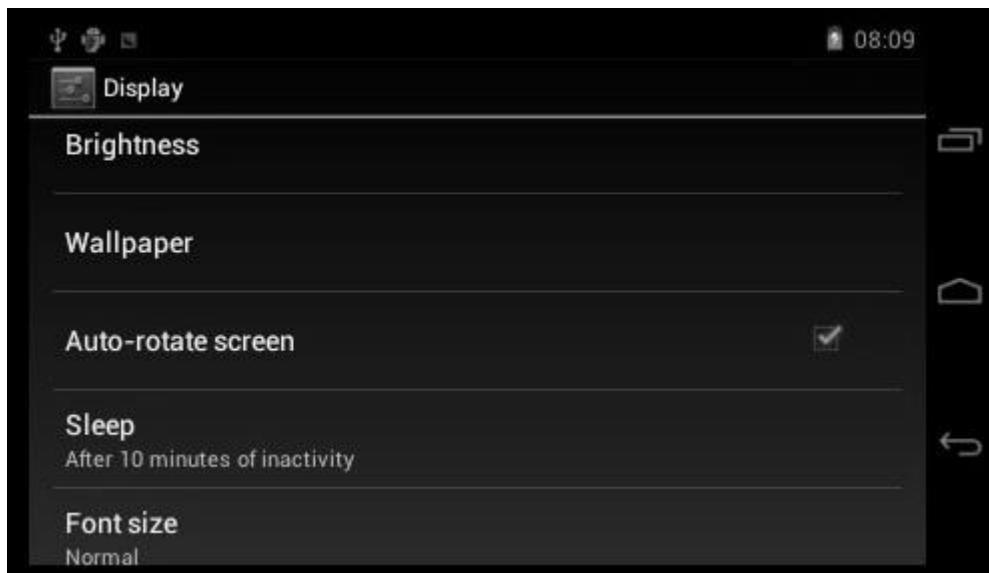

4.2 Application

Manage applications

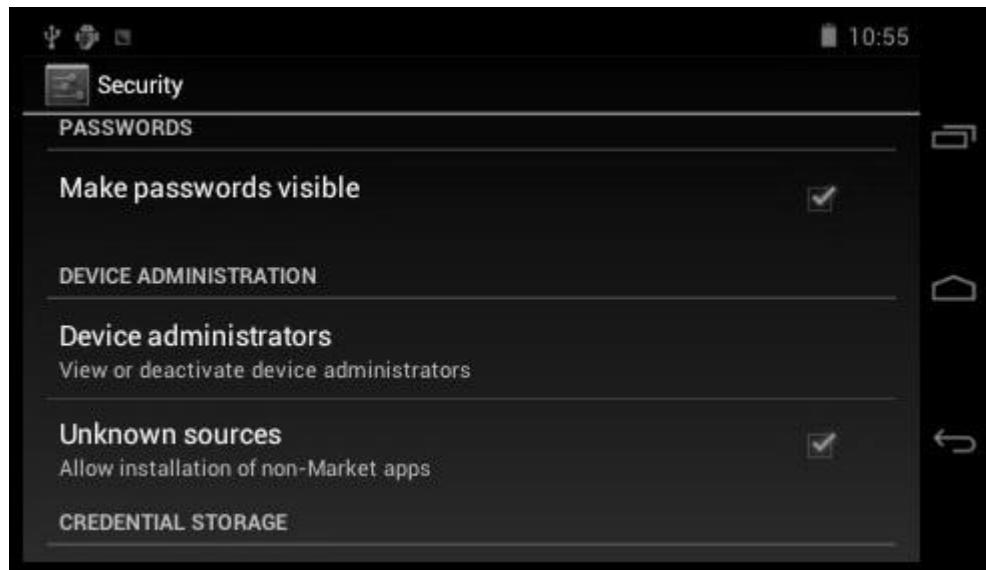

Unknown sources: Click "Unknown Sources", then click "OK"


Manage application: manager and uninstall Application

【Remark】 When you Firmware Upgrade, please close the USB connect.

How to uninstall?




1. Enter **Settings** > “setting”> “Apps” > and you can see the program list.
2. Click you want to uninstall icons, will enter the following interface.
3. Click Uninstall, then you can delete the application.

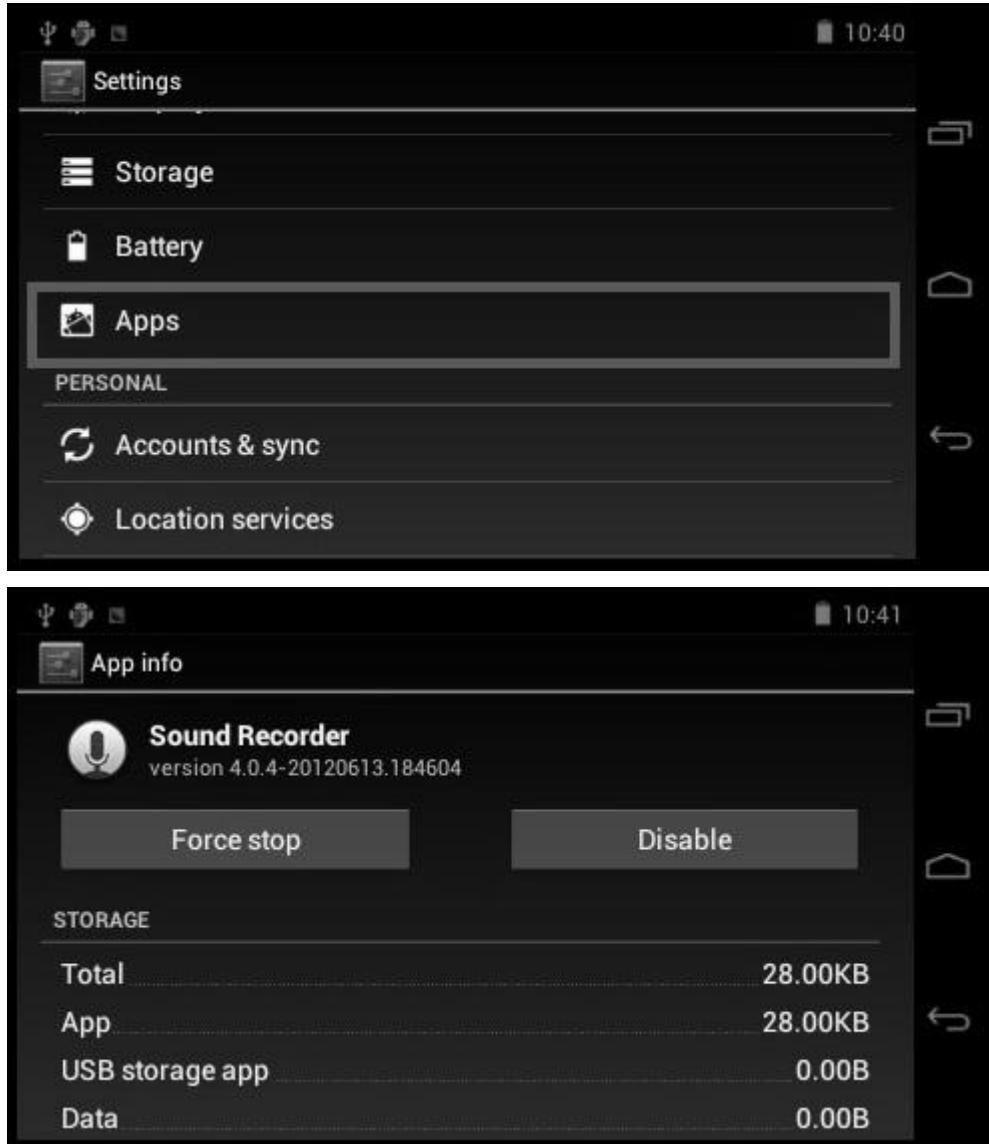



4.3 Backup & reset

Factory data reset

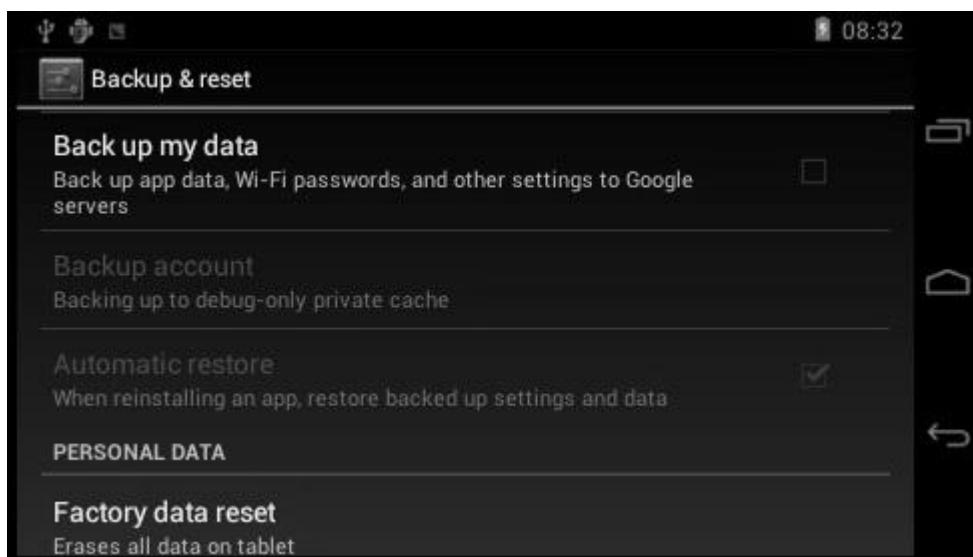


4.4 Storage

Remove Micro SD card, view of the available storage space.

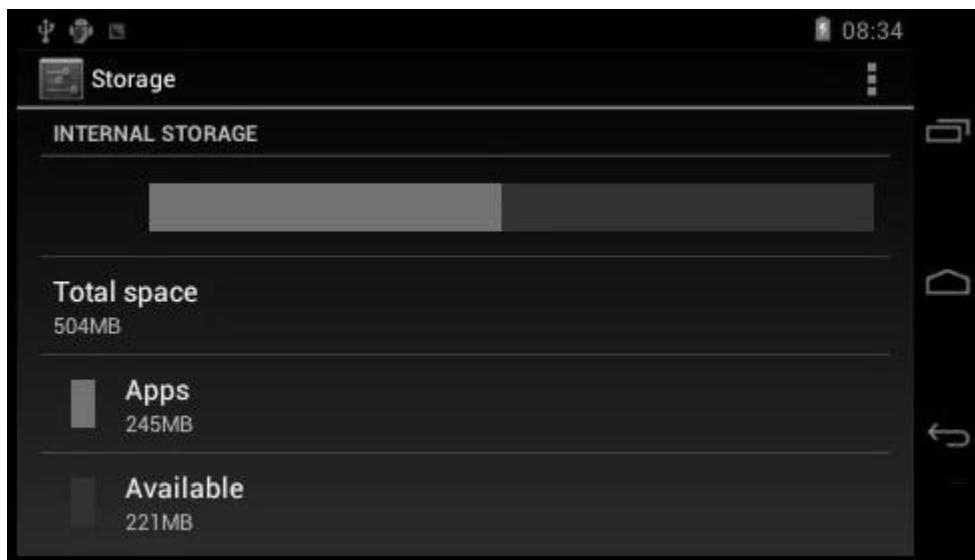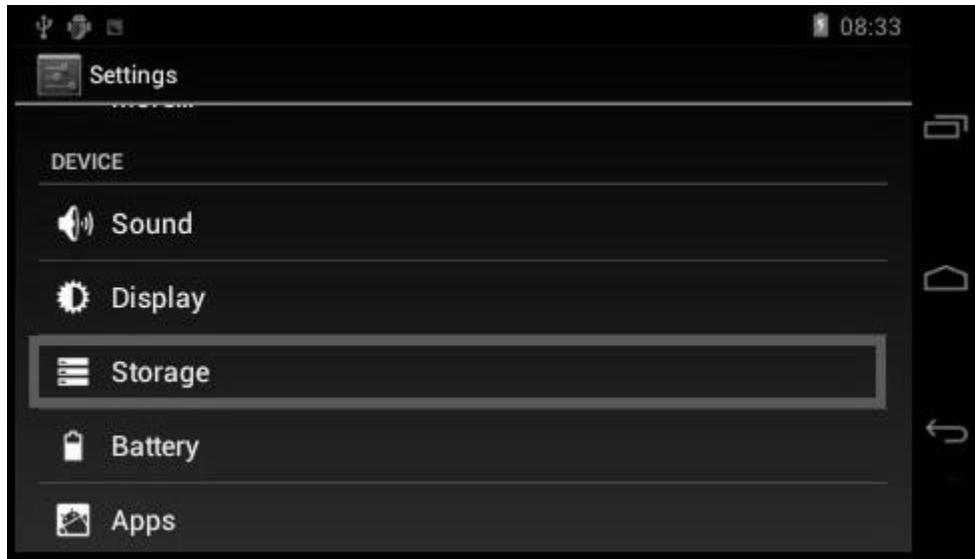

4.5 Language & keyboard

Setting (Language), text input and automatic error correction options:

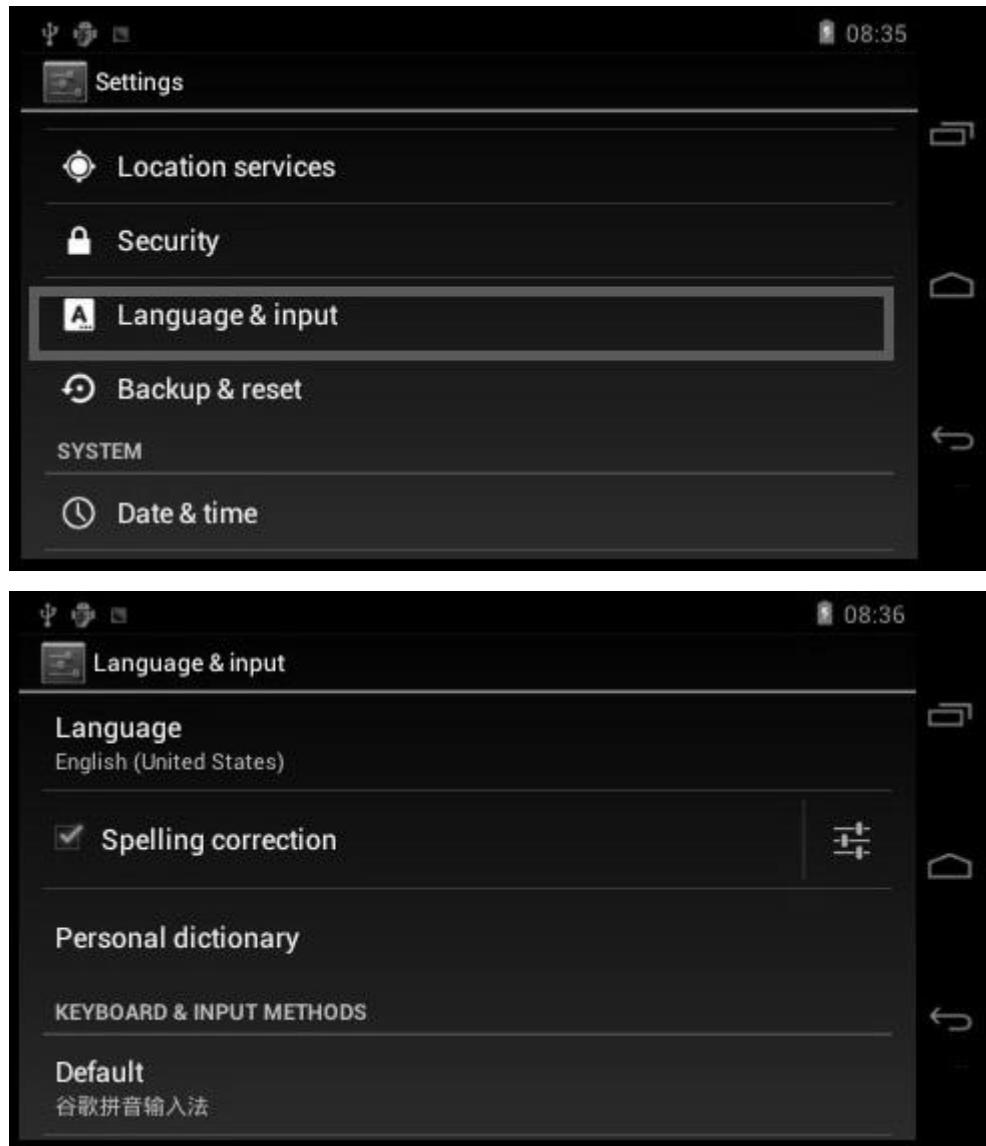

Select Language: Over 20 kind of national languages are available

【Remark】 Android system can support over 20 kind of language, now menu interface just support some language.

Android keyboard: Android keyboard setting.


Sound on key-press.

Auto-capitalization.

Show suggestions: Display suggested words while typing.



4.6 Data & time setting

Set data, set time, Select time zone and select data format

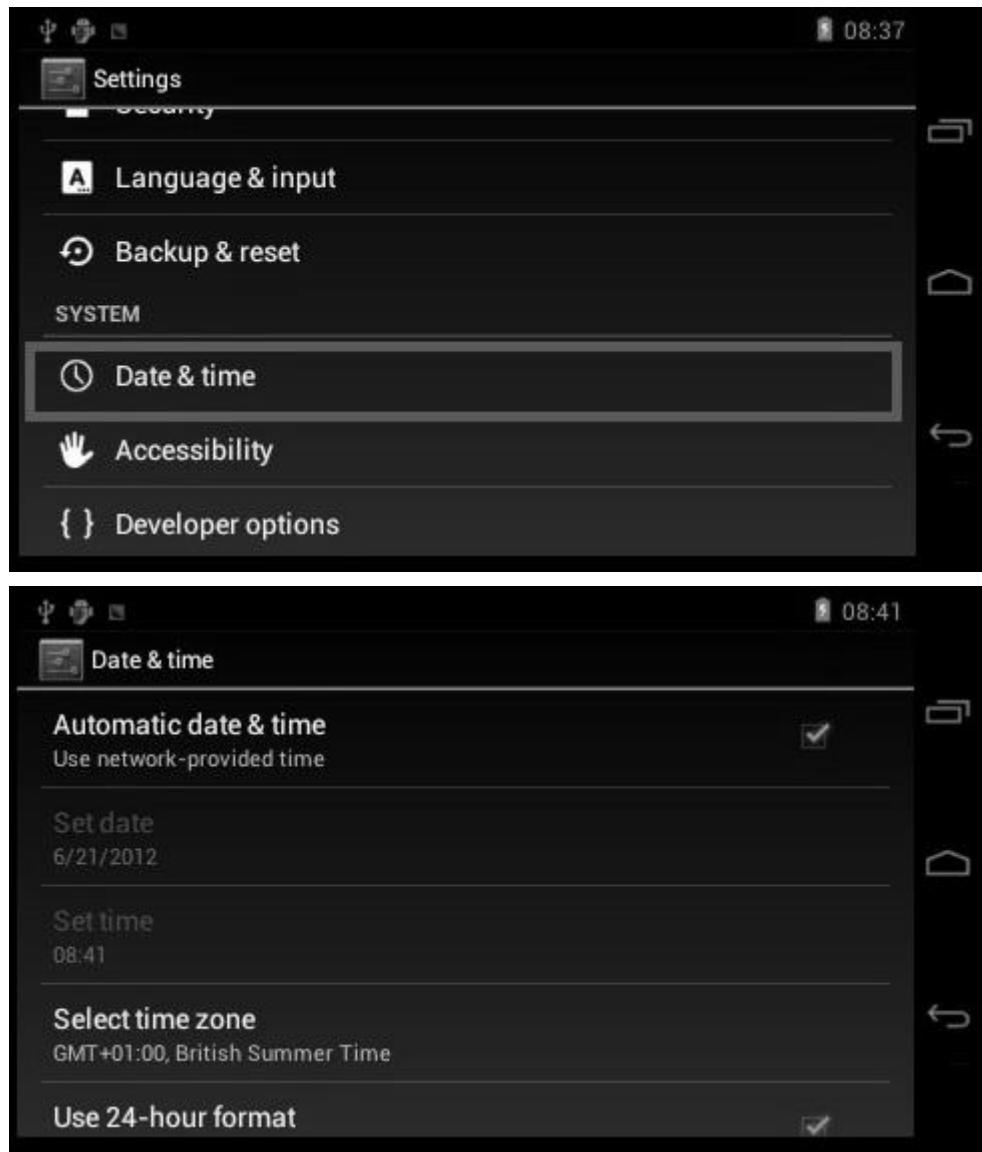

4.7 Developer options

Choose USB work pattern: OTG/HOST/SLAVE.....

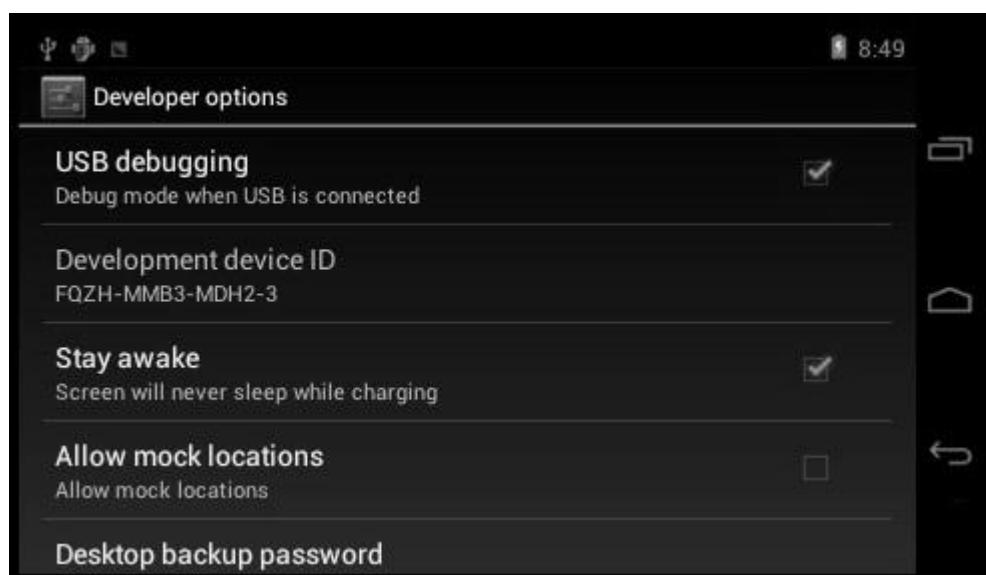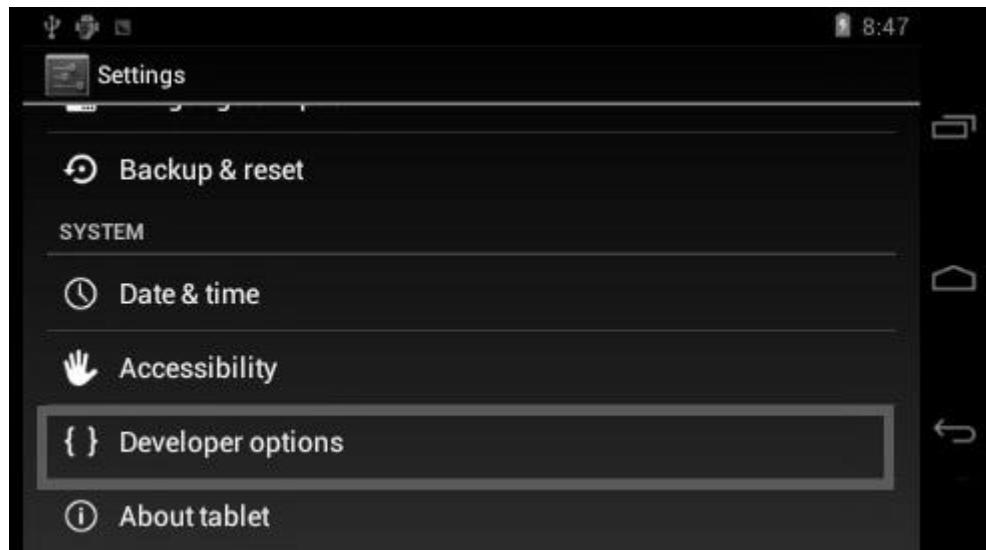

4.8 About tablet



5. Apps Install and manage

5.1 App installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card.

Click Apkinstaller icon, will appear Install, Manage, Exit options.

Install: Click install, enter Apk install interface.

Separately for internal memory disk and SD card disk.

Select the APK you would like to install, click it to install, go back to main menu, will display the installed app just selected.

【Remark】 some 3rd APP must install properly by memory card, downloaded 3rd party app may not install properly on device.

Manage: Click manage, enter third party interface. Click install icon, will enter action interface.

6. Problem solution

6.1 Device can't to open

1. Check the battery power.
2. Connect adaptor first, then check again.
3. If you can't power on after charging, please contact with the supplier.

6.2 While using the picture has been appear, the device appear shutdown

1. Power is not enough, please charge.

6.3 Headset can't hear the voice

1. Please check the volume whether set to 0.
2. Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

6.4 Can't copy file play music and so on

1. Please check between computer and device is connect connection.
2. Check the memory storage space is already full.
3. Check the USB cable is good or not.
4. USB connection is disconnected.

7. Basic function

OS	Android 4.0
CPU	ARM Cortex-A8 1GHz
RAM	512MB
Flash	NAND Flash 4GB ~ 16GB(Optional)
LCD	4.3" 480*272 display
Touch panel	Capacitive Touch panel
Wi-Fi wireless	Support 802.11b/g/n standard, highest transmission get to 300Mbps, support local WAPI wireless protocol standard
SD expansion	External Micro SD slot, Max. 32GB
USB	USB high speed 2.0 can be connected to the computer to copy files.
Gravity	make screen realize 360 degree rotation
Audio	AC 97 full-duplex codec, support AAC/AMR/MP3/WMA/WAV/MIDI and so on.
Video	WMV/ASF/MP4/3GP/AVI/MKV/VC-1/DIVX/MPEG-2/MPEG-4/H. 264 720P HD 1080I
Game	Support several of entertainment games based on Android platform.
Web	Support many internet application like web, social, video, chatting and so on
E-book	Assemble e-book tool to read based on Android platform
Photo Frame	Built-in photo player, and take it as a photo frame or calendar

FCC ID: OH8-TPC430

Trademark: MobiNote

Product: 4.3" Tablet PC

Model: TPC430

Country of origin: China



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.