 




motorola  
Portable Bluetooth®  
Hands-Free Speakerphone

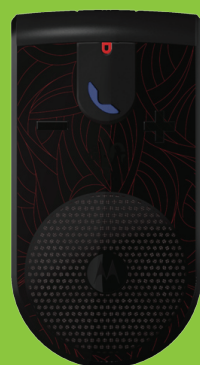

**MOTOSTART**

T307

Get connected in 4 quick steps.

Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196

www.hellomoto.com  
1-877-MOTOBLU  
1-888-390-6456 (TTY/TDD United States for  
hearing impaired)

Guide Number: xxxxxx-xx

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2008.

## BEFORE YOU BEGIN

 
Before using this product, read the Important Safety and Legal Information pamphlet and follow its instructions.

Take a moment before you get started to familiarize yourself with your new T307 Portable Bluetooth Hands-Free Speaker.



## ① CHARGE YOUR HANDS-FREE SPEAKER

Charge your hands-free speaker's battery for 2 hours:

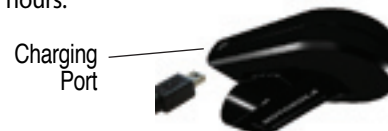

Note: Do not place hands-free speaker with clip installed on visor when charging.

- 1 Plug the Motorola charger into the charging port on the left side of the hands-free speaker.

The indicator light turns steadily red when the battery is charging and the hands-free speaker is turned off. It may take up to 1 minute for the indicator light to turn on. When the hands-free speaker's battery is fully charged (about 2 hours), the indicator light turns steadily blue.

- 2 Disconnect the charger.

Note: Hands-free speaker is functional while charging; however, when charging the hands-free speaker while turned on, the indicator light does not provide charging status.

## ② START BLUETOOTH FEATURE

Your Phone

Your phone's Bluetooth feature is off by default. To use your hands-free speaker, you must turn on the Bluetooth feature in your phone.

For most Motorola phones (at the main menu):

- 1 Press **M(Menu) > Settings > Connection > Bluetooth Link > Setup.**
- 2 Scroll to Power.
- 3 Select Change.
- 4 Scroll to On.
- 5 Press Select to turn on the Bluetooth feature. The Bluetooth feature remains on until you turn the feature off.

Note: These steps are for most Motorola phones. For other phones, see your phone's user's guide.

 
## ③ PAIR

Your Hands-Free Speaker

Before you can use your hands-free speaker, you must pair (link) it with your phone.

Step A - ENSURE HANDS-FREE SPEAKER IS IN PAIRING MODE

To initiate easy pairing, power on hands-free speaker by pressing and holding the Power button until the indicator light becomes steadily lit in purple. Release the button and, after a few moments, the indicator light will be steadily lit in blue to indicate hands-free speaker is in pairing mode.

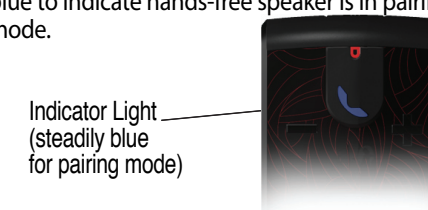

If the hands-free speaker does not enter pairing mode, see TROUBLESHOOTING for help.

## ③ PAIR CONTINUED

Your Phone

Step B - SET YOUR PHONE TO LOOK FOR YOUR HANDS-FREE SPEAKER

For most Motorola phones:

- 1 On your Motorola phone, press **M(Menu) > Settings > Connection > Bluetooth Link > Handsfree > Look for Devices.**
- The phone lists Bluetooth devices it finds.
- 2 Select Motorola T307.
- 3 Select OK or Yes to pair your hands-free speaker with your phone.
- 4 Enter the passkey: 0000
- 5 Select OK.

When your hands-free speaker successfully pairs with your phone, the indicator light changes to flashing blue with quick purple flashes.

Note: These steps are for most Motorola phones. For other phones, see your phone's user's guide.

## ④ TEST AND USE

Your phone and hands-free speaker are now paired and ready to make and receive calls. To confirm they are operating properly, make a call:

- 1 Install visor clip and place hands-free speaker onto your visor. See "Installing Hands-Free Speaker in Car" on the reverse side of this guide for details.
- 2 On your phone, dial the number you want to call and press the **Send** key.
- 3 If your phone and hands-free speaker are successfully paired, you will hear ringing on the hands-free speaker.

After you have successfully paired your phone and hands-free speaker, you don't need to repeat these steps. For daily use, ensure that your hands-free speaker is turned ON and that your phone's Bluetooth feature is ON.

To save battery power, your hands-free speaker will power down when not connected to your phone for more than 30 minutes.

## USING YOUR T307

See  
Features and  
Functions Guide  
on the reverse side  
for information on  
using your T307



## TROUBLESHOOTING

My hands-free speaker will not enter pairing mode. Make sure that any devices previously paired with the hands-free speaker are turned off. If the indicator light is flashing in blue, turn off the other device and wait for 10 seconds. The indicator light becomes steadily lit in blue indicating the hands-free speaker is now in pairing mode.

My phone does not find my hands-free speaker. Make sure the indicator light on your hands-free speaker is on and steadily lit in blue when your phone is searching for devices (see step 3).

My hands-free speaker worked with my phone before but now they are not working. Make sure your phone is on and the Bluetooth feature is turned on in your phone (see step 2). If the Bluetooth feature was turned off or was turned on only temporarily, you may need to restart the Bluetooth feature (see step 2) and pair your phone and hands-free speaker again (see step 3).

Support.  
If you need more help, contact us at 1-877-MOTOBLU or visit us at  
[www.hellomoto.com/Bluetoothsupport](http://www.hellomoto.com/Bluetoothsupport)

# Features and Functions Guide

 
T307  
Portable Bluetooth®  
Hands-Free Speaker

IMPORTANT:  
Be sure to first follow the **MOTOSTART** Quick Start Guide on the reverse side of this guide to complete initial setup of your T307.

## European Union Directives Conformance Statement

CE Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC.
- All other relevant EU Directives.

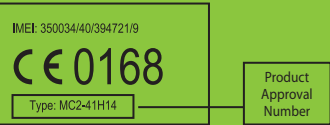

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at [www.motorola.com/rtte](http://www.motorola.com/rtte). To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.


## TURNING HANDS-FREE SPEAKER ON AND OFF

 To turn hands-free speaker on, press and hold the Power button until the indicator light turns purple. Then, release the button.

Note: Hands-free speaker may take up to 3 to 4 seconds to turn on.

To turn your hands-free speaker off, press and hold the Power button until the indicator light turns purple and then turns off.

To conserve battery power, your hands-free speaker will turn off when not connected to your phone for more than 30 minutes.

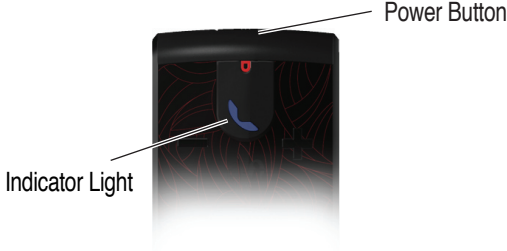

## INSTALLING HANDS-FREE SPEAKER IN YOUR CAR

Follow these steps to install your hands-free speaker in your car:

- 1 Slide the visor clip onto the mounting bracket on the bottom of the hands-free speaker. To do this, place the loop end first onto the hands-free speaker and slide forward as shown below.



## INSTALLING HANDS-FREE SPEAKER IN YOUR CAR

Continued

- 2 Slide the visor clip onto your sun visor.



When installed, the Power button must be facing toward you as shown.

The visor clip is reversible to allow placement of your hands-free speaker on either the front or the back of your car's sun visor.

## ADJUSTING HANDS-FREE SPEAKER VOLUME

You can adjust hands-free speaker volume using the Volume buttons. To adjust volume, tap or press and hold button.



Note: Hands-free speaker volume cannot be adjusted during an incoming call.

## MAKING CALLS

Function	Action
Make a voice dial call	Tap the Call button and speak the name after the tone
End a call	Tap the Call button (if a call is on hold, tap twice to end all calls)
Receive a call	Tap the Call button
Reject a call	Tap either Volume button
Redial last call	Press and hold the Call button until you hear a beep

Note: Your T307 supports both Handsfree and Headset Profiles. Accessing call functions depends upon which profile your phone supports. See your phone's user's guide for more information.

## MAKING CALLS CONTINUED

Function	Action
Answer a second incoming call	Press and hold the Call button (places first call on hold)
Toggle between two active calls	Press and hold the Call button
Mute or unmute a call	Tap both Volume buttons

Note: Some features are phone/network dependent.

Note: When turning on your hands-free speaker during a phone call, audio is transferred automatically to your hands-free speaker (when your hands-free speaker and phone have previously been connected, and your phone supports this feature).

## INDICATOR LIGHTS

With the Charger Plugged In

Indicator Light	Status
Note: Charging status not displayed when hands-free speaker is in use.	
Steady red	Charging
Steady blue	Charging complete

With No Charger Plugged In

Indicator Light	Status
Off	Power off
Steady purple	Powering up
Steady blue	Pairing mode
Quick red flash	Battery low
Blue with quick purple flashes	Pairing successful
Slow blue pulse	Connected (on a call)
Blue flash	Standby (not on call)
Quick blue flash	Incoming call
Slow purple pulse	Muted

## AUDIO TONES

The audio tones provide information about your hands-free speaker status.

Audio Tone	Status
Single high tone when pressing Volume button	Volume at minimum or maximum
Five rapid high tones repeated every 60 sec.	Low battery
No audio indications; deteriorating quality	Out of range
Ring tone	Incoming call
Single high tone	Pairing confirmation
Single low tone	Voice activation
Dual high/low tone (phone dependent)	Voice tag not recognized
Single high tone	End call
Low to high tone	Phone network not available
Two ascending tones	Mute enabled
Two descending tones	Mute disabled



**MOTOROLA**

*intelligence everywhere™*



***Important Safety and  
Legal Information >***

Motorola, Inc.

Consumer Advocacy Office

1307 East Algonquin Road

Schaumburg, IL 60196

[www.hellomoto.com](http://www.hellomoto.com)

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for  
hearing impaired)

1-800-461-4575 (Canada)

The use of wireless devices and their accessories  
may be prohibited or restricted in certain areas.  
Always obey the laws and regulations on the use  
of these products.

MOTOROLA and the Stylized M Logo are  
registered in the US Patent & Trademark Office.  
All other product or service names are the  
property of their respective owners.

© Motorola, Inc., 2005.

Manual Number: 6809494A55-0

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user manuals are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this document.

## **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software

contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

# Contents

---

<b>Safety Information</b> .....	<b>6</b>
<b>Warranty</b> .....	<b>11</b>
<b>Export Law Assurances</b> .....	<b>22</b>
<b>Wireless Phone Safety Tips</b> .....	<b>23</b>

# Safety and General Information

---

## **IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR DEVICE.**

Users are not permitted to make changes or modify the device in any way. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).



# Electromagnetic Interference/Compatibility

**Note:** Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

## Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your device in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

## Aircraft

When instructed to do so, turn off your device when on board an aircraft. Any use of a device must be in accordance with applicable regulations per airline crew instructions.

## **Medical Devices**

### **Hearing Aids**

Some devices may interfere with some hearing aids. In the event of such interference, you may want to consult with your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## **Industry Canada Notice to Users**

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device Ref IC RSS 210 Sec. 5.11. The term "IC:" before the

certification/registration number only signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment. See Ref IC Self-Marking 6(f) and RSP-100 Sec. 4.

## **FCC Notice to Users**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Motorola Limited

## Warranty for the United States and Canada

---

### What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for

the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

## Products and Accessories

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Products and Accessories</b> as defined above, unless otherwise provided for below.	<b>One (1) year</b> from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
<b>Decorative Accessories and Cases.</b> Decorative covers, bezels, PhoneWrap™ covers and cases.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Monaural Headsets.</b> Ear buds and boom headsets that transmit mono sound through a wired connection.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.
<b>Consumer and Professional Two-Way Radio Accessories.</b>	<b>Ninety (90) days</b> from the date of purchase by the first consumer purchaser of the product.
<b>Products and Accessories that are Repaired or Replaced.</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.

## Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.



## **Use of Non-Motorola Products and**

**Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

## **Unauthorized Service or Modification.**

Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products, Accessories or Software due to any communication service or

signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

## Software

Products Covered	Length of Coverage
<b>Software.</b> Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	<b>Ninety (90) days</b> from the date of purchase.

## Exclusions

**Software Embodied in Physical Media.** No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

## **Software NOT Embodied in Physical Media.**

Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

## **Who Is Covered?**

This warranty extends only to the first consumer purchaser, and is not transferable.

## **What Will Motorola Do?**

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software

and applications please create a back up prior to requesting service.

## How to Obtain Warranty Service or Other Information

<b>USA</b>	<b>Phones</b> 1-800-331-6456 <b>Pagers</b> 1-800-548-9954 <b>Two-Way Radios and Messaging Devices</b> 1-800-353-2729
<b>Canada</b>	<b>All Products</b> 1-800-461-4575
<b>TTY</b>	1-888-390-6456
For <b>Accessories</b> and <b>Software</b> , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

## **What Other Limitations Are There?**

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS

THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

**Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to**

**you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.**

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

# Export Law Assurances

---

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.



# Wireless Phone Safety Tips

---

## **Drive Safe, Call Smart <sup>SM</sup>**

**Check the laws and regulations on the use of wireless phones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Contact [www.motorola.com/callsmart](http://www.motorola.com/callsmart) for more information.**

Your wireless phone lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your wireless phone while driving, remember the following tips:

- **Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ handsfree accessories available today.
- **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, or medical emergencies.<sup>1</sup>
- **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.<sup>1</sup>

- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.<sup>1</sup>

1. Wherever wireless phone service is available.

DRAFT



**motorola.com**