



## SKIM Immobilizer

The SKIM Immobilizer Key prevents unauthorized operation of a vehicle by disabling the engine. This system utilizes ignition keys which have an embedded electronic chip (transponder). The vehicle can only be started and operated by keys that have been programmed to the vehicle. Once a key has been programmed to a vehicle, it cannot be programmed to any other vehicle.

Operation of the SKIM Immobilizer system is automatic and does not need to be armed or activated regardless of whether the vehicle is locked or unlocked.

The SKIM Immobilizer operates through an inductive link with the WCM module at a frequency of 125Khz and receives power through the inductive coupling.

## Remote Keyless Entry

This hand-held radio transmitter allows you to lock or unlock the doors of a vehicle within a 30meter range. The FOB key does not need to be pointed at the vehicle to activate the system.

The 2 button transmitter will provide basic LOCK and UNLOCK functions.

### **To Unlock doors:**



Press and release the UNLOCK button on the RKE Transmitter once to unlock.

### **To Lock doors:**



Press and release the LOCK button on the RKE Transmitter once to lock.

### **To Open Trunk:**



Press and release the Trunk button on the RKE transmitter twice in 5 seconds to open trunk.

### **To Operate Power top:**



Press and hold to operate power top. Will timeout after 60 seconds

### **To operate Remote Start :**



Press Lock, followed by Remote Start twice within 5 seconds to start engine.  
Press Remote Start twice within 5 seconds to turn off engine.

### **To Operate Panic Button:**



Press and release the PANIC button on the RKE Transmitter once to turn the Panic Alarm On and Off.