



	Title: Ratatouille Shirt Crawler	Date: 14 Jan 2020	 CMYK
	Designer: Leah		
	File Name: 4817US01TOP_PKG.ai		
	Assembled Size: 16cm ø X 11cm H		
	Colors: CMYK		 Dieline

Die-Cut

C 100

— Crop Line

- - - - - Fold Line


 PMS 2007
10C 36M 100Y

 PMS 2159
75C 50M 22Y

 PMS 7691
100C 65M 20Y

 PMS 7696
65C 28M 25Y

 PMS 7698
80C 47M 30Y 7K

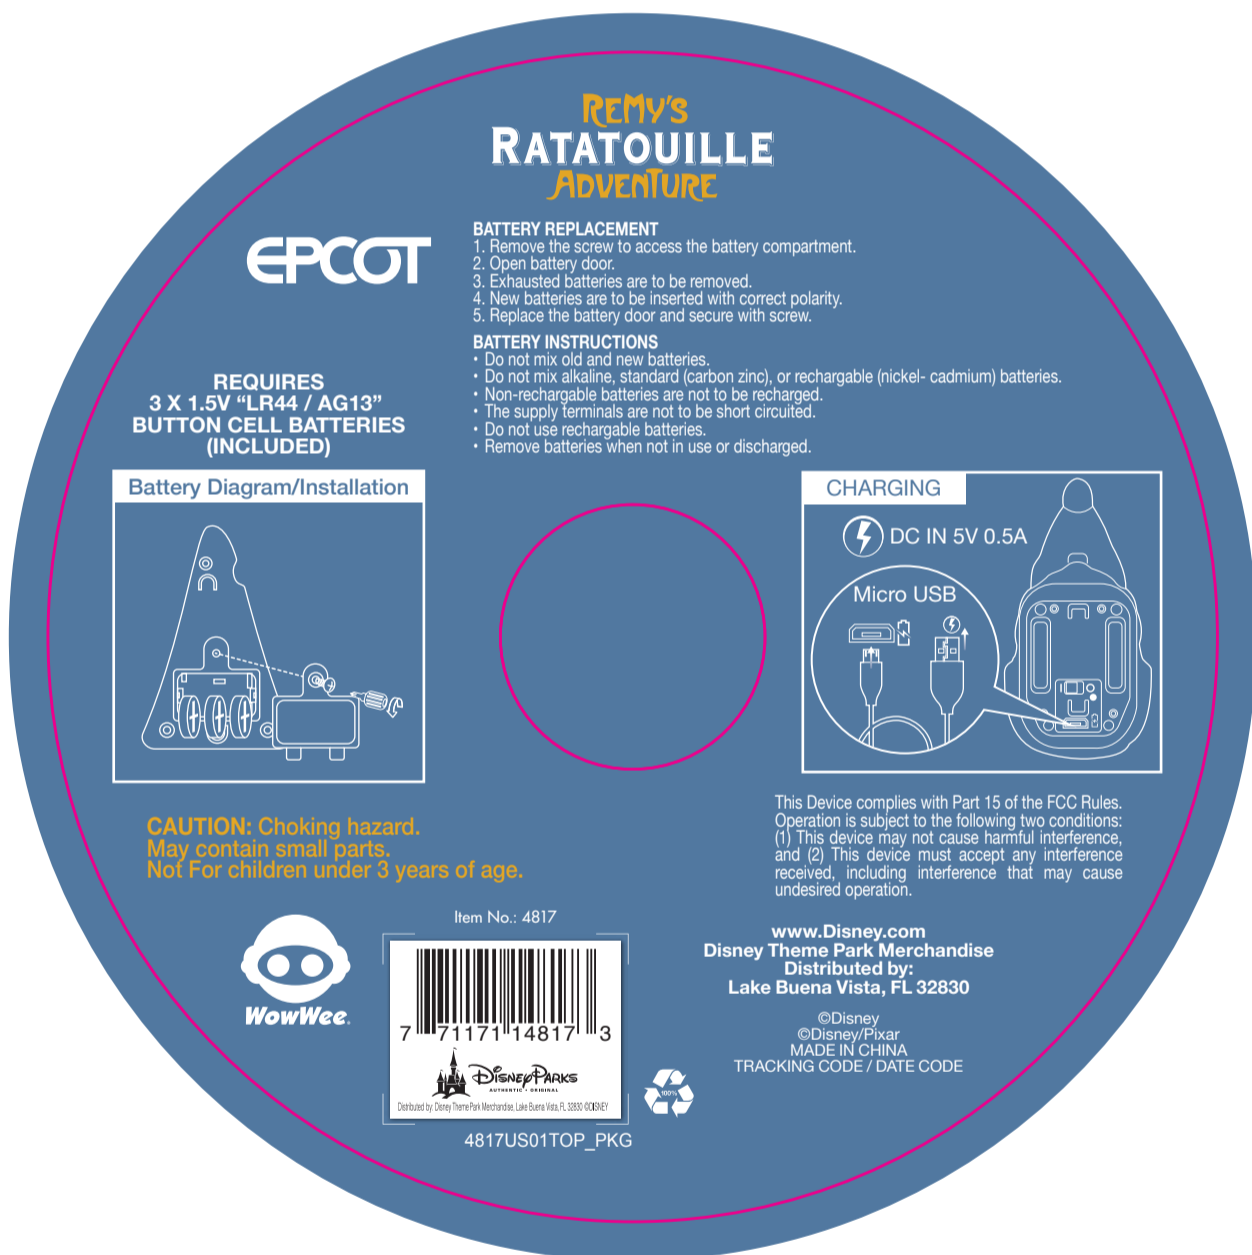

REMY'S RATATOUILLE ADVENTURE

EPCOT

BATTERY REPLACEMENT
 1. Remove the screw to access the battery compartment.
 2. Open battery door.
 3. Exhausted batteries are to be removed.
 4. New batteries are to be inserted with correct polarity.
 5. Replace the battery door and secure with screw.

BATTERY INSTRUCTIONS
 • Do not mix old and new batteries.
 • Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel- cadmium) batteries.
 • Non-rechargeable batteries are not to be recharged.
 • The supply terminals are not to be short circuited.
 • Do not use rechargeable batteries.
 • Remove batteries when not in use or discharged.

REQUIRES 3 X 1.5V "LR44 / AG13" BUTTON CELL BATTERIES (INCLUDED)




Battery Diagram/Installation

CHARGING
 DC IN 5V 0.5A
 Micro USB

CAUTION: Choking hazard. May contain small parts. Not For children under 3 years of age.

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Item No.: 4817

7 71171 14817 3


Distributed by Disney Theme Park Merchandise, Lake Buena Vista, FL 32830 ©Disney

www.Disney.com
 Disney Theme Park Merchandise
 Distributed by:
 Lake Buena Vista, FL 32830

©Disney
 ©Disney/Pixar
 MADE IN CHINA
 TRACKING CODE / DATE CODE

4817US01TOP_PKG

15.5cm

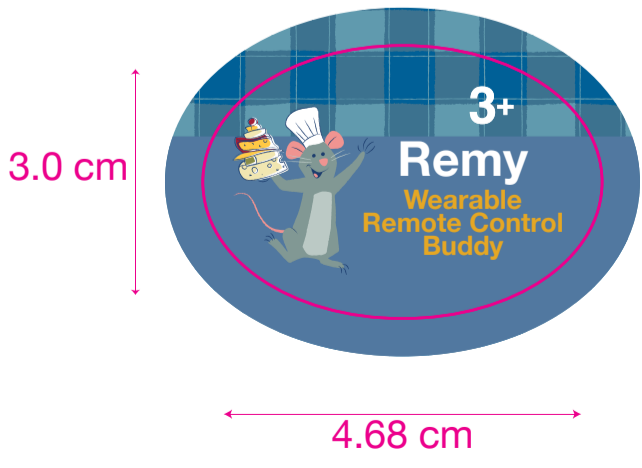

3+

Remy
 Wearable Remote Control Buddy

3.0 cm

4.68 cm