

CARRYING YOUR PET BUG



Take your PET BUG With YOU wherever YOU GO - INSIDE the LOG Controller!

1



First, attach the CHARGER to the back of the CONTROLLER as shown.

2



Then, lift up the green leaf and place your PET BUG inside the controller.

FIRST AID



Only two legs of your Bug's legs move. If one of these legs becomes jammed, turn on a spare leg to assist the leg that has become jammed. Then correct the jammed leg. Your Pet Bug should be good as new!

NOTE: Only try to repair the two legs at a time. Do not try to remove the other two legs.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ct151640us01

Manufactured and distributed by
WowWee, a subsidiary of Hasbro.
The Hasbro logo is a trademark of
Hasbro.
©2003 WowWee. ©2003 Hasbro.
All Rights Reserved.
© Devices Reg. U.S. Pat. & Tm Office.

WowWee (Asia Office)
Unit 301A-C, 82 Greenville Rd.,
T.S.T. East, Hong Kong
WowWee (North America Office)
4660 Corte de Laso, Suite 320,
T.M.B. Quebec, H9K 2R1, Canada
Consumer Hotline: (514) 344-1250
<http://www.wowwee.com>



We recommend that you retain our
address for future reference.
Product and colors may vary.

Packaging printed in China.
MADE IN CHINA

M-RC Bitti Bites™

AGES 4
ITEM NO: 5340

WARNING:
CHOKING HAZARD - Small Parts.
Not for children under 3 years.

INSTRUCTION MANUAL

Contents:

- 1 controller
- 1 charger
- 2 Spare Legs
- 1 BUG



LOG controller



Charger



2 Spare LEGS



COCKROACH



LADYBUG



SCARAB BEETLE



STAG BEETLE

CONGRATULATIONS!

You are now the Owner of a very special Pet Bug! Your Bug "comes to life" and responds to commands from your LOG SWAP® Controller. Simply Press the buttons and your Bug will react! First, give life to your Bug by charging it. Then you and your Bug will be ready to play!

GETTING STARTED



CAUTION:

- As with all small batteries, the batteries used with this toy should be kept away from small children who will put things in their mouths. If they are swallowed, promptly see a doctor and, in the U.S., have the doctor phone (202) 633-0333 collect, or, in Canada, have the doctor call your provincial Poison Control Centre.
- Make sure the batteries are inserted correctly and always follow the toy and battery manufacturer's instructions.
- Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.

IMPORTANT BATTERY INFORMATION:

Please retain this information for future reference. Batteries should be replaced by an adult.

CAUTION:

- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- Do not mix old batteries and new batteries or standard (carbon zinc) with alkaline batteries.
- Remove rechargeable or standard batteries from the product.
- Remove batteries if product is not to be played with for a long time.
- Do not short-circuit the battery terminals.
- Do not attempt to charge, or be affected by, technological interference, move it away from other electrical equipment, heat (including direct heat or light), or tampering and replacing batteries if necessary.
- RECHARGEABLE BATTERY: Do not mix these with any other types of battery. Always remove from the product before recharging.
- Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERY.

To Install Batteries:

- Charge and Controller.
- Remove the battery compartment cover using a screwdriver (not included) as shown.
- Insert batteries (not included) as shown in diagram, making sure to match the polarity direction.
- Replace the battery cover.


Install Batteries

charger and controller.

- Remove the battery compartment cover using a metric screwdriver (not included) as shown.
- Insert batteries (not included) as shown in diagram, making sure to match the polarity direction.
- Replace the battery cover.

BATTERY REQUIREMENTS:

LOG CONTROLLER: 2 x 'AA'
CHARGER: 3 x 'AAA'

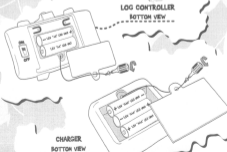

GIVING LIFE



charging your Pet Bug

Your Pet Bug "comes to life" in seconds! Simply charge your Pet Bug for about 45 seconds and it will be ready to play. Your Pet Bug may get tired after about 5 minutes of play. Just charge your Pet Bug again for another 45 seconds and it will be full of life!



1. Align the connection points between the charger and the bug as shown.



2. CHARGE LIGHT.

Turn charger on. Then hold down your bug and the red charging light should glow. Charge for about 45 seconds or until the red light turns off.

NOTE: If your bug is not responding properly, charge it again for about 45 seconds.

If the "AAA" batteries make the charger sluggish weak or dead, charging time may vary.

USING THE LOG CONTROLLER



Use the log controller and your Pet Bug will react to your commands before you play. Always remember to turn on your log controller (see Battery Section).



1. PRESS BOTH BUTTONS TO GOAL FORWARD.



2. PRESS BOTH BUTTONS TO GOAL BACKWARDS.



3. PRESS TOP RIGHT BUTTON OR BOTTOM LEFT BUTTON TO TURN COUNTERCLOCKWISE.



4. PRESS TOP LEFT BUTTON OR BOTTOM RIGHT BUTTON TO TURN COUNTERCLOCKWISE.

NOTE: - A-BE BTTI RTTS BUC shown in these illustrations may vary.

- You can make your Pet Bug spin on the spot by pressing two buttons in the same time (ie. TOP RIGHT AND BOTTOM LEFT button, or two TOP LEFT AND BOTTOM RIGHT button).
- When your bug crawls forward or backwards, it normally moves in a zig-zagging line (not straight).

FCC Warning Statement for DoC Label Requirement:

Tested To Comply With FCC Standards

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.