

5 Once the alarm setup is completed, corresponding alarm indicator will be displayed.

ENABLE/DISABLE ALARM

A Please make sure if any of Alarm 1 or Alarm 2 is disabled

by turning each one off, specified alarm sound won't be played at the alarm time. It should be turned on again to

Alarms can be **Enabled/Disabled** by pressing **1** [Alarm 1]

1 When the alarm is activated, the corresponding
1 Alarm 1 or 2 Alarm 2 indicator will blink on the display.

2 Press ① [Snooze] to temporarily silence the alarm. The alarm will snooze and reoccur at an interval of every 9 minutes. The corresponding ② Alarm 1 or ② Alarm 2 indicator will blink on the display during the snooze period.


- SLEEP TIMER FUNCTION -

1 Press **①** [♂] to turn on the audio function.

The Sleep Timer Function allows you to set a stop action for the **FM Radio** or **Bluetooth** after the specified time has elapsed.

or (a) [Alarm 2].
When (b) [a) and/or (2) [a) is showing, the alarm is set to ON and will activate at the scheduled time. If the indication is not showing, the alarm is set to OFF.

3 To STOP the alarm completely, press ① [♂]. This will stop the alarm until the next alarm time.

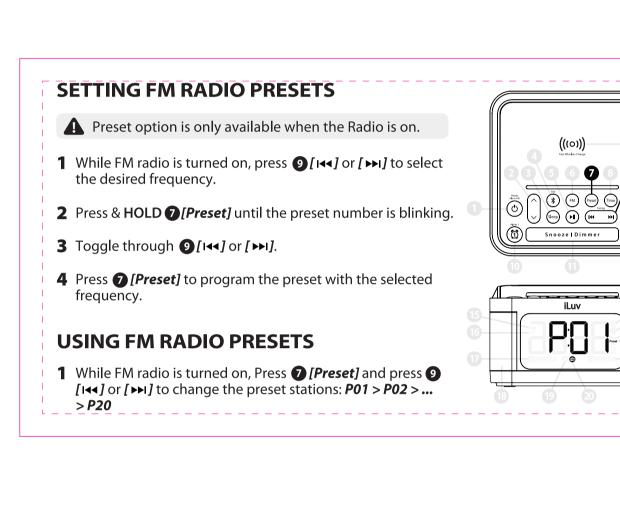

- FM RADIO --

USING FM RADIO

1 Unravel and extend the antenna to improve the FM radio


4 Press **⑨** [**!**◄◄] or [**>**►**!**] to change the FM radio frequency.


5 Press & HOLD 9 [I◄4] or [►►I] to automatically scan

2 Press **①** [७] to turn on the audio function.

3 Press **6** [FM] to select FM Radio.

6 To turn the FM radio off, press **1** [७].

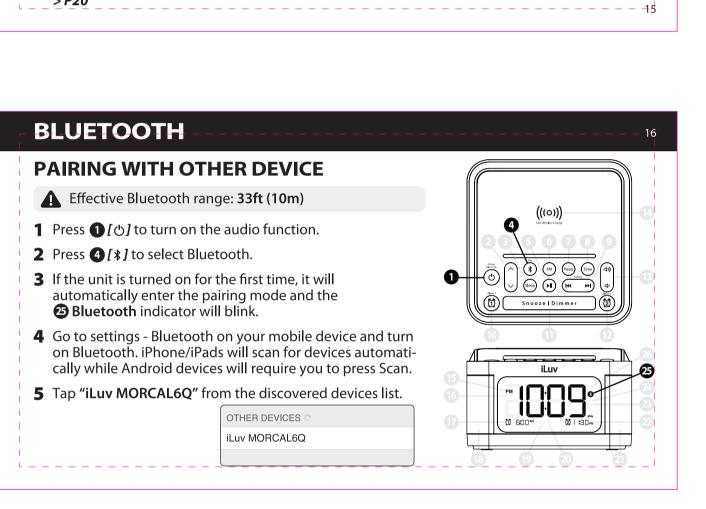

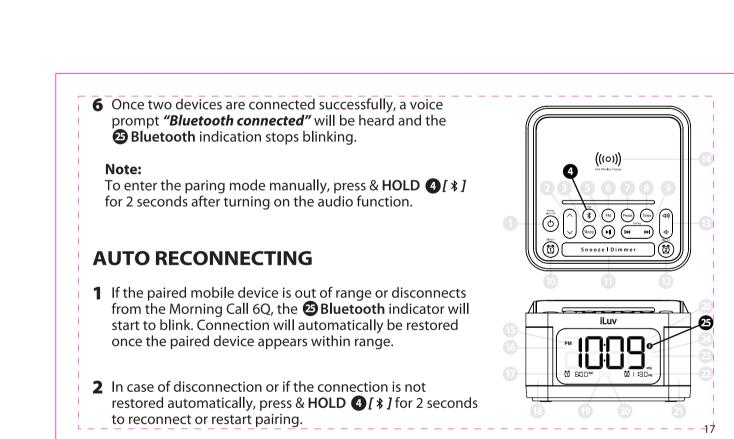

MUSIC PLAYBACK

your preferred app.

2 Press **⑤[►II]** to play your music.

3 Press ⑤ [►II] to pause while music is playing

4 Press **13** [Volume Up/Volume Down] to increase or decrease volume (00-30).


5 Press & **HOLD ⑨**[**I ! ! ! !** to skip to the previous track.


1 Press **1** [Snooze/Dimmer] to adjust the brightness from 10 levels; 100 (maximum brightness) to 00 (mini-


6 Press **9** [**→**1] to skip to the next track.


2 Default brightness level is **100**.

1 Once connected to your device, play music or audio from

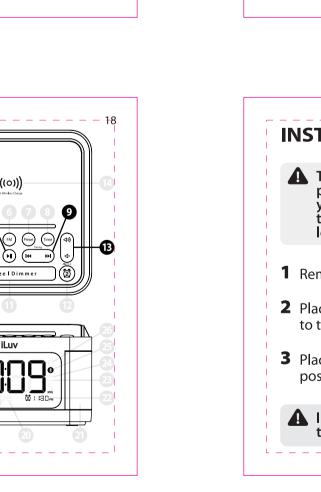

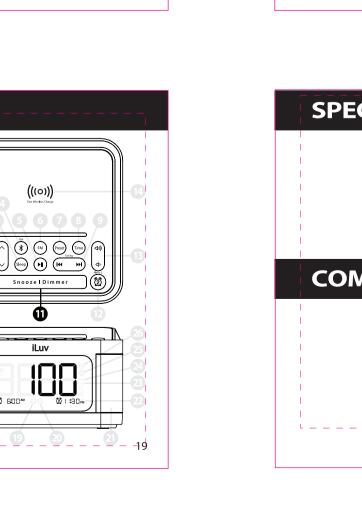

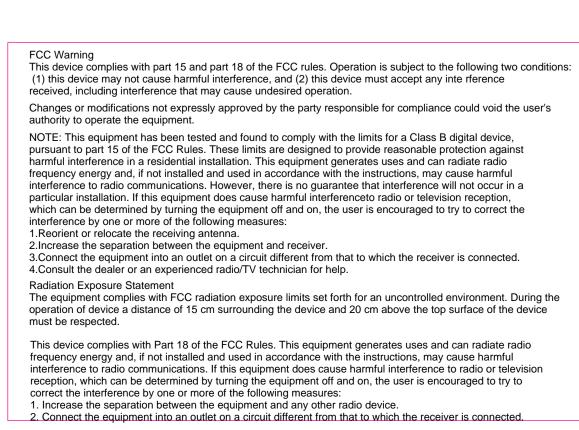

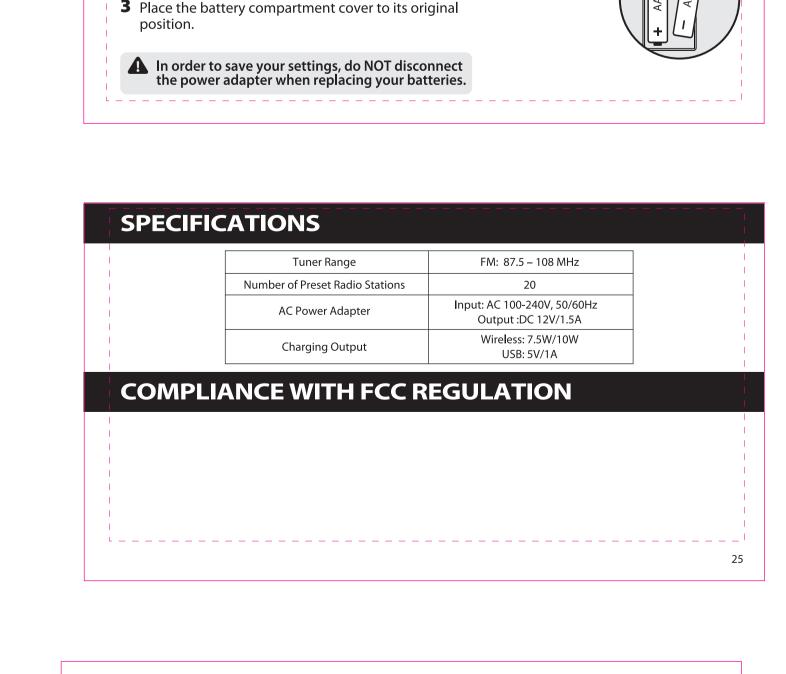



WIRELESS CHARGE INDICATOR Wireless Charging Indicator is displayed on the top right corner of the display. Refer to the status indications below: 1 Off: Standby Mode 2 On: Charging 3 Blinking: Abnormal *If the charging indicator blinks: - Check if your device supports Qi wireless charging - Place your device in the center of the Wireless charging pad - Remove any protective cases containing magnets, metal, or materials thicker than 0.12" (3mm)	WIRI WIRI the Refe		
Wireless Charging Indicator is displayed on the top right corner of the display. Refer to the status indications below: 1 Off: Standby Mode 2 On: Charging 3 Blinking: Abnormal *If the charging indicator blinks: - Check if your device supports Qi wireless charging - Place your device in the center of the Wireless charging pad - Remove any protective cases containing magnets,	1 Off : 2 On : 3 Blin		
Wireless Charging Indicator is displayed on the top right corner of the display. Refer to the status indications below: 1 Off: Standby Mode 2 On: Charging 3 Blinking: Abnormal *If the charging indicator blinks: - Check if your device supports Qi wireless charging - Place your device in the center of the Wireless charging pad - Remove any protective cases containing magnets,	1 Off : 2 On : 3 Blin		
Wireless Charging Indicator is displayed on the top right corner of the display. Refer to the status indications below: 1 Off: Standby Mode 2 On: Charging 3 Blinking: Abnormal *If the charging indicator blinks: - Check if your device supports Qi wireless charging - Place your device in the center of the Wireless charging pad - Remove any protective cases containing magnets,	1 Off : 2 On : 3 Blin	FI FSS CHARGE INDICATOR	
1 Off: Standby Mode 2 On: Charging 3 Blinking: Abnormal *If the charging indicator blinks: - Check if your device supports Qi wireless charging - Place your device in the center of the Wireless charging pad - Remove any protective cases containing magnets,	2 On:	Wireless Charging Indicator is displayed on top right corner of the display.	2 3 5 6 7 8 9
*If the charging indicator blinks: - Check if your device supports Qi wireless charging - Place your device in the center of the Wireless charging pad - Remove any protective cases containing magnets,			(3) (3) (3) (1) (1) (1) (1) (1) (1) (1) (1) (1) (1
- Check if your device supports Qi wireless charging - Place your device in the center of the 4 Wireless charging pad - Remove any protective cases containing magnets,	*If t		iLuv
	- Pla ch - Re	ace your device in the center of the 19 Wireless arging pad move any protective cases containing magnets,	PM I I I I I I I I I

- USING QI WIRELESS CHARGING --

