

The Edison Bluetooth Vintage speaker MODEL: BGR-2/0163, CAB-B3602



USER MANUAL

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN IT FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- 1. Read these instructions All the safety and operating instructions should be read before the appliance is operated.
- 2. Keep these instructions The safety and operating instructions should be kept for future reference.
- 3. Heed all warnings All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow all instructions All operation and use instructions should be followed.
- 5. Do not use this apparatus near water The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
- 6. Clean only with dry cloth The appliance should be cleaned only as recommended by the manufacturer.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. AC adaptor is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the AC adaptor should be disconnected form the mains socket outlet completely.
- 10. Only use attachments / accessories specified by the manufacturer.
- 11. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 12. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
- 15. Power Sources The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
- 16. Battery shall not be exposed to excessive heat such as sunshine, fire or the like
- 17. Do not attempt to dismantle, open or repair this product yourself. If a fault occurs, seek advice from your local qualified service technician or contact the distributor via the telephone number at the back of this instruction manual.
- 18. Caution marking and nameplate are located on bottom or back of product.

FCC WARNINGS:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement


To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

ACCESSORIES


- 1 x AC Adaptor
- 1 x User Manual
- 1 x Main Unit
- 1 x Horn
- 1 x Horn Connecting and Decorating Ring

INSTALLATION


STEP 1: Insert the connecting and decorating ring into the horn rod.

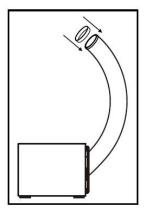


STEP 2: Follow the shown method to match the gap between the ring 1 and ring 2.

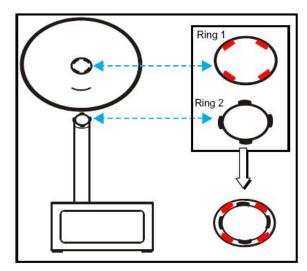


STEP 3: Swivel the horn and the horn rod by reverse direction until they fix each other firmly.

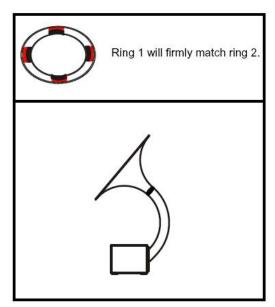

PRODUCT OVERVIEW

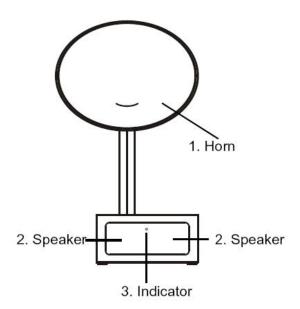

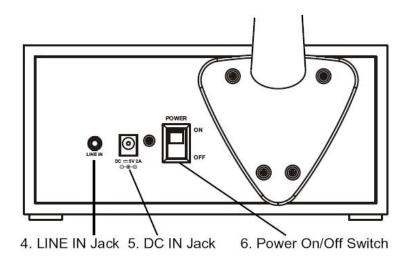

LINE IN OPERATION

This unit provides an auxiliary audio input jack for connecting external audio devices like MP3 players and listen through the speakers of this unit.

- 1. Use an audio cable with one 3.5 mm stereo plug on each end.
- 2. Plug one end into the LINE IN jack on the rear of the unit and the other end of the cable into the LINE OUT, AUDIO OUT Jack or Headphone Jack of your external audio device. The Indicator LED will turn RED.
- 3. Turn on the external audio device and the unit.
- 4. Operate all other functions on the auxiliary device as usual.

Note: The Bluetooth function will be cut off when a 3.5 mm stereo LINE IN cable plugged into the LINE IN jack.

BLUETOOTH OPERATION

- 1. Push the power switch to ON position to turn on the unit, the Indicator LED will flash BLUE. The unit is now ready to pair with your Bluetooth enabled device.
- 2. Turn on the Bluetooth function of your Bluetooth enabled device and search to find the pairing name "CAB-B3602".
- 3. Select "CAB-B3602" when it appears on your device screen.
- 4. After successfully pairing, the Indicator LED stops flashing and a tone sounds. You can now play music from the Bluetooth enabled device.

Note: If you want to connect the unit to another device after pairing successfully, please turn off the Bluetooth on the paired device first if it is in range before going through the above steps. Otherwise, the unit will automatically reconnect to the previously paired device.

- 5. Operate all other functions on the external Bluetooth enabled device as usual.
- 6. To turn off the unit, push the power switch to OFF position.

CARE AND MAINTENANCE

- 1. Do not subject the unit to excessive force, shock, dust or extreme temperature.
- 2. Do not tamper the internal components of the unit.
- 3. Clean your unit with a dry cloth. Solvent or detergent should never be used.
- 4. Avoid leaving the unit in direct sunlight or in hot, humid or dusty places.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- If the cabinet or the outer surface becomes dusty, wipe it with a soft dry dust cloth. Do not use any wax or polish oil.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes, as these will damage the finish of the unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLESOOTING GUIDE

Please refer to the following possible solutions before inquiring for service.

Symptom	Possible Problem	Solution	
The unit does not respond (no power)	The unit is disconnected from the AC outlet.	Reconnect to the AC outlet.	
	No power from the AC outlet.	Try the unit on another outlet.	
Unit is ON but there	The volume control has been	Increase Volume on	
is low or no volume	turned all the way down.	external device.	
No Sound	Bluetooth speaker is not paired.	Go through "Bluetooth Operations" process to connect the speakers.	
	Speaker placement out of Bluetooth working range	Relocate the speaker within Bluetooth operating range	
Sound is distorted	Volume level is set too high.	Decrease the volume on external device.	

SPECIFICATIONS

Power source	AC-DC Adaptor DC 5V === 2000mA ⊖ ⊕ ⊕
Bluetooth Version	V2.1
Bluetooth Working Range	about 32feet(10m) tested in open area

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Spectra Merchandising Intl, Inc. is under license. Other trademarks and trade names are those of their respective owners.