
Character Wireless Speaker

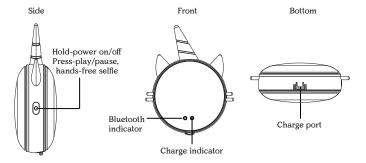

Included

- Character Wireless Speaker
- 18' Micro USB Charging Cable

- **Pairing**Power ON using ON/OFF switch.
- · Rapid flashing white light, followed by a chime
- Use Bluetooth settings on your phone to pair with MORE THAN MAGIC 04
- · Slow flashing white light pairing successful

Selfie function

- · Activate the camera of your phone
- · Press the ON/OFF switch to make a selfie, the music playing will be paused

Pair with another Character Wireless Speaker

- · Power on both speakers, double press the ON/OFF switch on one of the speakers
- · Pair the main speaker with the external Bluetooth player and start playing music
- · When one of the speakers is powered off, the other one will be powered off as well

front

Indicators

- · White Rapid Flash Powered on
- · Red/White Alternating Until Paired Bluetooth pairing

4 in

- · Slow Flashing White Paired
- · Red Battery low
- · Chirping Tones Powering on
- · Single Chime Ready to pair
- · Echoing Chime Paired
- Rapid Chirping Tone Low battery
 Quick Low Tone Max. Volume/Min. Volume
- · Double Chime AUX cable connected

- Plug micro end of charging cable into charge port of speaker
 Plug USB end of charging cable into a DC 5V USB power supply

Troubleshooting and tips

- If the speaker is not working properly, turn it on/off to reset
- If the speaker won't turn on, recharge the battery and try again
- If the speaker won't charge, make sure the supply works, is 5V >1A, and not damaged
- If the speaker makes no sound adjust the volume
- If the speaker makes no sound make sure it is not paused. Press the play button if it is

If the speaker makes no sound or does not show as an available device, make sure it is not paired to another device, if so, unpair the device and re-pair the desired device

This device does not have a pairing code. If prompted for one make sure you are connecting to the correct device. If you are, "forget" the device and re-pair. If you are still prompted

The unit will power off after 20 minutes of no use.

Need some help?

Can't get it to pair? Have a question or comment?





call us at: 877-698-4883 or: 877-MyTgtTech online at: TargetTechSupport.com

Do not use near any water source

Do not modify or repair this device

Do not use in high temperatures or extreme weather

Do not use chemical detergents to clean your device, use a soft dry cloth

TORO Chammarko (9) I

FCC ID: OKUCAB6G680 Model: TTII41 Input: 5V --- Max 1A Made in China
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (I)This device may not

cause harmful interference, and (2)This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance

could void the user's authorily to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in

installation. This equipment generates, toes and can raunder ratio inequency effects and, in no installate and used in accordance with the instructions, may cause interference to ratio communications, in no installate and used in However, there is no guarantee that interference will not occur in a particular installation. If this equipment does makeharmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

makenamus meriterine or rand of reversion reception, which can be deletimed by until grant me equipment on and on, it user is encouraged to try to correct the interference by one or more of the following measures:

• Recrient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment on ontelled on a circuit different from that to which the receiver is connected. • Consult the dealer or an

back

experienced radio/TV technician for help.
Target Corp.Mpls.MN,55403 Phone:1-612-304-6073

5.6 in