 


SYLVANIA



Bluetooth Waterproof Wireless Dual Speakers

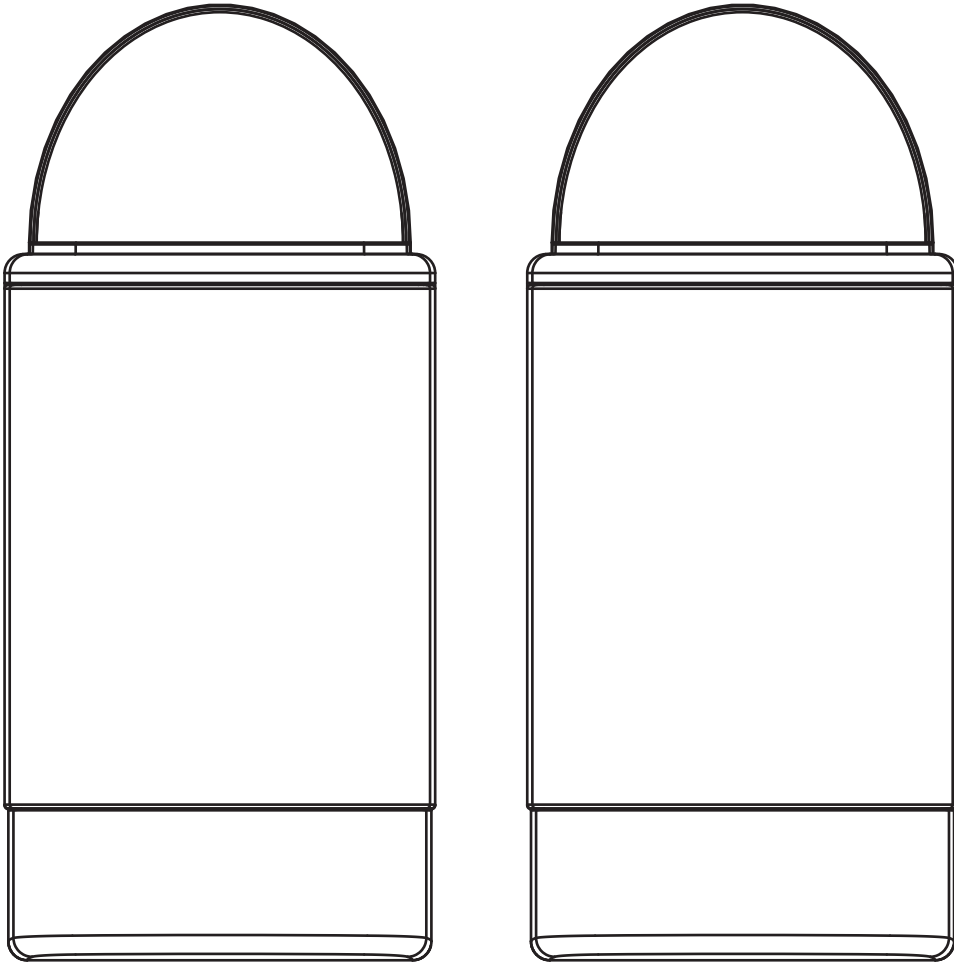

MODEL:SP096-BLACK

Please Read This Instruction Manual Carefully and Keep It for Future Reference

Important Safety Instructions

 **CAUTION** 
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.


CAUTION:


- THIS DIGITAL VIDEO DISC PLAYER EMPLOYS A LASER SYSTEM.
- TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS OWNER'S MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE.
- SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE PROVIDER.
- MISUSE OF CONTROLS, ADJUSTMENTS TO THE UNIT OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
- TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED.
- DO NOT STARE INTO BEAM.


WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

SURGE PROTECTORS:
It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

 The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

 DANGER: Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

This Class B digital apparatus complies with Canadian ICES-003.

WARNING:
USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD

This unit has a long AC cord or other long cord that can easily be tripped on or pulled on, causing injury. Please make sure it is arranged so it will not drape over a tabletop, etc. where it can be pulled on by children or tripped over accidentally.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Important Safety Instructions

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

- 1) **Read these instructions.**
All the safety and operating instructions should be read before the product is operated.
- 2) **Keep these instructions.**
The safety and operating instructions should be retained for future reference.
- 3) **Heed all warnings.**
All warnings on the product and in the operating instructions should be adhered to.
- 4) **Follow all instructions.**
All operating and use instructions should be followed.
- 5) **Do not use this apparatus near water.**
Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.
- 6) **Clean only with dry cloth.**
Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 7) **Do not block any ventilation openings. Install in accordance with the manufacturers instructions.**
Slots and openings in the cabinet and in the back or bottom are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 8) **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
- 9) **Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.**
- 10) **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
- 11) **Only use attachments/accessories specified by the manufacturer.**
- 12) **Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.**
An appliance and cart combination should be moved with care. Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.
- 13) **Unplug this apparatus during lightning storms or when unused for long periods of time.**
To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 14) **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture or does not operate normally, or has been dropped.**
- 15) **Power source**
This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company.
For products intended to operate from battery power, or other source, refer to the operation instructions.
- 16) **Power lines**
An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.



Important Safety Instructions

17) Overloading

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18) Object and liquid entry

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19) Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

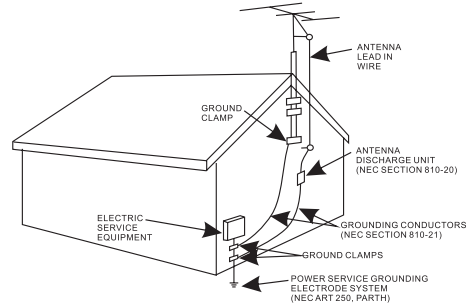

20) Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23) Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance—this indicates a need for service.

25) Note to CATV system installer

 
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTE:


Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

PRODUCT OVERVIEW


TOP VIEW

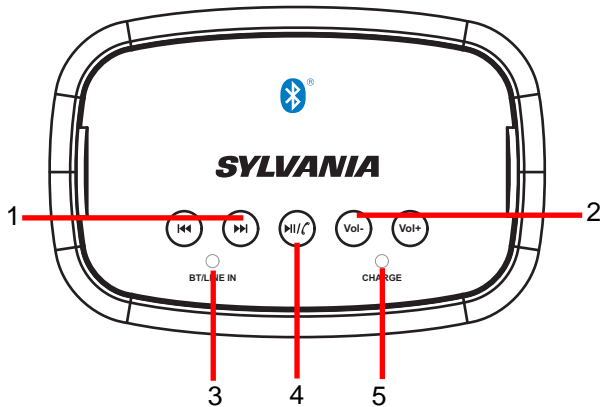

FRONT VIEW

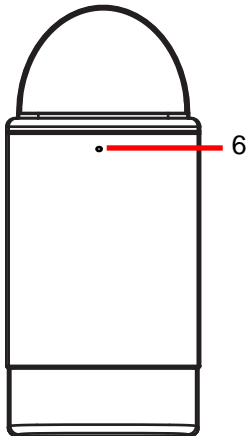 

REAR VIEW

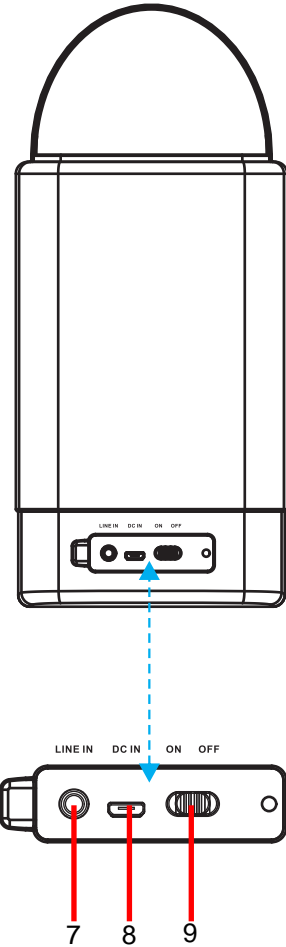 

1. ◀◀ / ▶▶ (Previous/Next) Button
2. Vol - / Vol + (Volume Down / Volume Up) Button
3. BT/LINE IN Indicator
4. ▶||/⏸ (Play/Pause/Hands-free) Button

5. Charge Indicator
6. Built-in Microphone
7. LINE IN Jack
8. DC IN Port
9. Power ON/OFF Switch

BATTERY CHARGING

1. Connect the smaller plug on mini-USB cable to the DC IN jack on the rear panel.
2. Connect the USB plug to a free USB port on a computer or a 5V USB AC adapter (not supplied).

During charging, the charging indicator will turn red, and it will turn off after fully charged.

LINE IN OPERATION

1. Connect the Headphone/Earphone; Aux out jack or Line out jack from the external audio player (such like MP3 player; Discman ... etc) to the LINE IN jack on the rear panel of the unit by the supplied Audio Connection Cable as the figure below:



2. Push the power switch to "ON" position to power on the unit.
3. Power on the connected external player and start playback as usual.

BLUETOOTH PAIRING AND CONNECTION

NOTE:

- Before pairing, make sure the LINE IN cable is not plugged into the LINE IN jack.
- If the two units were connected and paired before, the two units will connect and pair with each other automatically.

FIRST TIME PAIRING

1. Push the power switch to "ON" position to power on both units, the two unit will send a sound, and the BT/LINE IN indicator will flash.
2. Touch "◀◀" button on one of the two units, then touch "▶▶" button on another unit, the two units will search and pair with each other.
3. After successful pairing and connection, a chime will be heard and the BT/LINE IN indicator on main unit will flash.
4. Open the bluetooth on bluetooth enabled audio player or mobile phone and try to search and pair with the main unit, the pairing name "SP096" will appear, select it and make connection.
5. After successful connection, the BT/LINE IN indicator on main unit will stay lit.
6. Play track on bluetooth enabled audio player or mobile phone as usual.

NOTE:

- The unit from which the "▶▶" button being touched will be the main unit.
- Repeat the operation of STEP 2 to switch the main unit before pairing with bluetooth enabled audio player or mobile phone.
- If the main unit had been switched before connected with the bluetooth enabled audio player or mobile phone, the bluetooth enabled audio player or mobile phone must search the main unit again although there is "SP096" listed on pairing name list.

During playing:

- A: Touch ◀◀ or ▶▶ button to skip to previous or next track.
B: Touch ▶||/◁ button to pause, touch again to resume playing.
C: Touch VOL + or VOL - button to increase or decrease the volume.

The A, B, C operation above are simultaneous during playing.

For example, touch VOL + button on one of the two units, the volume on both units will increase.

DISCONNECTION:

- Holding the ▶||/◁ button on main unit to cut off connection between main unit and bluetooth enabled audio player or mobile phone.
- Holding the ▶||/◁ button on deputy unit to cut off connection between main unit and the deputy unit. (To reconnect the deputy unit, please pause playing on main unit, and restart deputy unit. After reconnection with main unit again, touch VOL - to set to minimum volume, then touch VOL + to set to the desired volume.)

NOTE:

The deputy unit will enter standby mode without any sound output or operation after 10 minutes. The main unit will enter standby mode without any sound output or operation after about 11 minutes. Powering on both units by STEP 1.

INCOMING CALLING DURING PLAYING IN BT MODE



An incoming call received during playing in bluetooth mode, operate as the followings:

- Touch "▶II/⌂" button to answer the incoming call.
- Touch "▶II/⌂" button again to end the call after conversation.
- Holding the "▶II/⌂" button to refuse the call.
- Double press "▶II/⌂" button to redial the last called number.

TROUBLESHOOTING GUIDE

Check the followings before requesting service		
SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOULTION
No power	The power is consumed	Recharge the unit.
No sound	Volume in minimum position	Raise volume level by pressing the VOL (Volume) + button.
	The paired/connected device is not in playback mode	Play music/movie in the paired/connected device as usual and make sure the volume level of it is in high level.
Sound distortion /rattle	Volume level too high	Reduce the volume level by pressing the VOL (Volume) - button.
		Reduce the volume level of the paired/connected device.
Bluetooth reception failure	The external device is far from the unit	Put the external BT device close to the unit.
	Have not paired	Pair the unit with the BT Device as the procedures stated in this manual.

SPECIFICATION

Speaker output power.....	2X3W
Built-in battery.....	3.7V,1000mAh
Charging power.....	DC 5V  500mA 
Bluetooth working range.....	approximately 33 feet (10m)
Playing time.....	around 5 hours (with 50% volume)



Bluetooth[®]

is a trademark on a registered trademark of Bluetooth SIG Inc. All other trademarks and trade names are those of their respective owners.

ACCESSORY

- 1 X Instruction manual
- 1 X USB charging cable
- 1 X 3.5 mm LINE IN cable