

OTIC[®]

10.1" BLUETOOTH PORTABLE DVD PLAYER



MODEL: HJ10PRB01

PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT
KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE

CONTENTS

| | |
|-----------------------------------|-------|
| Important Safety Information..... | 3-8 |
| General Operations..... | 9 |
| Remote Control Operation..... | 10-11 |
| Bluetooth Operation..... | 11 |
| About Discs..... | 12 |
| Location of Controls..... | 13-14 |
| Remote Control..... | 15 |
| Battery Installation..... | 16 |
| Remote Control Working Range..... | 16 |
| Power Source..... | 17 |
| Swivel Panel..... | 18 |
| USB or Card Playback..... | 19 |
| Other Way to Play..... | 20 |
| System Setup..... | 21 |
| Care and Maintenance..... | 22 |
| Specification..... | 23 |
| Accessories..... | 23 |

IMPORTANT SAFETY INSTRUCTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION: THIS DIGITAL VIDEO DISC PLYER EMPLOYS A LASER SYSTEM. TO ENSURE PROPER USE OF THIS PRODUCT.

PLEASE READ THIS OWNER'S MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE .

SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE LOCATION SEE SERVICE PROCEDURE.

USE CONTROLS, ADJUSTMENTS OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO BEAM.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



DANGER: Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

Caution

Invisible laser beam.

Please do not look into or touch the lens.

SURGE PROTECTORS:

It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

IMPORTANT SAFETY INSTRUCTIONS

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

WARNING

USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD

This unit has a long AC cord or other long cord that can easily be tripped on or pulled on, causing injury. Please make sure it is arranged so it will not drape over a tabletop etc. where it can be pulled on by children or tripped over accidentally.

EXERCISE CAUTION AS UNIT HAS SHARP POINTS.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

1) Read these instructions

All the safety and operating instructions should be read before the product is operated.

2) Keep these instructions

The safety and operating instructions should be retained for future reference.

3) Heed all warnings

All warnings on the product and in the operating instructions should be adhered to.

4) Follow all instructions

All operating and use instructions should be followed.

5) Do not use this apparatus near water

Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement or near a swimming pool.

6) Clean only with dry cloth

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

IMPORTANT SAFETY INSTRUCTIONS

7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11) Only use attachments/accessories specified by the manufacture .

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Portable Cart Warning

An appliance and cart combination should be moved with care. Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system.

This will prevent damage to the product due to lightning and power-line surges.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

15) Power source

This product should be operated only from the type of power source indicated on the marking label.

If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

IMPORTANT SAFETY INSTRUCTIONS

16) Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits.

When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17) Overloading

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18) Object and liquid entry

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19) Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper to grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

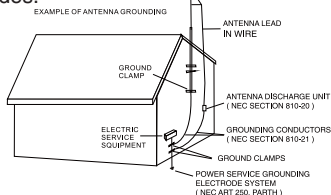

20) Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operational condition.

23) Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore in the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.

IMPORTANT SAFETY INSTRUCTIONS

- f) When the product exhibits a distinct change in performance-this indicates a need for service.

25) Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTE: Refer all servicing to qualified service personnel servicing is required when the unit has been damaged in any way such as the following: the power supply cord or plug has been damaged, liquid has been spilled into unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

NOTES ON HANDLING:

- When shipping the unit, always use the original shipping carton and packing materials. For maximum protection, repack the unit as it was originally packed at the factory.
- Do not use volatile liquids, such as insect spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long time. They will leave marks on the finish.
- The top and rear panels of the unit may become warm after a long period of use. This is normal and not a malfunction.
- When the DVD player is not in use, be sure to remove the disc and turn off the power.

NOTES ON LOCATING THE DVD PLAYER:

When you place this unit near a TV, radio or VCR, the playback picture may become poor and the sound may be distorted. In this case, move the unit away from the TV, radio or VCR.

NOTES ON CLEANING:

Use a soft, dry cloth for cleaning

- For stubborn dirt, soak the cloth in a weak detergent solution, wring well and wipe. Use a dry cloth to wipe it dry. Do not use any type of solvent, such as thinner and benzene, as they may damage the surface of the unit.
- If you use a chemical-saturated cloth to clean the unit, follow that product's instructions.

Warning: Cleaning and adjustment of lenses and/or other components of playback mechanism should be performed by a qualified service technician.

IMPORTANT SAFETY INSTRUCTIONS

NOTES ON MOISTURE

CONDENSATION:

Moisture condensation damages the DVD player.

Please read the following carefully.

- Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the DVD player.

Moisture condensation occurs during the following cases:

- When you bring the DVD player directly from a cold place to a warm place.
- When you use the DVD player in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.
- In summer, when you use the DVD player in a hot and humid place just after you moved the unit from an air conditioner room.
- When you use the DVD player in a humid place.

Do not use the DVD player when moisture condensation may occur:

- If you use the DVD player in such a situation, it may damage discs and internal parts. Remove the disc, connect the AC/DC adapter to the DVD player and the wall outlet, turn on the DVD player and leave it on for two or three hours. After two or three hours, the DVD player will have warmed up and evaporated any moisture.

WARNING:

- Do not use or leave the device in direct sunlight or a hot environment such as a vehicle etc. that is in hot environment. Overheating can damage the device.
- Do not overcharge the device – do not leave the device on the charger for very long after the battery has been fully charged.
- Device should be protected from any physical impact or damage and care should be taken not to drop the device.
- Only use the factory supplied charger. The use of unapproved charger or cable may cause the battery to fail, explode and/or damage the device.
- Do not disassemble, puncture, crush or expose your device to temperatures above 40°C / 104°F.
- Keep your device away from fire or water.
- Keep your device from moisture and extreme temperatures.
- Should your battery swell or expand, please immediately discontinue use of your device.

GENERAL OPERATIONS

1. Lift up the panel and turn to desired angle. Slide the Power ON/OFF switch to "ON" position to power on the unit, the Blue Indicator on front of the player will light.
2. Slide the OPEN switch to left to open the disc door. Place the disc on the center spindle with label side facing up. Close the disc door and the player will start playback automatically.
3. During playback:
 - ~ Press the ►► or ◀◀ buttons repeatedly to fast search for a specific section forward or backward. Press the ►|| button to resume normal playback.
 - ~ Press the ►►| or |◀◀ buttons repeatedly to skip to specific track.
 - ~ Press the ►|| button to pause, press it again to resume normal playback.
 - ~ Press the VOL(volume)+/- buttons to adjust volume level.
 - ~ Press the ■ button to stop playback. The player will remember the point where the disc was stopped. Press the ►|| button to start playback from this point. Press the ■ button twice to stop completely, press the ►|| button to start playback from the beginning of the disc.
4. Press the **POWER** button on the Remote Control to turn the player to standby mode. The Red Indicator will light. Press the **POWER** button again to turn the player on from standby mode (For saving energy, always power off the player by slide the Power ON/OFF switch on the player to OFF position or unplug the AC/DC Adaptor from player and wall outlet.)

Repeat Playback: (DVD)

 
 
- During playback, press the **REPEAT** button once to repeat the current chapter.
- Press the **REPEAT** button twice to repeat the current title.
- Press the **REPEAT** button the third time to repeat all.
- Press the **REPEAT** button repeatedly to turn off the repeat mode.

Repeat Playback: (CD)

- During playback, press the **REPEAT** button once to repeat the current track.
- Press the **REPEAT** button twice to repeat all the tracks.
- Press the **REPEAT** button repeatedly to turn off the repeat mode.

(CD/DVD) Program:

1. During CD or DVD playback, press the **PROG** (Program) button.
2. Using the Direction and Numeric buttons to select and set the desired TT (Title), CH (Chapters), tracks (for CD) of the movie (music) you wants. The Program menu will appear as follows.

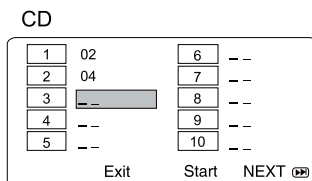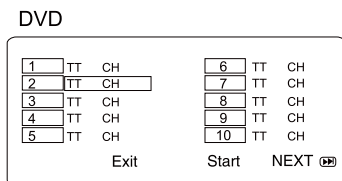

3. Using the Direction buttons to select and highlight the "Start" button on the screen then press the **OK** button to start program playback.

REMOTE CONTROL OPERATIONS

LCD ON/OFF: Press to turn on or off the LCD display.

POWER: Press to turn to standby mode, press again to turn on.

VOLUME +/-: Press to increase or decrease volume.

⊞ **MUTE:** Press to turn off the sound, press again to resume.

SOURCE: Press to switch to AV IN mode, press again to resume normal mode.

OSD: (On Screen Display)

During playback, press the **OSD** button repeatedly to read the information of playback status.

SUBTITLE:

During DVD playback, press repeatedly to select desired subtitle (Function depends on the recording of disc).

STEP:

During movie playback, press **STEP** button repeatedly to play the movie frame by frame. Press the **▶II** button to resume normal playback.

TITLE/MENU:

Press repeatedly to return to disc's title /menu page (Function depends on the recording of the disc).

ANGLE:

During DVD playback, press repeatedly to select the viewing angle (Function depends on the the recording of the disc).

AUDIO:

During DVD playback, press repeatedly to select the desired language or channel. (Function depends on the recording of the disc)

ZOOM:

During movies playback, press this button repeatedly to zoom in/out the picture. When in zoom mode, press Direction buttons to select the parts of the zoomed picture to watch. (Function depends on the recording of the disc.)

Note: Zooming into an image will degrade the quality as the pixels of the image are being enlarged.

SLOW:

During playback, press the **SLOW** button repeatedly to set the slow motion speed. Press **▶II** button to resume normal playback.

GOTO (DVD):

~ Press the **GOTO** button once to display the Title and Chapter selection menu.

Use Direction and Numeric buttons to select the desired title and chapter.

The player will play the selected chapter automatically.

~ Press the **GOTO** button twice to display the time selection under Title, using the Direction and Numeric buttons to enter the desired time.

The unit will start play the movie from the selected time automatically.

REMOTE CONTROL OPERATIONS

- ~ Press the **GOTO** button the third time to display the time selection under Chapter. Using the Direction and Numeric buttons to enter the desired time. The unit will start play the movie from the selected time automatically.

GOTO (CD)

- ~ Press the **GOTO** button once, using the Numeric and **OK** buttons to set the desired playback time of disc.
- ~ Press the **GOTO** button twice, using the Numeric and **OK** buttons to set the desired playback time of track.
- ~ Press the **GOTO** button the third time, using the Numeric and **OK** buttons to set the desired track.

A-B Repeat

During Playback, press the A-B button to select the starting point, press it again to select the ending then the player will play the selected section repeatedly and continuously. Press the A-B button again to resume normal playback (This function is not available on all discs).

BLUETOOTH OPERATION

After initial pairing, the DVD player will stay paired unless you unpaired it manually, or erased due to a reset device. If this occurs or you find the unit is unable to connect, please repeat below steps:

1. Lift up the panel and turn to desired angle. Slide the Power ON/OFF switch to "ON" position to power on the unit, the Blue Indicator on front of the player will light.
2. Press the **PAIR** button once on your DVD player, the Blue indicator on front will blink fast to indicate you it is searching for a bluetooth device.
3. Activate the bluetooth function on your bluetooth device, after a while, the pairing will be connected automatically.
The indicator on front of your DVD will light with solid Blue.
4. During playing, press the **▶||** Play/Pause button on DVD or remote control to pause, press it again to resume the playing.
Press the VOL- or VOL+ button on DVD or remote control to adjust the volume level.

NOTE:

- The Build-in Bluetooth transmitter function device (such as smart phone) can not be connected with your DVD player.
- To reconnect to a different device, deactivate the bluetooth on unwanted unit, then access the bluetooth settings and activate the bluetooth function on the new device which you wish to pair with your DVD player.

ABOUT DISCS

The region number for this DVD Player is: 1
See the following page for information regarding region numbers.



PLAYABLE DISCS:

 
The following discs can be played back on this DVD player:



DISC TYPES:


DVD

Data on most DVDs is divided into sections called titles and then into subsections called chapters, each of which is given a title or chapter number. Some features of this DVD player will not operate with some DVD discs as they are preset. If a function you selected does not run as desired, refer to the manual accompanying the DVD disc.

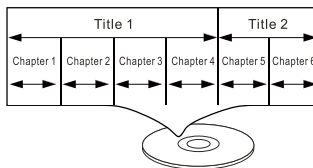

AUDIO CD

 Data on an audio CD is divided into sections called tracks, each of which is given a track number.

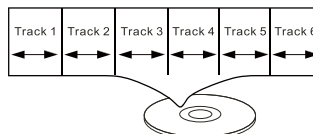

IMPORTANT:

It is important that you read the manual that accompanies the DVD disc, as there are features that are on the DVD player that cannot be used with certain DVDs. There are also extra features on the DVD disc that are different for each DVD disc, so they are not explained in this owner's manual.

This player conforms to the NTSC and PAL color systems. However, if you are in the USA, Canada or Mexico, leave this setting on NTSC. If incorrectly set to PAL, the TV picture may roll vertically. In this case, set the TV system to NTSC.

 
Notes on Copyright:

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public and rent copyrighted material without permission. DVD video discs are copy protected, and any recordings made from these discs will be distorted. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Region Management Information:

This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play that disc. You may not be able to play back some DVD video discs on this player if they were purchased from outside your geographic area or made for business purposes. When you try to play back an unauthorized disc, Wrong Region appears on the TV screen.


LOCATION OF CONTROLS

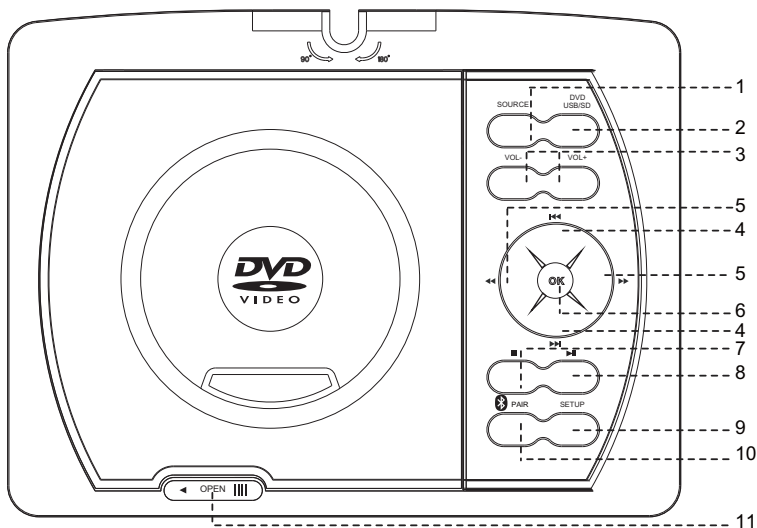

1. SOURCE: Press to switch to AV IN mode, press again to resume normal mode.
2. DVD/USB/SD: When USB device and/or SD Card was inserted, press repeatedly to select the playback source as desired.
3. VOL(volume) - : Press to decrease the volume level.
VOL(volume) + : Press to increase the volume level.
4. ⏮ ⏭ In disc playback mode, press repeatedly to skip to previous/next chapters/tracks as desired.
In setting menu, press repeatedly to move the cursor upward or downward within the menu.
5. ⏪ ⏩ In disc playback mode, press to fast backward or fast forward.
In setting menu, press repeatedly to move the cursor left or right within the menu, or return to previous menu.
6. OK: Press to confirm the selection.
7. ■ While DVD/CD playing, press this button once to pre-stop (In this mode, when press the ▶|| button, the player will start to play from the point stopped) Press this button twice to stop playback completely (In this mode, when press the ▶|| button, the player will start to play the current disc from the beginning)
8. ▶|| During playback, press this button to pause, press again to resume normal playback.
9. SETUP: Press this button to enter setting menu, when setting finished, press this button again to save and exit.
10. PAIR: Press to pair with the Bluetooth device.
11. OPEN: Slide to left to open the disc door.


LOCATION OF CONTROLS

 Right Side View:

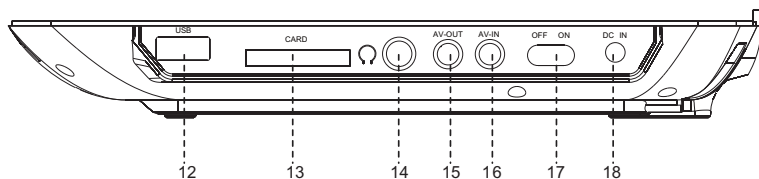


- | | |
|---------------------------------|-------------------------|
| 12. USB port | 16. AV IN jack |
| 13. Card slot (for SD/MMC card) | 17. Power ON/OFF switch |
| 14. Earphone jack | 18. DC IN jack |
| 15. AV OUT jack | |

 Front Side View:

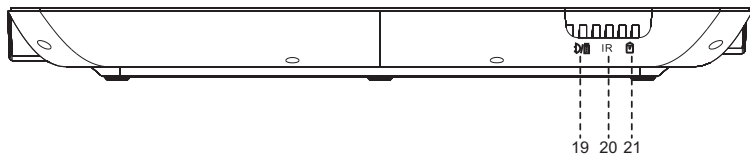

- | | | |
|------------------------|-------------------|---------------------|
| 19. Charging indicator | 20. Remote sensor | 21. Power indicator |
|------------------------|-------------------|---------------------|

 REMOTE CONTROL

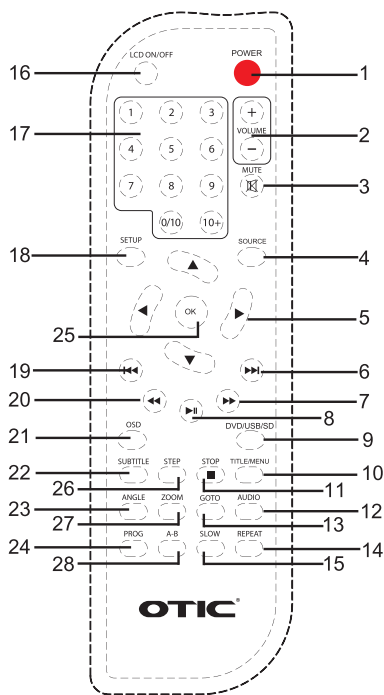


- | | |
|---|---|
| 1. POWER button | 15. SLOW button |
| 2. VOLUME +/- buttons | 16. LCD ON/OFF button |
| 3. MUTE button | 17. Numeric buttons |
| 4. SOURCE button | 18. SETUP button |
| 5. Direction \blacktriangleleft \blacktriangleright \blacktriangledown \blacktriangleup buttons | 19. Skip Previous button |
| 6. $\blacktriangleright\blacktriangleright$ Skip Next button | 20. $\blacktriangleleft\blacktriangleleft$ Fast Backward button |
| 7. $\blacktriangleright\blacktriangleright$ Fast Forward button | 21. OSD (On Screen Display) button |
| 8. \parallel (Play/Pause) button | 22. SUBTITLE button |
| 9. DVD/USB/SD button | 23. ANGLE button |
| 10. TITLE/MENU button | 24. PROG (Program) button |
| 11. \blacksquare (STOP) button | 25. OK button |
| 12. AUDIO button | 26. STEP button |
| 13. GOTO button | 27. ZOOM button |
| 14. REPEAT button | 28. A-B Repeat button |

BATTERY INSTALLATION

BATTERY INSTALLATIONS (Remote Control)

 1. Press the tabs on the battery door and lift it off.
2. Install two (2) x AAA size batteries into the battery compartment as the figure on right and the polarity markings inside battery compartment.

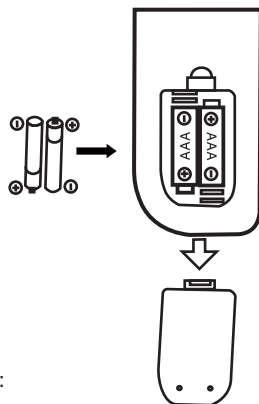


3. Replace the battery door.

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated next to the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbonzinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer' s directions.)
6. Do not dispose of batteries in fire, batteries may explode or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.

 REMOTE CONTROL WORKING RANGE

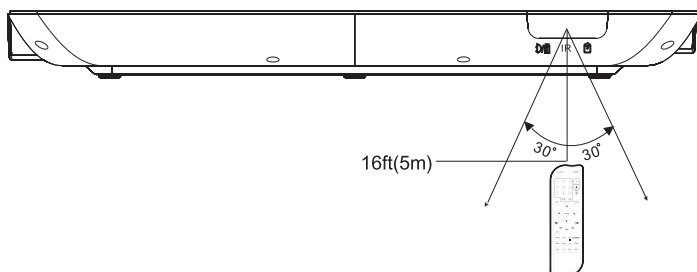

Remarks:

1. When there is an obstacle between the unit and the transmitter, the transmitter may not operate.
2. When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the remote control of the unit, the remote operation may be unstable.

POWER SOURCE

Charging by AC/DC Adapter:

1. Connect the small plug of AC/DC Adapter to the DC IN Jack on the right of unit.
2. Connect the AC/DC Adapter to the wall outlet with AC 100-240V~; 50/60Hz.
3. During charging in power on mode, the Charge Indicator will light up red. When finished, it will turn Yellow.

Note: Your battery will last longer if you follow these simple guides for caring for and storing it.

 
- A. Recharge and store the device within the temperature range of 5°C~35°C (40°F~95°F).
- B. Do not overcharge (longer than 24 hours). Excessive charging or discharging may shorten the battery's life.
- C. Battery life naturally shortens slowly over time.
- D. The rechargeable battery incorporated in this product is not replaceable.

Charging by Car Adapter:

1. Connect to the cigarette lighter socket of a vehicle with 12V battery as the figure below.

NOTE: It is NOT compatible with a vehicle with 24V battery.


2. This is a special negative ground Car Adapter. Using this Car Adapter with a plus grounded car can cause malfunction.
3. Do not plug in the Car Adapter until the car ignition is turned on.
4. Disconnect the Car Adapter from the cigarette lighter and the unit after use.

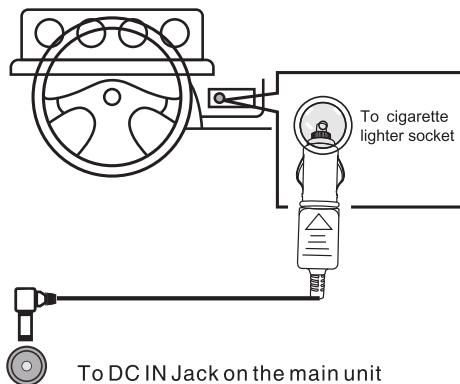


SWIVEL PANEL

The viewing angle of the swivel panel can be adjusted as below as desired:

 
①

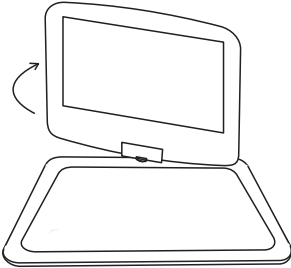


②

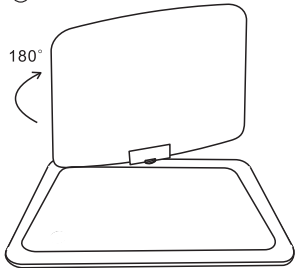 

③

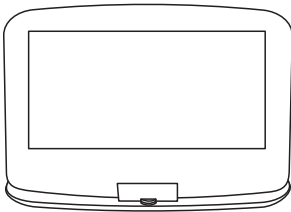 


④

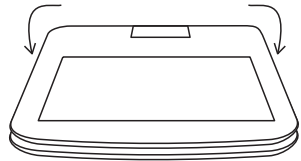 

USB OR CARD PLAYBACK

 
1. Insert the USB Device or SD/MMC memory card into the USB port/card slot as the figure below.

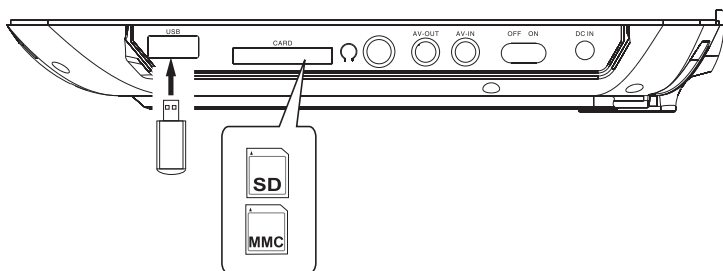

2. In power ON mode, press the **DVD/USB/SD** button, the "DISC, CARD, USB" selection window will pop up on the screen. Using the Direction buttons to select and highlight the desired source then press the **OK** button to confirm.
3. During playback:
 - ~ Press the **▶▶** or **◀◀** button repeatedly to skip tracks.
 - ~ Press the **◀◀** or **▶▶** button repeatedly to select and set the fast searching speed.
 - ~ Press the **⏸** Play/Pause button to pause, press it again to resume normal playback.

OTHER WAY TO PLAY

 Connecting to a TV or Video Player (such like DVD; VCR; DVR Players ...) with AV connection cable.

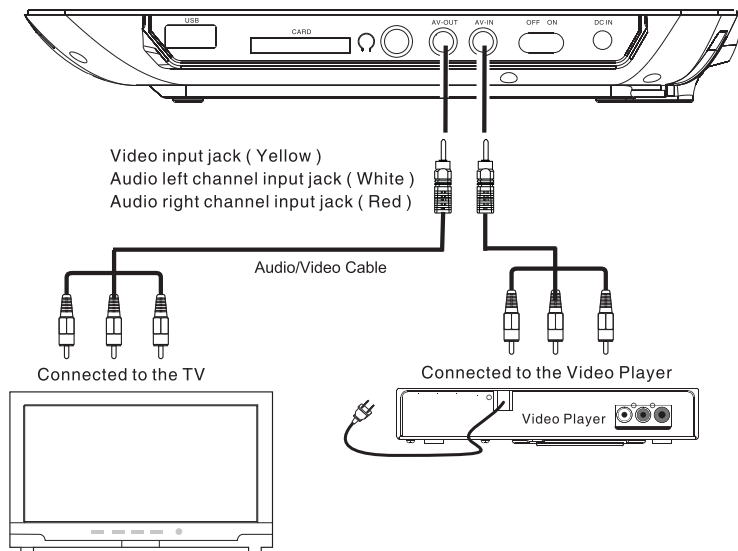


NOTE:

- The default setting of the unit is AV OUT, if connect to external video player (such like DVD; VCR; DVR Players ...), press the **SOURCE** button to set to AV IN mode ("AV IN" will appear on the screen). Press again to turn back to resume normal mode.
- Using the supplied earphone to listen privately.

SYSTEM SETUP

Setting Menus:

 Press the **SETUP** button, the setting menu will appear on the screen as below. Using the Direction ◀, ▶, ▲, ▼ buttons to select and highlight the function you need to set or reset. Press the **OK** button to enter or confirm the selection. After setting, press the **SETUP** button to save and exit.

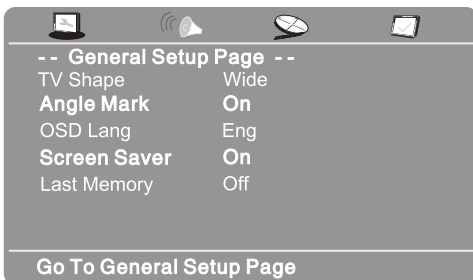

In General Setup Page:

1. If TV Shape is selected, using the Direction and **OK** buttons to set the aspect ratio to match connected TV.
2. If Angle Mark is selected, using the Direction and **OK** buttons to set it On or Off. If set to On and the multi-angles are available in playing DVD, the multi-angle logo will appear on the screen.
3. If OSD Lang (On Screen Display Language) is selected, using the Direction and **OK** buttons to set the OSD language as desired.
4. If Screen Saver is selected, using the Direction and **OK** buttons to set it On or Off. If set to On, the screen saver will come on when the unit stops or the image is paused for approximately five minutes, press anykey on DVD player or remote control to resume the playing.
5. If Last Memory is selected, using the Direction and **OK** buttons to set it On or Off. If set to On, the unit will start playback from the position where the disc was stopped last time.

In Audio Setup Page:

If Audio Setup is selected, press the **OK** button, the Downmix setting menu will appear, using the Direction and **OK** buttons to set it to Lt/Rt or Stereo.

- ~ If set to Lt/Rt, the left or right channels will play on both Left and Right Speakers.
- ~ If set to Stereo, the left channel will play on Left Speaker; the right channel will play on Right Speaker.

In Video Setup Page:

 
1. If "Picture" is selected, press **OK** button to set the panel quality such " Sharpness; Brightness; Contrast; Hue or Saturation as desired.
2. If "Picture Quality" is selected, press **OK** button to set the Sharpness; Brightness; Contrast; Gamma; Hue or Saturation of the Video input signal as desired.

CARE AND MAINTENANCE


Caring for Disc

Treat the disc carefully. Handle the disc only by its edges.

Never allow your fingers to contact with the shin, unprinted side of the disc.

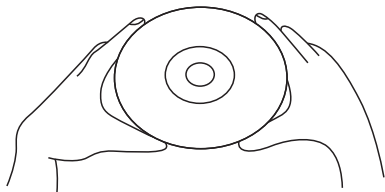

- Do not attach adhesive tape, stickers, etc. to the disc label.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
- When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.

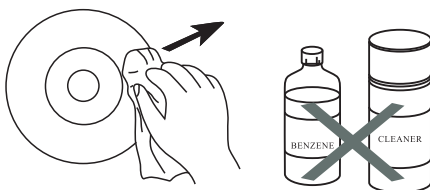 

- Discs should be stored in their cases to avoid damage after use .
- Do not expose discs to direct sunlight, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the disc.
- Do not stick or write anything on either side of the disc. Sharp writing Instruments, or the ink, may damage the surface.

Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

SPECIFICATION

Power Source: Built-in DC 12V 1A

Lithium-ion rechargeable battery, recharge by: DC 7.4V 2000mAh

Disc Compatibility: DVD/VCD/CD/CD-R/CD-RW/DVD±R/DVD±RW

Charging time: about 5 hours

Playback time: about 5 hours

ACCESSORIES

1 x User's Manual

1 x AC/DC Adaptor

1 x Remote Control

1 x Car Adaptor

1 x Earphone

1 x AV Cable

1 x Carrying Bag

1 x Car Mounting Strap

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.