



Troubleshooting

Function	Problem	Solutions
General	No power	Check the connection to the AC source. Make sure the AC source is not a switched outlet and if it is, turn the switch on. Make sure there is power to the AC outlet by plugging another item such as a lamp or fan.
	No sound	Adjust the volume knob.
Radio	The sound has interference	The unit is too close to a TV set or similar appliance. Relocate the unit further away from them or turn the other appliance off.
	Cannot listen to any station or signal is weak	Tune the station properly. If a TV is near the unit, turn it off. Rotate the unit or antenna wire for the best reception position.
Bluetooth	Will not play	Device is not paired properly; turn off Bluetooth and turn it on latter to repair.

Specifications:

- Built-in bluetooth function can stream music from hundreds bluetooth enabled devices
- AM/FM high sensitivity receivers (FM stereo)
- 3-speed Turntable record player (33½; 45; 78 RPM) with auto stop
- 3.5mm aux-in jack function with cable
- Pig tail FM antenna
- LED backlight(Amber)
- Bluetooth version: 5.3
- Output power: 2x3W
- Input: 100-240V~ , 50/60Hz 0.5A
- Output: 9.0V --- 0.8A, 7.2V ⚡

~	The symbol indicates AC voltage
---	The symbol indicates DC voltage
🏠	For indoor use only
VI	The symbol indicates energy efficiency marking
⚡	The symbol indicates polarity of d.c. power connector
📺	The symbol indicates class II equipment

