 


PROSCAN

NOSTALGIA 6 IN 1 TURNTABLE RADIO

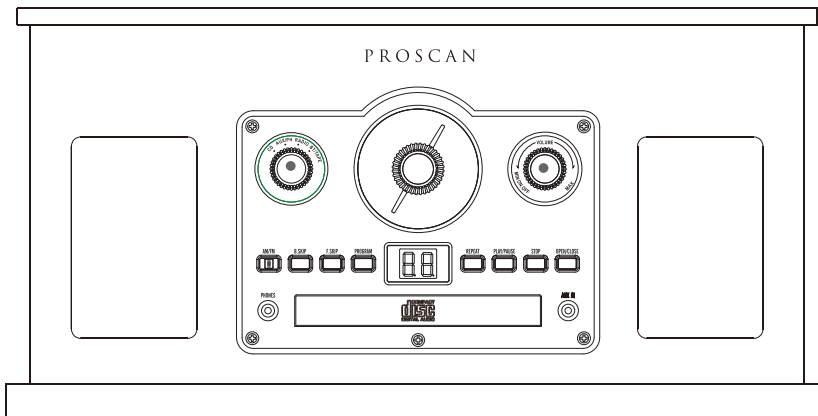



MODEL: PRCD838BT
INSTRUCTION MANUAL

PLEASE READ CAREFULLY BEFORE OPERATION

PROSCAN™ IS A REGISTERED TRADEMARK OF TECHNICOLOR USA INC. AND
USED UNDER LICENSE TO CURTIS INTERNATIONAL LTD.

IMPORTANT SAFETY INSTRUCTIONS

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

CAUTION:
THIS DIGITAL VIDEO DISC PLAYER EMPLOYS A LASER SYSTEM.
TO PREVENT DIRECT EXPOSURE TO LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. VISIBLE LASER RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO BEAM.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

INDUSTRY CANADA CONFORMITY
CAN ICES-3(B)/NMB-3(B)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARNING: The mains plug is used as disconnected device. The disconnect device shall remain readily operable. The equipment is Class II or double insulated electrical appliance.



It has been designed in such a way that it does not require a safety connection to electrical earth.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the appliance.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
Cet équipement est conforme aux limites d'exposition aux radiations de la FCC établies pour un environnement non maîtrisé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

IMPORTANT SAFETY INSTRUCTIONS

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

For example, this unit may not have the capability to be connected to an outdoor antenna.

- 1) **Read these instructions.**
All the safety and operating instructions should be read before the product is operated.
- 2) **Keep these instructions.**
The safety and operating instructions should be retained for future reference.
- 3) **Heed all warnings.**
All warnings on the product and in the operating instructions should be adhered to.
- 4) **Follow all instructions.**
All operating and use instructions should be followed.
- 5) **Do not use this apparatus near water.**
Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.
- 6) **Clean only with dry cloth.**
Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 7) **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 8) **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
- 9) **Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.**
- 10) **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
- 11) **Only use attachments/accessories specified by the manufacturer.**
- 12) **Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**

An appliance and cart combination should be moved with care. Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.
- 13) **Unplug this apparatus during lightning storms or when unused for long periods of time.**
To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 14) **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.**
- 15) **Power source**
This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.
- 16) **Power lines**
An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.



IMPORTANT SAFETY INSTRUCTIONS

17) Overloading

 
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18) Object and liquid entry

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19) Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to Provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.

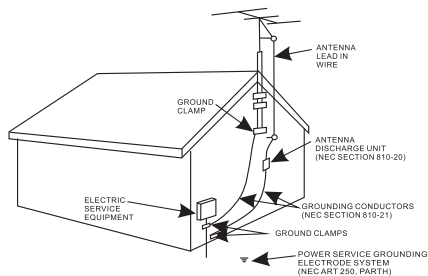

20) Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance-this indicates a need for service.

24) Note to CATV system installer

 
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTE:

Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

Location of Controls

Turntable

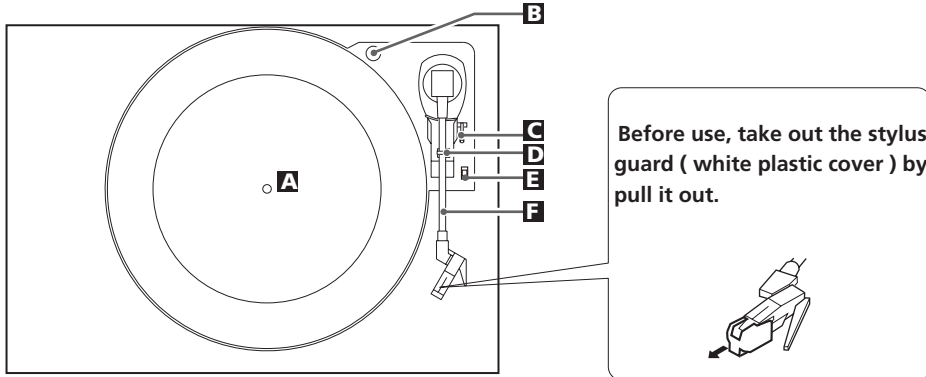

A Turntable

B Screw fixing the turntable for transportation

Before use, completely loosen the screw by turning it clockwise.



When transport the unit again, turn the screw counterclockwise to secure the turntable.

C Lever

 
D Tone arm holder

E Speed selector


F Tone arm

Location of Controls

Side View

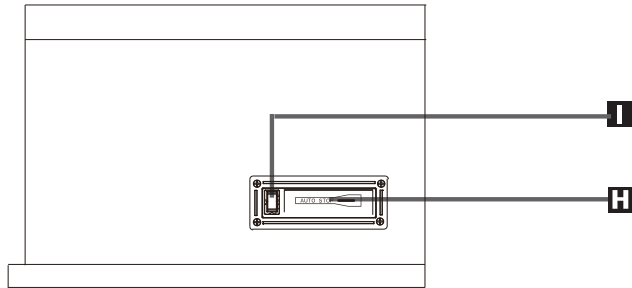


Front View

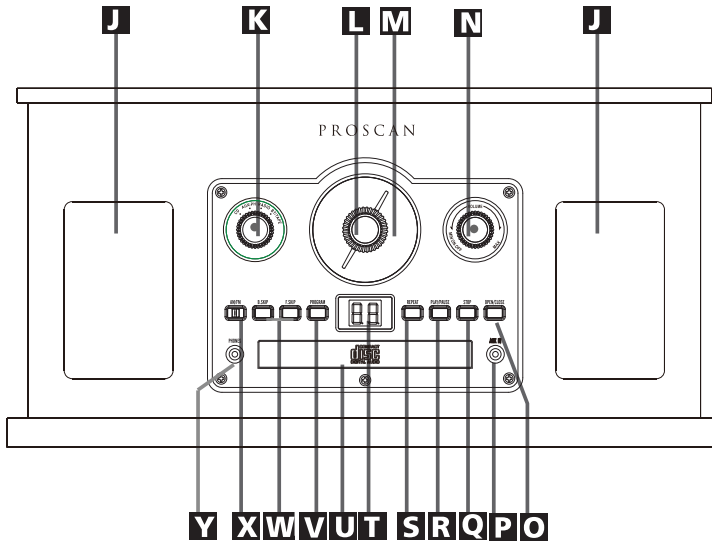 


- | | |
|-----------------------------------|-------------------------------------------------------------------|
| I Cassette | Q STOP button |
| H Eject button | R PLAY/PAUSE button |
| J Speakers | S REPEAT button |
| K Function selector | T LED display for CD |
| L Tuning knob | U Disc tray |
| M Radio dial scale | V PROGRAM button |
| N Power ON/OFF-Volume knob | W B.SKIP and F.SKIP
(Backward and Forward skip) buttons |
| O OPEN/CLOSE button | X AM/FM BAND Switch |
| P AUX IN jack | Y PHONE jack |

Location of Controls

 Back View

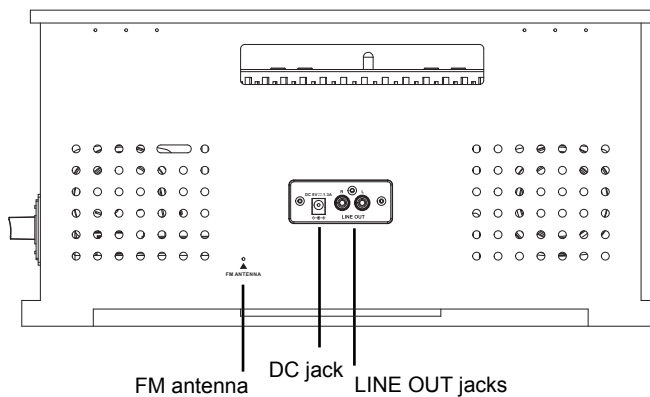

Open/close the turntable cover

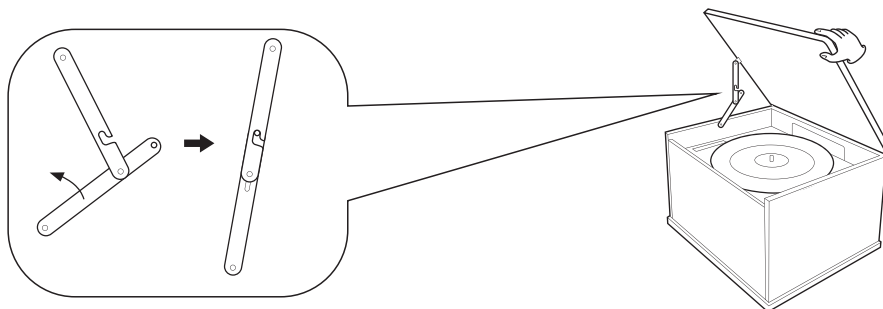 


To Open:

1. Lift the turntable cover.
2. Pull the arms to front to lock it as the figure on left.

To Close:

1. Lift the cover.
2. Push the arms to backward to release the lock.
3. Close the cover.

 Listening to a Record

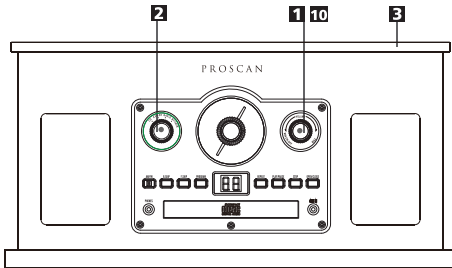


Before use, completely loosen the transportation screw by turning it clockwise.

Take out the stylus guard (white plastic cover).



- 1** Turn the Power ON/OFF-VOLUME knob clockwise until a sound "click" was heard to turn on the unit.



 
- 2** Turn the Function selector to the AUX/PH position.

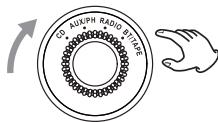

- 3** Open the cover.

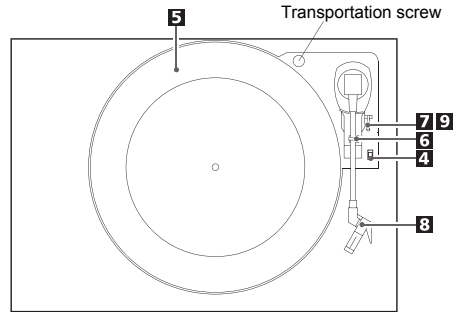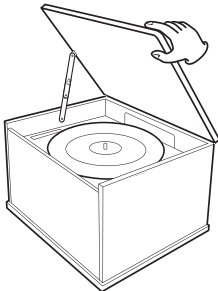  


- 4** Select the speed.

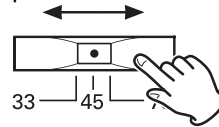 


- 5** Put the record on the turntable.

 If plays the small size 45 rpm record, insert the supplied adaptor to the center spindle before placing the record.

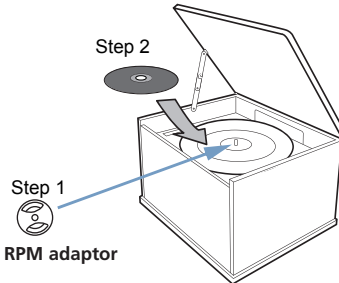


Note: This adaptor is for 45 RPM only, for the 33-3/1 and 78 RPM do not need to put this adaptor.

 - 6** Unlock the clip to release the tone arm as the figure below.

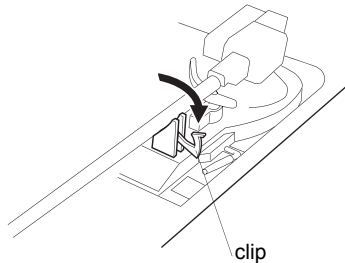


Listening to a Record

 - 7** Raise the lever to lift the tone arm.

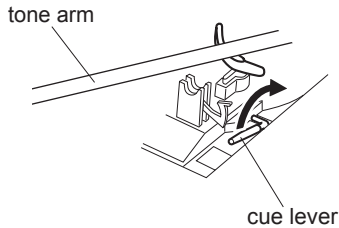


 - 10** Turn the Power ON/OFF-VOLUME knob to adjust the volume.

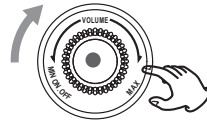

- 8** Move the tone arm to the top of the record.

 The turntable will start to turn.

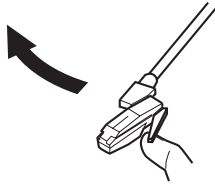


- 11** When finished listening, replace the tone arm to the rest and lock it as previous procedures. Turn the Power ON/OFF-VOLUME knob counterclockwise until a "click" sound was heard to power off the unit.


Note:

During playing, DO NOT insert the AUX cable, or it will stop playing and switch to AUX mode automatically.

 - 9** Place the tone arm to the desired point on the record by turn the lever down as the figure below.

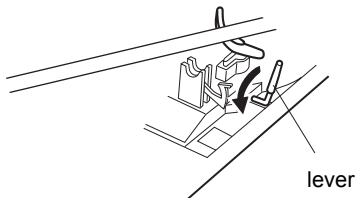

Listening to a CD

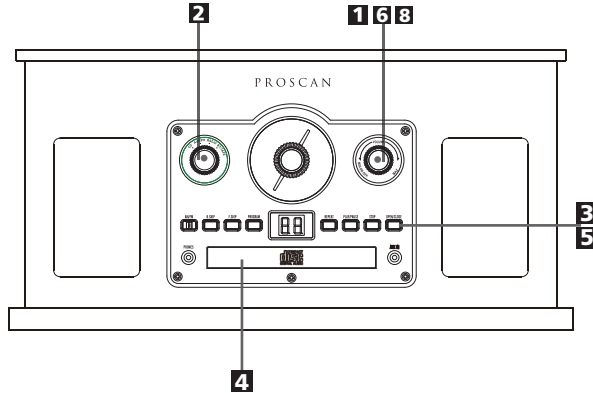 


CD Playback:


1 Turn the POWER ON/OFF-VOLUME knob clockwise until a "click" sound was heard to turn on the unit.



 2 Turn the Function selector to the CD position.




 3 Press the OPEN/CLOSE button to close the tray.




A few seconds later, the total number of tracks will appear on the LED display and play will start automatically.

 
4 Turn the POWER ON/OFF-Volume knob to adjust volume level.



 5 Press the OPEN/CLOSE button to open the disc tray.



 6 Place a disc on the tray with the printed label face up.

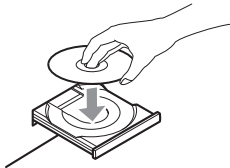

7 During playback:

- ~ Press the PLAY/PAUSE button to pause, press again to resume normal playback.
- ~ Press the B.SKIP or F.SKIP button repeatedly to skip the tracks.
- ~ Press and hold the B.SKIP or F.SKIP button to fast searching the desired section.
- ~ To stop, press the STOP button.

8 When finished listening

Turn the Power ON/OFF - VOLUME knob counterclockwise until a "click" sound was heard to power off the unit.

 
- Never place more than one disc on the tray.
- The disc must be placed on the center of the disc tray. If the disc is not correctly loaded, it may not be possible to open the tray again once it has closed.

Listening to a CD


Repeat Playback:

During playback:


1. Press the REPEAT button once, the Repeat indicator will light and blinking. The current track will playback repeatedly until the STOP button was pressed.

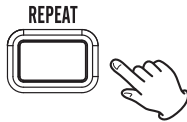

 2. Press the REPEAT button twice, the Repeat indicator will light and stop blinking. All the tracks in the current disc will playback repeatedly until the STOP button was pressed.

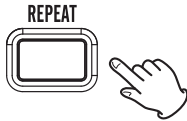

 3. To cancel the repeat function during playback, press the REPEAT button repeatedly until the Repeat indicator not light.

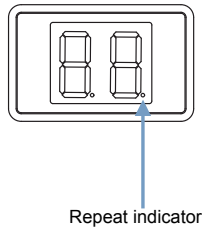


Programme Playback:

Up to 20 tracks can be programmed playback as follows:


1. In CD STOP mode, press the PROGRAM button. "01" will appear on the LED display and blinking .
2. Select the first specific track to be programmed by pressing the B.SKIP or F.SKIP buttons.
3. Press PROGRAM button again to store the selected track into the memory.
4. Repeat steps 2 and 3 until all the specific tracks stored into the memory.
5. Press the PLAY/PAUSE button to start playback.
6. To stop and cancel program playback, press the STOP button.

 Listening to the Radio

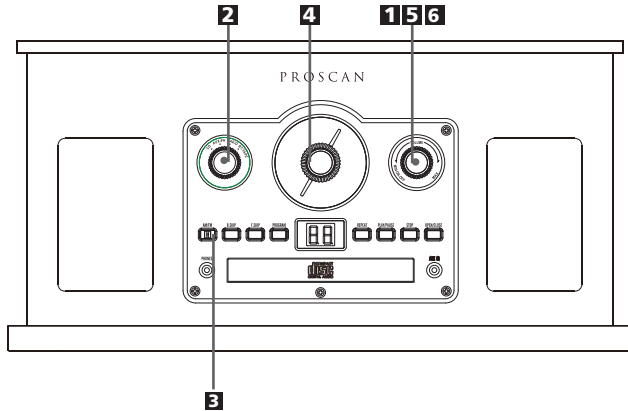



1 Turn the Power ON/OFF-VOLUME knob clockwise until a "click" sound was heard to turn on the unit.

 4 Turn the TUNING knob to receive the desired radio station.

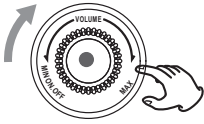

2 Turn the Function selector to the RADIO position.

  5 Turn the Power ON/OFF-VOLUME knob to adjust the volume level.

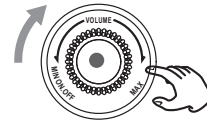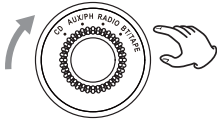

3 Slide the AM/FM band switch to AM or FM as desired.

6 When finished listening, turn the Power ON/OFF-VOLUME knob counterclockwise until a sound click was heard to power off the unit.

 


Antennas:


AM - This unit has a built in ferrite rod antenna, which provides adequate reception in most areas. If reception is weak, turn the unit to improve reception.

FM - The FM Antenna wire is for FM reception. If reception is weak, unwound and extended the wire or relocation the wire to improve the radio reception.


Listening through Bluetooth

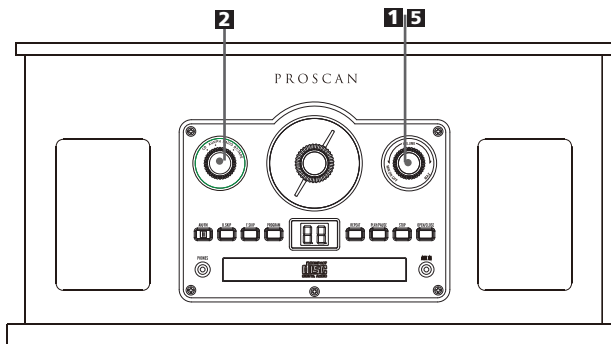

 
1 Turn the Power ON/OFF-VOLUME knob clockwise until a "click" sound was heard to turn on the unit.

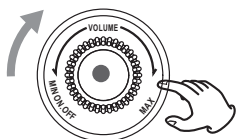

 5 Turn the Power ON/OFF-VOLUME knob to adjust volume level.

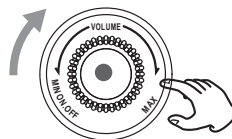

 2 Turn the Function selector to the BT/TAPE position. The unit will have a tone coming up with Dong Dong.

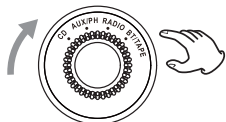

During playing:

- Press PLAY/PAUSE button to pause playback; press it again to resume.
- Press B. SKIP to play the previous track.
- Press F. SKIP to play the next track.
- Long press STOP button to disconnect the current pairing.

 
3 Activate the Bluetooth function on external Bluetooth device and try to search the unit, the pairing name will appear as "Pro PRCD838BT".

4 Select it and make connection, an indication tone will be heard when paired. Control the music playing on your external device.


NOTE:

1. Some of music control buttons (i.e., PROGRAM, REPEAT and STOP button) are not working under Bluetooth mode.
2. During playing, DO NOT insert the cassette tape, or the unit will switch to Cassette tape mode and the Bluetooth connection will get disconnected automatically.
3. The unit will search and connect last paired device automatically when both of them are in Bluetooth mode and working range.


Listening to a Cassette Tape

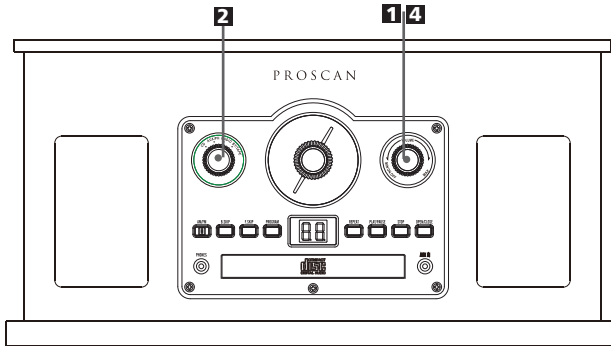

 
1 Turn the Power ON/OFF-VOLUME knob clockwise until a "click" sound was heard to turn on the unit.

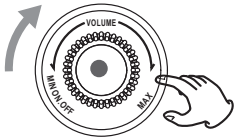

 
4 Turn the Power ON/OFF-VOLUME knob to adjust volume level.

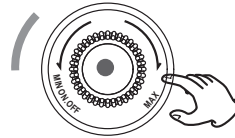

 2 Turn the Function selector to the BT/TAPE position.

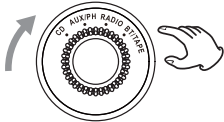

5 Fast forward

 

To fast forward to desired point, press the Eject button to half position. When finished, press the button again to resume normal playback.

3 Insert a pre-recorded cassette tape into the cassette compartment until the Eject button ejected. Play will start automatically.



Note: When finish winding, please remember press the Eject button to stop winding and take out the tape. Otherwise, the unit will maintains on the winding mode.

6 To stop playback and eject the tape




When finished listening, press the Eject button to stop playback and take out the tape. Turn the Power ON/OFF-VOLUME button counterclockwise until a "Click" sound was heard to power off the unit.

Others Connection

AUX IN:

 1. Connected the external audio device to the unit by an audio connection cable with 3.5mm stereo mini jacks
 - ~ Insert one end to the Phone; Line Out or AUX Out Jack on the external audio device.
 - ~ Insert the other end to the AUX IN jack on the front of unit.

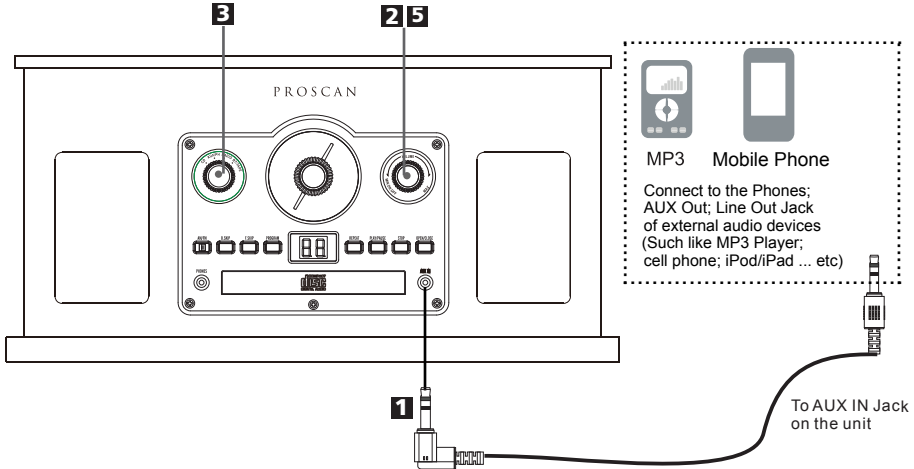


2. Turn the Power ON/OFF - VOLUME knob clockwise until a "click" sound was heard to turn on the unit.
3. Turn the Function selector to the AUX/PH position.
4. Play the music on the connected external audio device as usual.
5. When finished listening, turn the Power ON/OFF - VOLUME knob counterclockwise until a "click" sound was heard to power off the unit.

Notes:

- Make sure the sound output level of the connected external audio device is in high level.

LINE OUT:

 1. Connected the external audio device by an audio connection cable with RCA plugs
 - ~ Insert one end to the Line IN or AUX IN jacks on the external audio Amplifier.
 - ~ Insert the other end to the LINE OUT jacks on the rear of unit.

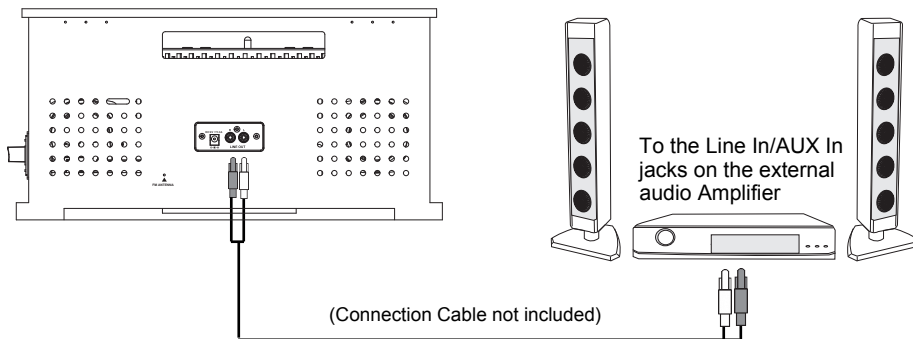

2. Turn the Power ON/OFF - VOLUME knob clockwise until a "click" sound was heard to turn on the unit.
3. Play the music/radio as previous procedures. Sound will hearing from the connected external audio Amplifier system. Adjust the volume level by the volume control on the connected external Amplifier.
(If do not want to hearing the sound from this unit at the same time, turn the Power ON/ OFF - VOLUME knob to minimum position).
4. When finished listening, turn the Power ON/OFF - VOLUME knob counterclockwise until a "click" sound was heard to power off the unit.

Phones jack:

For private listening, connect a headphone / earphone (not included) into the PHONE jack on the front of unit. The speakers will be disconnected when headphone / earphone is inserted into the jack.

About Disc

Discs which can be played on this unit:

- Conventional audio CDs bearing the CD-DA logo on the label:



- Properly finalized CD-R and CD-RW discs.

- Always place the disc on the disc tray with the label side up. (Compact discs can be played or recorded only on one side.)
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.



How to remove the disc



How to hold the disc

- Should the disc become dirty, wipe the surface radially (from the center hole outward towards the outer edge) with a soft, dry cloth:



- Never use such chemicals as record sprays, antistatic sprays or fluid, benzene or thinner to clean the discs. Such chemicals will do irreparable damage to the disc's plastic surface.
- Discs should be returned to their cases after use to avoid dust and scratches that could cause the laser pickup to "skip."

- Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperatures will warp the disc.

- Do not play any disc that is warped, deformed or damaged. Playing such discs may cause irreparable harm to the playing mechanisms.

- CD-R and CD-RW discs are more sensitive to the effects of heat and ultraviolet rays than ordinary CDs. It is important that they are not stored in a location where direct sunlight will fall on them, and away from sources of heat such as radiators or heat-generating electrical devices.

- Printable CD-R and CD-RW discs aren't recommended, as the label side might be sticky and damage the unit.

- Do not stick papers or protective sheets on the discs and do not use any protective coating spray.

- Use a soft oil-based felt-tipped pen to write the information on the label side. Never use a ball-point or hard-tipped pen, as this may cause damage to the recorded side.

- Never use a stabilizer. Using commercially available CD stabilizers with this unit will damage the mechanisms and cause them to malfunction.

- Do not use CDs with an irregular shape (octagonal, heart shaped, business card size, etc.). CDs of this sort can damage the unit:



- If you are in any doubt as to the care and handling of a CDR/ CD-RW disc, read the precautions supplied with the disc, or contact the disc manufacturer directly.

 
Cassette Tape

Tape Selection

Metal and chrome (cobalt) tapes have identification holes.

Tape Handling

Use your finger or a pencil to turn the cassette's hub and take up any slack tape.

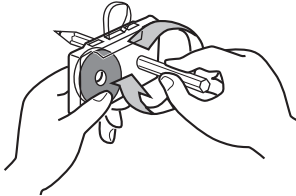

- Avoid touching the tape. Fingerprints attract dust and dirt.
- Avoid dropping or subjecting cassettes to excessive shocks.
- As C-120 tapes are physically weak and could become entangled in the transport mechanism, do not use them.

Do not store tapes in the following places:

On top of heaters, exposed to direct sunlight or in any other places with high temperatures.

Near speakers, on TV sets or amplifiers or where they would be exposed to strong magnetic fields.

 
Where humidity is high and in dirty, dusty places.

Head Maintenance

The head and tape path should be cleaned and demagnetized periodically. Please use a cassette type head cleaning tape and demagnetizer. For specific details on the proper use of either item, please read each item's instruction manual.

Records Handling

- Do not touch the record's grooves. Only handle records, by the edges or the label. Make sure your hands are clean. Skin oils from even clean hands can leave a residue on the record surface that will gradually deteriorate the quality of your record.

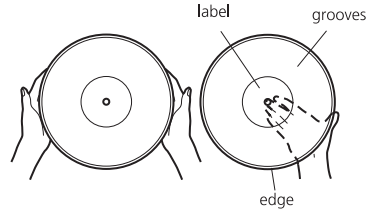


- Keep your records away from dust. Keep them in a cool, dry place.
- To avoid dust and scratches, keep records in their sleeves and jackets when not in use.
- Store records upright on their edges. Records stored horizontally will eventually bend and warp.
- Do not expose records to direct sunlight or high humidity and temperature. Long exposure to high temperatures will warp the record.
- Do not store your records in the trunk of your car. The temperature in a closed trunk can ruin your collection.
- Store records in an area with a stable temperature and low humidity.
- Should the record become dirty, gently wipe the surface in a circular motion, using a soft anti-static cloth.




How to replace the stylus

Replace the stylus

 1. Use a screwdriver to push the stylus off then pull it out as the figures below:

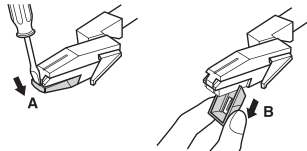

 2. Install the new stylus as figures below:

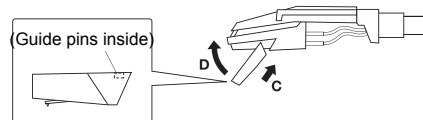

Troubleshooting

If you experience any problems with the unit, please take a moment to look through this chart and see if you can solve the problem yourself before you call your dealer.

No power

- Check the connection of AC wall outlet.

No sound.

- Raising the volume level by turn the Power ON/OFF - VOLUME knob clockwise.

Noisy sound:

- The unit is too close to a TV set or similar appliances.
Relocate the unit.

Radio:

Can not listen to any station, or signal is too weak.

- Tune the station properly.
- The Function selector is in wrong position, turn it to RADIO position.
- Relocation the unit.

Turntable:

Not playing or sound distortion

- The Function selector is in wrong position, turn it to AUX/PH position.
- Loosen the screw, and take out the stylus guard.
(The stylus guard is a white plastic cover that protects the stylus during transportation.)
- Select the correct playback speed.

CD Player Not playing

- The Function selector is in wrong position, turn to CD position.
- Load the disc with the label side face up.
- If the disc is dirty, clean the surface of the disc.
- Try again with another disc.

Cassette Tape Player Not playing

- The tape has not insert completely. Insert the tape tightly until the Eject button is ejected.
- The Function selector is in wrong position. Turn it to BT/TAPE position.

Bluetooth Not playing

- The Function selector is in wrong position. Turn it to BT/TAPE position.
- The external BT device had NOT paired to the unit
- The external BT device too far from the unit
- If connection fails or the pairing name does not appear, please restart the unit and switch to Bluetooth mode and try to connect again as the instruction stated in this manual.

Sound is distorted or noisy


- Clean and demagnetize the heads.
If the unit is halt or abnormal operation, unplug the power cord from the wall outlet and plug it again.

Maintenance:

Always keep the turntable clean. If the surface of the unit gets dirty, wipe with a soft cloth or use a diluted mild liquid soap. Be sure to remove any excess liquid completely. Do not use thinner, benzine or alcohol as they may damage the surface of the unit. Allow the surface of the unit to dry completely before using.

Specifications

General

Power Source.....DC = 9V, 1.3A 
Power Consumption..... 11.7 W

Audio:

Impedance of speakers: 2 x 3W; 30hm

Radio:

Frequency range (FM)..... 88MHz~108MHz

Frequency range (AM)..... 530 kHz to 1710 kHz

Cassette:

Track System..... 4 track, stereo

Tape Speed 4.8 cm/sec

Wow and Flutter..... 0.15%(WRMS)

Frequency Response..... 100-8,000Hz

Signal-to-Noise Ratio..... 35dB

Bluetooth:

Working range about 32 feet

Turntable:

Motor..... DC servo motor

Drive System..... Belt Drive

Speed..... 33-1/3 rpm, 45 rpm, 78 rpm

Wow and Flutter..... less than 0.15% (WDT)


Cartridge Type..... Ceramic Stereo Cartridge

Stylus..... CSC-015

Accessories:

- 1 x User's manual
- 1 x Power Adapter
- 1 x 45 rpm Adaptor
- 1 x AUX IN Cable

**SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE
WITHOUT NOTICE**

 **Bluetooth**® is a trademark on a registered trademark of Bluetooth SIG Inc. All other trademarks and trade names are those of their respective owners.

For service assistance and product information, please call: 1-800-968-9853.

Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

To make a warranty claim, please email support@curtiscs.com or call 1-800- 968-9853.

90 Day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.